

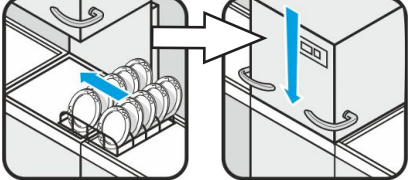
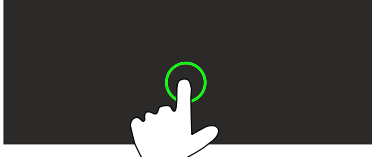
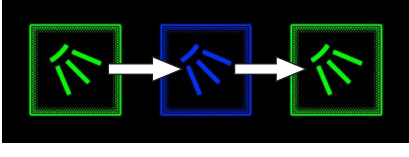
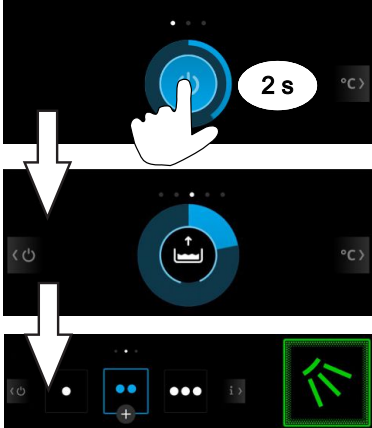
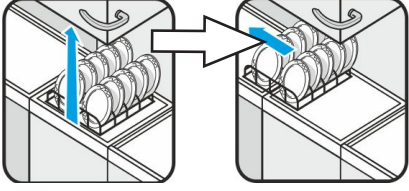
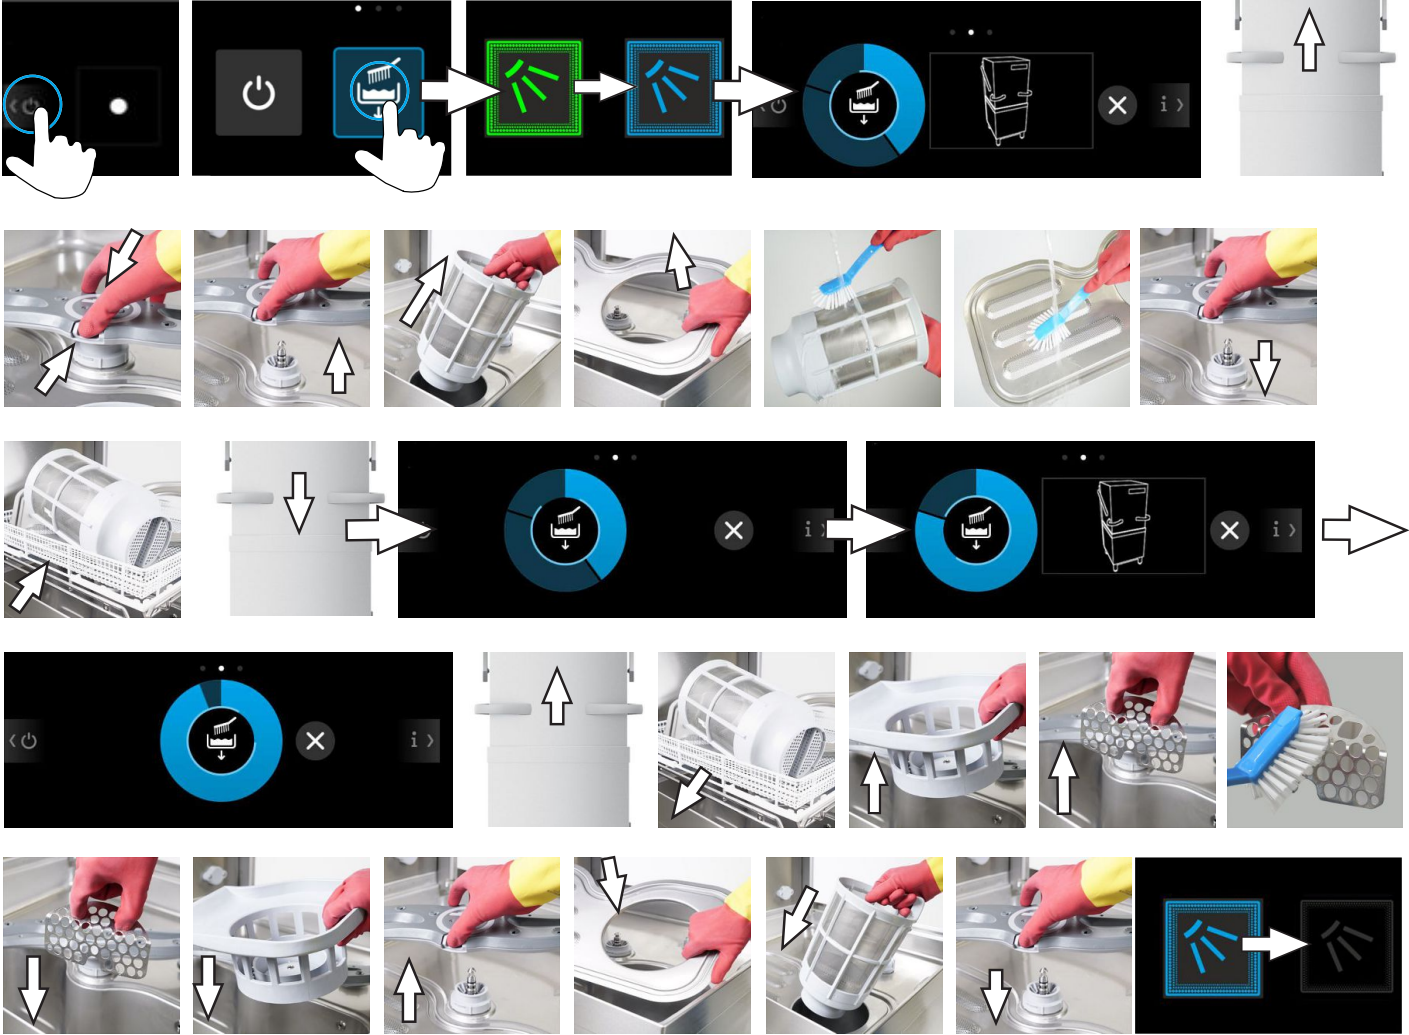


	Switch on the warewasher	Wash
	<p>1</p> 	<p>1</p> 
	<p>2</p> 	<p>2</p> 
	<p>3</p> 	<p>3</p> 

Switch off and clean the warewasher



The sequence includes: touching the power button on the touchscreen; touching the wash button; navigating through the touchscreen menu; opening the door; cleaning the spray arm; cleaning the filter; cleaning the door gasket; cleaning the salt tray; cleaning the detergent tray; and finally touching the wash button again to complete the cycle.

Clean the upper and lower wash field



Clean the upper and lower wash field bearing



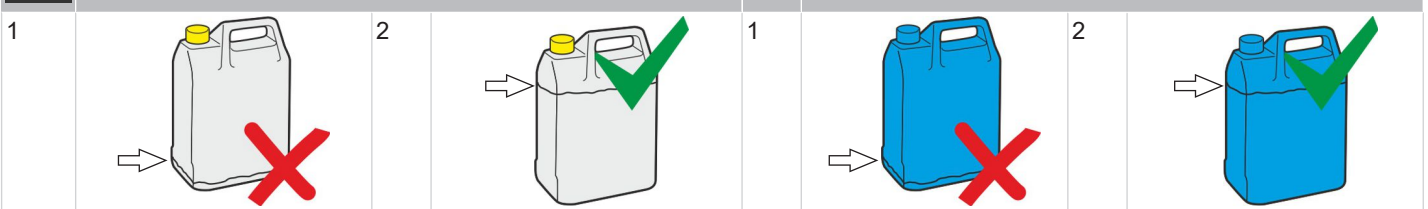
Refill the salt



Replace the detergent / defoamer container



Replace rinse aid container



More information: See operating instructions
www.winterhalter.com/download-centre