
Shaft Type Ø30mm Incremental Rotary Encoder

■ Features

- Ø30mm of miniature shaft type rotary encoder
- Easy installation at narrow space
- Low moment of inertia
- Power supply: 5VDC, 12-24VDC ±5%
- Various output types





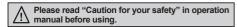

Ordering Information

E30S	4 -	- 3000 -	- 3 -	- N -	- 24 -	-
Series	Shaft diameter	Pulses/revolution	Output phase	Control output	Power supply	Cable
Ø30mm, shaft type	Ø4mm	100, 200, 360, 500, 1000, 1024, 3000	3: A, B, Z 6: A, Ā, B, B̄, Z, Z̄	T: Totem pole output N: NPN open collector output V: Voltage output L: Line driver output (※)		No mark : axial cable type C: axial cable connector type

*The power of Line driver is only for 5VDC.

Specifications

Item			Shaft type Ø30mm Incremental Rotary Encoder			
Resolution (PPR)*1			100, 200, 360, 500, 1000, 1024, 3000			
ctrical specification	Output phase		A, B, Z phase (line driver: A, \overline{A} , B, \overline{B} , Z, \overline{Z} phase)			
	Phase difference of output		Phase difference between A and B: $\frac{T}{4} \pm \frac{T}{8}$ (T=1 cycle of A phase)			
	Control	Totem pole output	• [Low] - Load current: max. 30mA, residual voltage: max. 0.4VDC • [High] - Load current: max. 10mA, Output voltage (power voltage 5VDC Output voltage (power voltage 12-24VDC): min. (power voltage-3.0)VDC Output voltage (power voltage 12-24VDC): min. (power voltage-3.0)VDC			
	output	NPN open collector output	Load current: max. 30mA, residual voltage: max. 0.4VDC			
	·	Voltage output	Load current: max. 10mA, residual voltage: max. 0.4VDC==			
		Line driver output	• [Low] - Load current: max. 20mA, residual voltage: max. 0.5VDC== • [High] - Load current: max20mA, output voltage: min. 2.5VDC==			
		Totem pole output	Max. 1μs (cable length: 2m, I sink = 20mA)			
	Response	NPN open collector output				
	time (rise/fall)	Voltage output	Max. 1μs (5VDC: output resistance 820Ω), Max. 2μs (12-24VDC: output resistance 4.7kΩ) (cable length: 2m, I sink = 20mA)			
-		Line driver output	Max. 0.5μs (cable length: 2m, I sink = 20mA)			
	Max. respo	nse frequency	300kHz			
	Power supply		• 5VDC== ±5% (ripple P-P: max. 5%) • 12-24VDC== ±5% (ripple P-P: max. 5%)			
	Current consumption		Max. 80mA (disconnection of the load), Line driver output: max. 50mA (disconnection of the load)			
	Insulation r	esistance	Over 100MΩ (at 500VDC megger between all terminals and case)			
	Dielectric s	trength	750VAC 50/60Hz for 1 minute (between all terminals and case)			
	Connection		Axial cable type, axial cable connector type			
ন্ত <u>চ</u> Starting torque		que	Max. 20gf·cm (0.002N·m)			
anic	Moment of	inertia	Max. 20g·cm² (2×10 ⁻⁶ kg·m²)			
Sign	Starting torque Moment of inertia Shaft loading Max. allowable revolution ^{*2}		Radial: max. 2kgf, Thrust: max. 1kgf			
Spe	Max. allow	able revolution ^{*2}	5,000rpm			
Vibration			1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours			
Shock			Approx. max. 50G			
Envi	ronmont	Ambient temperature	-10 to 70°C, storage: -25 to 85°C			
Environment		Ambient humidity	35 to 85%RH, storage: 35 to 90%RH			
Protection structure			IP50 (IEC standard)			
Cable			Ø5mm, 5-wire (line driver: 8-wire), 2m, Shield cable (AWG24, core diameter: 0.08mm, number of cores: 40, insulator out diameter: Ø1mm)			
Accessory			Ø4mm coupling			
Approval			C € (except line driver output)			
Unit weight			Approx. 80g			

 $[\]times$ 1: Not indicated resolutions are customizable.

F-16 Autonics


^{*}Environment resistance is rated at no freezing or condensation.

^{%2:} Make sure that max. response revolution should be lower than or equal to max. allowable revolution when selecting the resolution.

[[]Max. response revolution (rpm)= $\frac{\text{Max. response frequency}}{\text{Resolution}} \times 60 \text{ sec}]$

Incremental Ø30mm Shaft Type


Control Output Diagram

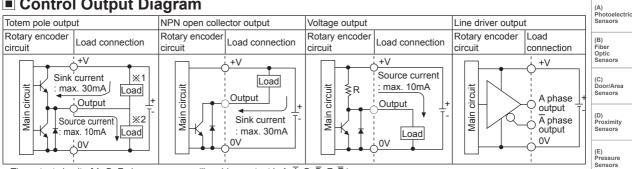


- The output circuit of A, B, Z phase are same. (line driver output is A, A, B, B, Z, Z)
- Totem pole output type can be used for NPN open collector output type (*1) or Voltage output type (*2).

Output Waveform

© Totem pole output / NPN open collector output / Voltage output

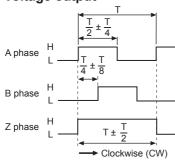


Line driver output

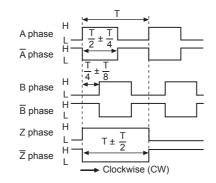




Connections

- Axial cable type
 - Totem pole output / NPN open collector output / Voltage output

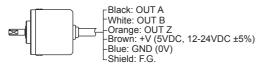

• Line driver output

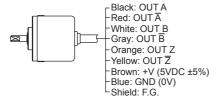

Axial cable connector type

 Totem pole output / Line driver output NPN open collector output / Voltage output





Totem po NPN ope Voltage o	n collector	output	Line driver output		
Pin No.	Function	Cable color	Pin No.	Function	Cable color
1	OUT A	Black	1	OUTA	Black
2	OUT B	White	2	OUTĀ	Red
3	OUT Z	Orange	3	+V	Brown
4	+V	Brown	4	GND	Blue
(5)	GND	Blue	(5)	OUT B	White
6	F.G.	Shield	6	OUT B	Gray
			7	OUT Z	Orange
			8	OUT Z	Yellow
			9	F.G.	Shield

XF.G. (field ground): It should be grounded separately.

※Unused wires must be insulated.

**The metal case and shield wire of encoder should be grounded (F.G.).

XDo not apply tensile strength over 30N to the cable.

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(I) SSRs / Power Controllers

(J) Counters

(N) Display Units

(P) Switching Mode Powe Supplies


(Q) Stepper Motors


(R) Graphic/ Logic Panels

Autonics

Dimensions

O Axial cable type

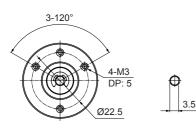

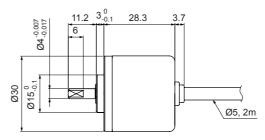



Cable for axial cable type

Ø5, 5-wire (line driver output: 8-wire), 2m, Shield cable

(unit: mm)

O Axial cable connector type

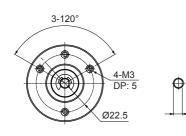

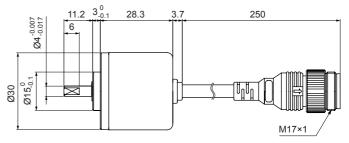


Cable for axial cable connector type

Ø5, 5-wire (line driver output: 8-wire), 250mm, Shield cable

*Connector cable is sold separately and refer to page G-10 for specifications.

© Coupling (E30S)

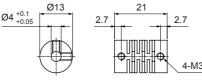

- Parallel misalignment: max. 0.25mm
- Angular misalignment: max. 5°
- End-play: max. 0.5mm

XIt must not use larger shaft loading than specification.

- XDo not put strong impact when insert a coupling into shaft.
 - Failure to follow this instruction may result in product damage.
- *Fix the unit or a coupling by a wrench under 0.15N m of torque.
- *When you install this unit, if eccentricity and defelction angle are larger, it may shorten the life cycle of this unit.
- *For parallel misalignment, angular misalignment, end-play terms, refer to page F-87.
- **For flexible coupling (ERB series) information, refer to page F-80.

F-18 Autonics