 


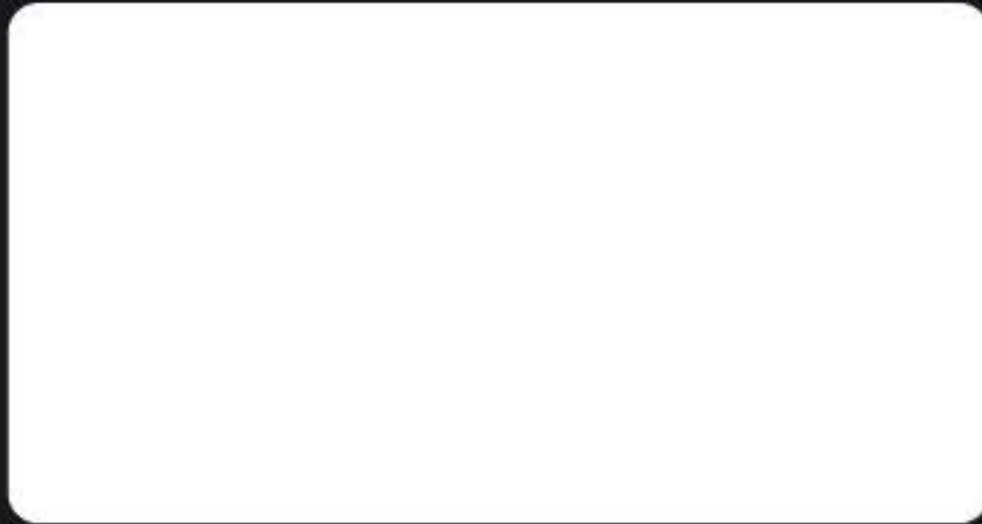

PATRA

AURA

208, 7th Floor, 208 Building, Wireless Road,
Lumpini, Pathumwan, Bangkok 10330, Thailand
Tel : +662 651 5625 Fax : +662 651 5653
info@patraporcelain.com www.patraporcelain.com

Hotel & Restaurant

Measurement

D = Outside Diameter mm
d = Inside Diameter mm
L = Major axis mm
S = Minor axis mm

H = Height mm
cc = centiliter cc



Type of Strainer	Section & Elevation of Pot	Reference mark
Strainer Type		
No Strainer		

CONTENT

AURA Collection by PATRA

Aura Narrative	02
Presentaion Collection	03
Modern Collection	05
Banquet Collection	07
Flat Rim Collection	09
Thai Collection	11
Chinese Collection	15
Gourmet Collection	20
Square/Rectangular Collection	23
Holloware & Accessories	26
Sushi Stripe	30
Sushi Ginkgo	31
Sushi Zen	32
Aura System	37
Aura Profile	41
Measurement Guide	48

AURA

Modern cuisine has changed our way of using & handling tableware, our travels & visual references have introduced us to new ways of dining. From the traditional Western dining, where vessels are placed on the table; to the East, where vessels are held in the hand while eating, we have adapted a more "tactile" & "visual" approach to the way we dine.

Aura for "Chefs"

The concept is based on vessels which are related in "feel" but do not comply with the traditional "dining set".

The pieces should be used to create a sense of progression in the dining, from course to course. They are the background & reference points of what we are eating.

The idea is to create a changing "tablescape" consisting of heights & volumes, inspired by cross culture of shapes & vessels, both historic & modern.

The Aura shapes are created for the presentation of food, the vessels are combined to enhance & encourage our dining experience.

The shapes were created to eliminate the superfluous decoration of food and to allow chefs to use the pieces as frames for their presentation.

The design details, size of the wings, sizes, heights & depths of each piece are purposely made to focus the eye on the food.



SOUP CUP 2 HANDLES 312207 SET

SOUP CUP 2 HANDLES 432205

L183, S103.9, H63.9, 300 CC.

SAUCER 18 CM. 432091

D177.5, H22



BREAKFAST CUP 432097 SET

BREAKFAST CUP 432095

L133.5, S103.9, H63.9, 300 CC.

SAUCER 18 CM. 432091

D177.5, H22



TEA/COFFEE CUP 432017 SET

COFFEE CUP 432015

L105, S89.1, H74.3, 230 CC.

SAUCER 16 CM. 432066

D161.3, H25.8



ESPRESSO CUP 432107 SET

COFFEE CUP 432105

L76, S55.6, H59.8, 90 CC.

SAUCER 12 CM. 432104

D118.2, H19.5



TEA POT 436042 SET

TEA POT 436040

L184, S116, H100, 450 CC. ○

COFFEE POT LID 436046

D100, H36



CREAMER 436194

L106, S72, H73, 150 CC.



RECTANGULAR TRAY
26.5 CM. 434076
L264.5, S137.5, H13



RECTANGULAR TRAY
18.4 CM. 434068
L184, S137.5, H13



SQUARE TRAY 13 CM.
434963
130X130, H13



OVAL PLATTER 37.5 CM.
434837
L375, S286, H40

OVAL PLATTER 25.7 CM.
434825
L257, S197, H31



OVAL PLATE 15.7 CM.
434815
L157, S119, H17.5



TEA CUP 432032 SET
TEA CUP 432030
L128.5, S104.3, H56, 230 CC.
SAUCER 16.5 CM. 432036
D163.7, H22



COFFEE CUP 432037 SET
COFFEE CUP 432035
L119, S88.3, H75, 250 CC.
SAUCER 16.5 CM. 432036
D163.7, H22



DEMITASSE CUP 432112 SET
DEMITASSE CUP 432110
L88, S65.4, H40, 70 CC.
SAUCER 12.5 CM. 432111
D124.2, H21



SOUP CUP 2 HANDLES 432202 SET
SOUP CUP 2 HANDLES 432200
L174, S113.8, H71, 400 CC.
SAUCER 18 CM. 432191
D178, H25



BREAKFAST CUP 432192 SET
BREAKFAST CUP 432190
L144.5, S113.8, H71, 400 CC.
SAUCER 18 CM. 432191
D178, H25

AURA PRESENTATION COLLECTION





PLATE 30 CM. 312430
D298.9, d240, H27.6



PLATE 30 CM. 311630
D299.8, d160, H31.7



PLATE 30 CM. 311730
D297.7, d170, H28.5



PLATE 30 CM. 311230
D302.9, d120, H35.1



PASTA PLATE 30 CM.
311430
D299.3, d140, H43.5



PLATE 28 CM. 430128
D279.9, H33.2



PLATE 20 CM. 430120
D197.7, H27.4



PLATE 16 CM. 430166
D159.2, H22.9



SOUP PASTA 22.5 CM.
430322
D225.5, H42.6, 600 CC



GOURMET PLATE 30 CM.
430232 SET



GOURMET PLATE 30 CM.
430230
D295.6, H51.6, 450 CC



GOURMET PLATE 30 CM.
LID 430231
D159.2, H69



SQUARE TRAY 32 CM.
434932
32X32, H15.1



 
SQUARE TRAY 29 CM.
434929
29X29, H15



SQUARE TRAY 26 CM.
434926
26X26, H15



SQUARE TRAY 24 CM.
434974
24X24, H15



SQUARE TRAY 22 CM.
434972
22X22, H15



SQUARE TRAY 16 CM.
434916
16X16, H15

TRAY 14.5 CM. 434914
14.5X14.5, H15



PLATE 27 CM. 431027
D266, H25.5



PLATE 20 CM. 431020
D199.1, H21.8
PLATE 17 CM. 431017
D168.6, H19



RIM PLATE 28.6 CM. 431078
D284.5, H30.4
RIM PLATE 27 CM. 431077
D272.5, H26.5



RIM PLATE 24 CM. 431074
D240.2, H25.7
RIM PLATE 22 CM. 431072
D220.4, H22.7



FLARED BOWL 26 CM. 433076
D257.1, H67.9, 520CC.



SOUP PLATE 24.5 CM. 431224
D243.7, H43.5, 435CC.



SOUP CEREAL BOWL 18 CM. 430318
D178.8, H53.4, 330CC.



RIM PLATE 17 CM. 431067
D171.2, H19.4

AURA MODERN COLLECTION





PLATE 30 CM. 311630
D299.8, d160, H31.7



PLATE 28 CM. 310128
D279.9, H33.2

PLATE 24 CM. 310124
D239.3, H28.2



PLATE 20 CM. 310120
D197.7, H27.4

PLATE 16 CM. 310116
D159.2, H22.9



GOURMET PLATE 30 CM. 310232 SET

GOURMET PLATE 310230
D295.6, H51.6, 450 CC

GOURMET LID 310231
D159.2, H69



FLARED BOWL 29.5 CM. 303079
D293.9, H72.4, 800CC.



FLARED BOWL 26 CM. 301272 SET

FLARED BOWL 303076
D257.1, H67.9, 520CC.

FLARED BOWL LID 301271
D186, H71



SOUP PLATE 24.5 CM. 311224
D243.7, H43.5, 435CC.



SOUP CEREAL BOWL 18 CM. 310318
D178.8, H53.4, 330CC.



SHOW PLATE & COUP PLATE 31 CM. 450181
D310.8, H40



SHOW PLATE 31 CM. 451081
D310, d158, H34



SHOW PLATE & RIM PLATE 31 CM. 451031
D310, d120, H34



SHOW PLATE & DEEP PLATE 31 CM. 450231
D310, d140, H50



RIM PLATE 30 CM. 432480
D298.9, d240, H27.6



PASTA PLATE 30 CM. 431430
D299.3, d140, H43.5



PLATE 30 CM. 431730
D297.7, d170, H28.5



RIM PLATE 30 CM. 431280
D302.9, d120, H35.1



RIM PLATE 30 CM. 431680
D299.8, d160, H31.7

AURA

BANQUET COLLECTION





PLATE 30 CM. 312430
D298.9, d240, H27.6



RIM PLATE 28.6 CM. 311078
D284.5, H30.4
RIM PLATE 27 CM. 311077
D272.5, H26.5
RIM PLATE 26 CM. 311076
D260, H29



RIM PLATE 24 CM. 311074
D240.2, H25.7
RIM PLATE 22 CM. 311072
D220.4, H22.7



RIM PLATE 17 CM. 311067
D171.2, H19.4
RIM PLATE 15 CM. 311065
D149.2, H18



SOUP PASTA 24 CM. 310324
D238.3, H46.3, 800 CC.



SOUP PASTA 22.5 CM. 310322
D225.5, H42.6, 600 CC.



CEREAL BOWL 18 CM. 313168
D178.2, H65.4, 700 CC.
CEREAL BOWL 16 CM. 313166
D162.7, H69.3, 600 CC.



FRUIT BOWL 14 CM. 310314
D140.3, H49.6, 210 CC.



EGG PLATE 12.5 CM. 316506
D119.6, H21.5

AURA PROFILE





COFFEE CUP STACKABLE 922002 SET

COFFEE CUP 922000
L100, 578, H70, 200 CC.

SAUCER 16 CM. 922001
D160, H21



MUG STACKABLE 922410
L103, 578, H85, 260 CC.

SAUCER 16 CM. 922001
D160, H21



SOUP CUP2 HANDLES 922242 SET

SOUP CUP2 HANDLES 922240
L150, 598, H55, 260CC.

SAUCER 16 CM. 922001
D160, H21



AURA

FLAT RIM COLLECTION





PLATE 30 CM. 311730
D297.7, d170, H28.5



PLATE 27 CM. 311027
D266, H25.5



PLATE 24 CM. 311024
D237.8, H25.8



PLATE 20 CM. 311020
D199.1, H21.8



PLATE 17 CM. 311017
D168.6, H19



FLARED BOWL 30 CM. 300230
D297.3, H67.7, 400 CC.



FLARED BOWL 21 CM. 300221
D210.8, H44.9, 120 CC.



BOWL STACKABLE 12 CM. 923112
D120, H40, 250CC.



SQUARE BOWL 11.8 CM. 924911
118 X 118, H43, 320CC.



COFFEE CUP 922042 SET
COFFEE CUP 922040
L123, S100, H67, 270CC.
SAUCER 16 CM. 312006
D162.2, H23.7



MUG 922414
L115.5, S86, H97, 300CC.



ESPRESSO CUP 922112 SET
ESPRESSO CUP 922110
L73.5, S51, H67, 65 CC.
SAUCER 11.6 CM. 922111
D116, H18



COFFEE CUP 922012 SET
COFFEE CUP 922010
L102, S76, H73, 170 CC.
SAUCER 15 CM. 922011
D150, H23



CAPPUCINO CUP 922092 SET
CAPPUCINO CUP 922090
L110, S80, H102, 270 CC.
SAUCER 15 CM. 922011
D150, H23



CAPPUCINO CUP 922097 SET
CAPPUCINO CUP 922095 SET
L126.5, S97, H72, 280 CC.
SAUCER 16 CM. 922001
D160, H21



DEMI CUP STACKABLE 922107 SET
DEMI CUP STACKABLE 922105
L83, S62, H54, 100 CC.
SAUCER 13.2 CM. 922106
D132, H19



TEA CUP STACKABLE 922032 SET
TEA CUP 922030
L100, S78, H59, 170 CC.
SAUCER 16 CM. 922001
D160, H21



PLATE 27.5 CM. 921027
D275, H29



PLATE 25.7 CM. 921025
D257, H26



PLATE 20 CM. 921070
D201, H19



PASTA BOWL 23 CM. 920223
D230, H40



CEREAL BOWL 16.5 CM. 923116
D165, H57, 630CC.



FRUIT BOWL 14 CM. 923164
D143, H38, 210CC.



BOWL 13 CM. 925913
L150, S133, H65 410CC.



BOWL 12 CM. 925912
L138, S122, H61.5, 310CC.

AURA THAI COLLECTION





DEEP PLATE 25 CM. 301225
D247.5, H43.1, 180 CC.



COUP BOWL 16 CM. 303066
D161, H36.8, 60 CC.



GOURMET PLATE 25 CM. 301227 SET
GOURMET PLATE 301225
D247.5, H43.1, 180 CC.
GOURMET LID 301226
D185, H79



SOUP BOWL 14 CM. 302212 SET
SOUP BOWL 302210
D139, H60.5, 300 CC.
SOUP BOWL LID 302211
D113.9, H40



SAUCER SOUP BOWL 18 CM. 302213
D186.9, H22.3



NOODLE BOWL 13 CM. 303013
D129.1, H57.6, 310 CC.



COUP SAUCER 17 CM. 302017
D166.5, H25.9



NOODLE BOWL 12 CM. 303012
D119.8, H61.3, 300 CC.



COUP SAUCER 17 CM. 302017
D166.5, H25.9



NOODLE BOWL 10 CM. 303010
D103, H57.5, 200 CC.



COUP SAUCER 17 CM. 302017
D166.5, H25.9



DIP BOWL 11 CM. 313111
D109.9, H52.3, 220 CC.



SAUCE DISH 11 CM. 310111
D108.6, H21.8, 80 CC.



DIP BOWL 10 CM. 313110
D98.6, H31, 100 CC.

 


AURA SYSTEM





SALAD BOWL 18 CM. 513518
D180, H60, 1030 CC.



CEREAL BOWL 15 CM. 513515
D150, H50, 570 CC.




BOWL 12.5 CM. 513512
D120, H48, 330 CC.



BOWL 10 CM. 513510

 D100, H35, 160 CC.



BOWL 8 CM. 513508

D80, H28, 75 CC.



SAKE CUP 6 CM. 513505
D60, H45, 65 CC.



TOOTHPICK HOLDER 516552
D45, H44, 40 CC.



SALT 516501
D45, H58



PEPPER 516502
D45, H44



SALT 516503
D45, H58



PEPPER 516504
D45, H44



TEA CUP 513002 SET

TEA CUP 513000

D80, H90, 280 CC.

TEA CUP LID 513001

D80, H28



SAKE POT 516082 SET

SAKE POT 516080

L103, S70, H105, 270 CC.

SAKE POT LID 516081

D70, H32



CHILI BOWL 512502 SET

CHILI BOWL 512500

D66, H30, 60 CC.

CHILI BOWL LID 512501

D66, H16.5



ROUND BOX 512695 SET

ROUND BOX 512693

D80, H44, 150 CC.

ROUND BOX LID 512694

D80, H16.5



ROUND BOX 7.8 CM. 512697 SET

ROUND BOX 512693

D80, H44, 150 CC.

ROUND BOX LID 513001

D80, H28



CHILI BOWL 6.7 CM. 512505 SET

CHILI BOWL 512506

D66, H44, 90 CC.

CHILI BOWL LID 512503

D66, H27



CHILI BOWL 512507 SET

CHILI BOWL 512506

D66, H44, 90 CC.

CHILI BOWL LID 512501

D66, H16.5



CHILI TRAY 27 CM. 314007
L270, S130, H12



CONDIMENT POT 8 CM. 302507 SET

CONDIMENT POT 302500

D60.6, H44.1, 100 CC.

CONDIMENT POT LID 302506

D61.7, H15.1



CONDIMENT POT 8 CM. 302502 SET

CONDIMENT POT 302500

D60.6, H44.1, 100 CC.

CONDIMENT POT LID 302501

D61.7, H15.1



SOYA SAUCE/VINEGAR POT 306082 SET

SOYA SAUCE/VINEGAR POT 306080

L101, S82.4, H100.4, 130 CC.



SOYA SAUCE/VINEGAR POT LID 306081

D41.6, H18.3



SPOON REST 306550

L91, S54, H34.5



SPOON 13 CM. 026400

L132, S44, H44.8



SPICE SPOON 11 CM. 306409

L115, S25, H16



 
TOOTHPICK HOLDER 306552

D45.4, H47.2



COUPE PLATE 30 CM. 300130

D300.7, H28.4



COUPE PLATE 28 CM. 300178

D276.2, H30.1



COUPE PLATE 25 CM. 300175

D250.6, H24.3



COUPE PLATE 17 CM. 300117

D169.6, H24.6



SOUP BOWL 20 CM. 303022 SET

SOUP BOWL 303020

D200.5, H86, 1000 CC.



SOUP BOWL LID 303021

D163.2, H58.5



SOUP BOWL SAUCER 21 CM. 303091

D210, H25.7



SOUP BOWL 17 CM. 303017 SET

SOUP BOWL 303015

D170, H71, 570 CC.



SOUP BOWL LID 303016

D136.7, H55.5



SOUP BOWL SAUCER 21 CM. 303091

D210, H25.7



DEEP COUPE PLATE 26 CM.
300376
D265.5, H40.2, 1050 CC.



DEEP COUPE BOWL 28 CM.
300328
D284.4, H50.7, 1700 CC.



DEEP COUPE BOWL 22 CM.
300322
D231.4, H46, 930 CC.



OVAL PLATE 36 CM.
304036
L350.9, S243, H37.3



OVAL PLATE 32 CM.
304032
L311.1, S218.5, H30.9



OVAL PLATE 28 CM.
304028
L281.2, S192.1, H32.6



VEGETABLE BOWL 28 CM. 313178
D281.4, H130.2, 3650 CC.



BOWL 18.5 CM. 313169
D186.6, H86.5, 950 CC.



BOWL 14.5 CM. 313165
D145.5, H67.8, 450 CC.



BOWL 10.5 CM. 313160
D105.7, H54.6, 180 CC.



TEA CUP 312022 SET
TEA CUP 312020
L96, S75.5, H77.9, 200 CC.
SAUCER 16 CM. 312066
D161.3, H25.8



COFFEE CUP 312027 SET
COFFEE CUP 312025
L102, S80.3, H83.2, 250 CC.
SAUCER 16 CM. 312066
D161.3, H25.8



COFFEE MUG 312403
L106, S83.8, H91.3, 280 CC.



OVAL COUPE PLATE 23.5 CM.
694923
L235, S171, H26



OVAL COUPE PLATE 20 CM.
694920
L190, S138, H32



OVAL COUPE PLATE 18 CM.
694918
L180, S100, H14



RECTANGULAR BOWL 11 CM.
695511
L110, S87, H47, 260 CC.



OVAL COUPE PLATE 10 CM.
694910
L100, S50, H25



SUGAR PACK HOLDER & JAPANESE CUP 230 CC.
693096
D80, H70, 230 CC.



CREAMER 230 CC.
696193
L90, S80, H75, 230 CC.



SOUP CEREAL BOWL 16 CM.
691316
D161, H49, 240 CC.



BOWL 16 CM.
693016
D162, H67, 800 CC.



COFFEE CUP 240 CC.
692002 SET



COFFEE CUP
692000
L108, S80, H76, 240 CC.



 
SAUCER 14 CM.
692001
D140, H23



ESPRESSO CUP 85 CC.
692102 SET



ESPRESSO CUP
692100
L82, S60, H57, 85 CC.



SAUCER 12 CM.
692101
D120, H20



MUG 16 CM. 380 CC.
692410
L119.5, S85, H98, 380 CC.





 
**6 COMPARTMENT
TRAY 38 CM.**

996557
L381, S228.6, H20



**3 COMPARTMENT
TRAY 40 CM.**

996556
L400, S170, H23

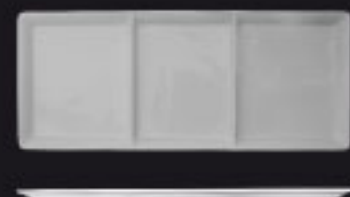


**3 COMPARTMENT
TRAY 34.29 CM.**

996555
L342.9, S130.6, H12.7



SNACK BOWL 10 CM.

 990310
D91, H48

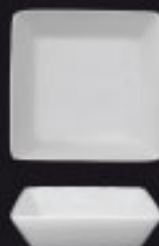

SQUARE BOWL 13 CM.

995513
130X130, H35



OVAL PLATE 39.5CM.

994099
L395, S277, H50



OVAL PLATE 34.5 CM.

994094
L345, S272, H25



 
 
OVAL PLATE 38 CM.

994098
L382.5, S302.5, H25



AURA CHINESE COLLECTION



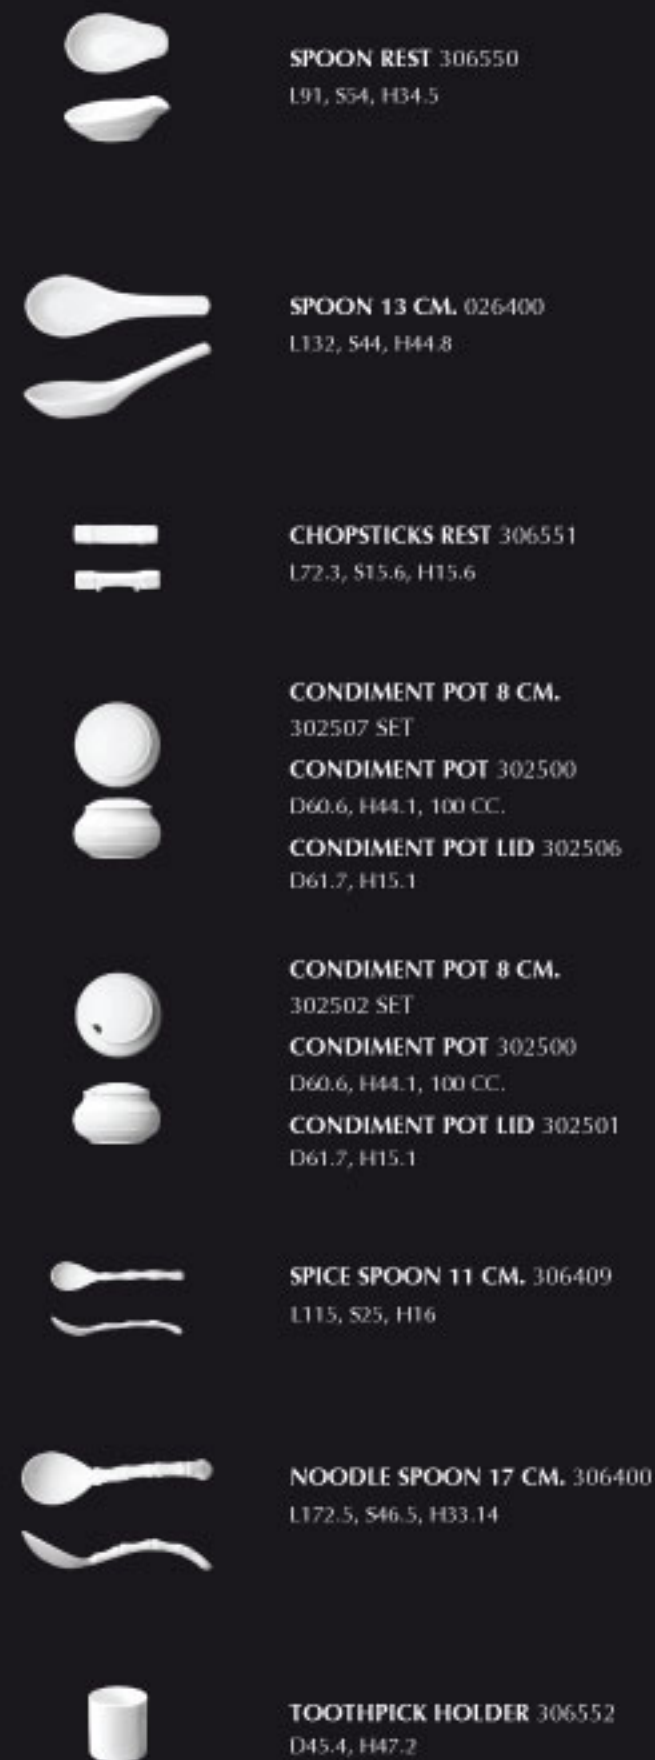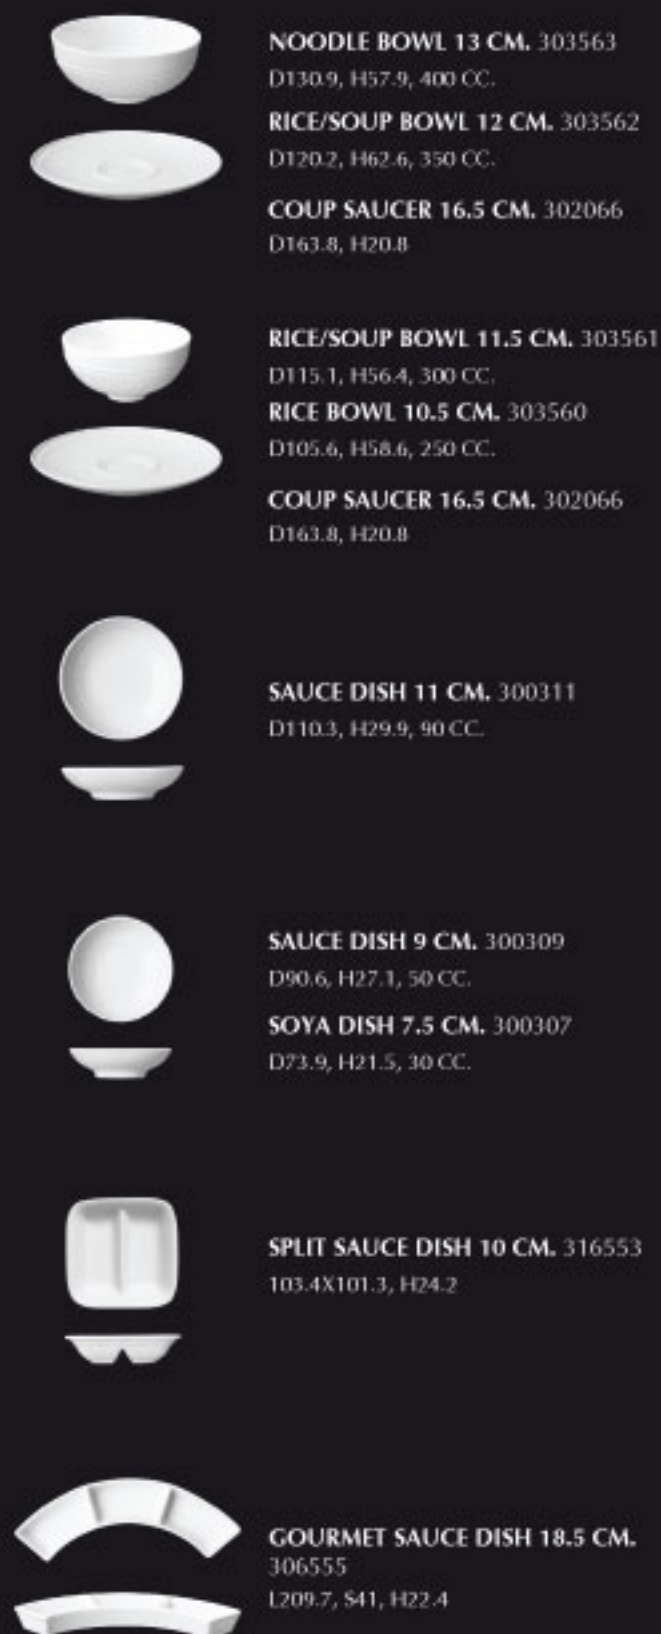



SQUARE SUSHI DISH 25.4 CM.
994025 M195 ZEN
254X254, H29



SUSHI DISH 31.7 CM.
994032 M195 ZEN
L317, S160, H30



SQUARE SUSHI DISH 20.3 CM.
994020 M195 ZEN
203X203, H25



SUSHI DISH 21 CM.
994071 M195 ZEN
L210, S120, H25



SUSHI DISH 15 CM.
994015 M195 ZEN
150X150, H20



SUSHI DISH 21 CM.
994021 M195 ZEN
L210, S150, H25



TEA POT 306057 SET

TEA POT 306055
L236.5, S153, H90 1000 CC. 



TEA POT LID 306051
D74, H16.5



TEA POT UNDERLINER 14.5 CM.
313014
D148.8, H24.9



CHAPPEI CUP & LID 302892 SET

CHAPPEI CUP 8.5 CM. 302890
D85.1, H60.1, 140 CC.

CHAPPEI LID 302891
D70.9, H24.8



CHAPPEI SAUCER 10 CM. 302811
D107, H22.1



SOYA SAUCE/VINEGAR POT 306082 SET

SOYA SAUCE/VINEGAR POT 306080
L101, S82.4, H100.4, 130 CC.



SOYA SAUCE/VINEGAR POT LID 306081
D41.6, H18.3



SOUP BOWL 14 CM. 302217 SET

SOUP BOWL 302215
D139.1, H52, 320 CC.



SOUP BOWL 12.6 CM. LID 302216
D124, H20.5

SAUCER SOUP BOWL 18 CM. 302218
D163.6, H19.5



BUTTER DISH 7.5 CM. 313107
D75, H20.5, 35 CC.



SNACK BOWL 8 CM. 300357
D80, H23, 20 CC.



BOWL 6.6 CM. 313006
D66.4, H58.7, 70 CC.



CHAPPEL CUP 313005
D55.6, H59.8, 90 CC.



TEA CUP 312065
D89.1, H74.3, 230 CC.



TEA CUP 312461
D85.3, H115.7, 450 CC.



TEA CUP 312463
D79.3, H99.5, 300 CC.



ABALONE BOWL 23 CM.
302907 SET
ABALONE BOWL 302905
D228.2, H44.8, 180 CC.
ABALONE LID 302906
D138, H48.5



GOURMET PLATE 25 CM.
301227 SET
GOURMET PLATE 301225
D247.5, H43.1, 180 CC.
GOURMET LID 301226
D185, H79



LAKSA BOWL 24.5 CM.
303074
D246.2, H87.8, 450 CC.



LAKSA BOWL 20.5 CM.
303070
D201.1, H73.5, 200 CC.



BOWL 22.2 CM. 303572
D222.2, H88.6, 2000 CC.



COUPE PLATE 30 CM.
300130
D300.7, H28.4



 
COUPE PLATE 25 CM.
300175
D250.6, H24.3



COUPE PLATE 18.5 CM.
300118
D184.3, H21.4



COUPE PLATE 16.5 CM.
300116
D165.1, H18.3

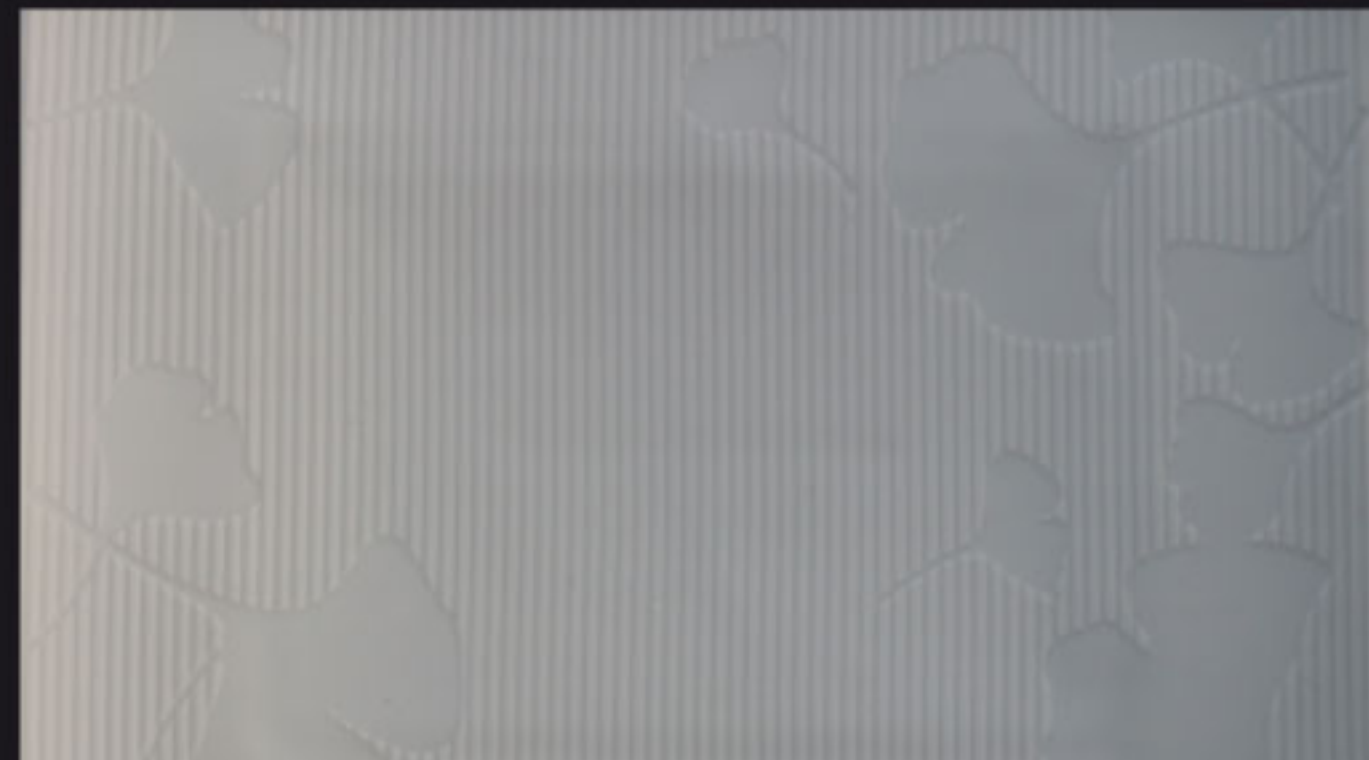

SQUARE SUSHI DISH 25.4 CM.
994025 M213 GINKGO
254X254, H29



SQUARE SUSHI DISH 20.3 CM.
994020 M213 GINKGO
203X203, H25



SUSHI DISH 15 CM.
994015 M213 GINKGO
150X150, H20



SUSHI DISH 31.7 CM.
994032 M213 GINKGO
L317, S160, H30



SUSHI DISH 21 CM.
994071 M213 GINKGO
L210, S120, H25



SUSHI DISH 21 CM.
994021 M213 GINKGO
L210, S150, H25



SQUARE SUSHI DISH 25.4 CM.
994025 M212 AURA STRIPE
254X254, H29

SQUARE SUSHI DISH 20.3 CM.
994020 M212 AURA STRIPE
203X203, H25

SUSHI DISH 15 CM.
994015 M212 AURA STRIPE
150X150, H20

SUSHI DISH 31.7 CM.
994032 M212 AURA STRIPE
L317, S160, H30

SUSHI DISH 21 CM.
994071 M212 AURA STRIPE
L210, S120, H25

SUSHI DISH 21 CM.
994021 M212 AURA STRIPE
L210, S150, H25

COUPE DISH 36 CM.
300386
D362, H50.4, 2500 CC.

COUPE DISH 30 CM.
300380
D306.8, H38.2, 1460 CC.

COUPE DISH 26 CM.
300376
D265.5, H40.2, 1050 CC.

DEEP COUPE BOWL 30 CM.
300330
D312, H54.6, 2050 CC.

DEEP COUPE BOWL 28 CM.
300328
D284.4, H50.7, 1700 CC.

DEEP COUPE BOWL 22 CM.
300322
D231.4, H46, 930 CC.

SOUP TUREEN 30 CM.
302932 SET

SOUP TUREEN
302930
D300, H100, 3500 CC.

SOUP TUREEN LID
302931
D270, H42

SOUP TUREEN 27 CM.
302927 SET

SOUP TUREEN
302925
D271.8, H92.2, 2800 CC.

SOUP TUREEN LID
302926
D243, H39

SOUP TUREEN 25 CM.
302922 SET

SOUP TUREEN
302920
D249.7, H88.1, 2200 CC.

SOUP TUREEN LID
302921
D224.7, H34.8

SOUP TUREEN 20 CM.
302912 SET

SOUP TUREEN
302910
D199.5, H71, 1100 CC.

SOUP TUREEN LID
302911
D177.8, H28.9

OVAL PLATE 55 CM.
304055
L553.1, S374.1, H34.9

OVAL PLATE 45 CM.
304046
L451.1, S315.4, H30.8

OVAL PLATE 41 CM.
304042
L410.6, S280.8, H46.3

OVAL PLATE 36 CM.
304036
L350.9, S243, H37.3

OVAL PLATE 32 CM.
304032
L311.1, S218.5, H30.9

OVAL PLATE 28 CM.
304028
L281.2, S192.1, H32.6

AURA

GOURMET COLLECTION



CREAMER 316193
L122.5, S82, H83.5, 220 CC.

CREAMER 316194
L106, S72, H73, 150 CC.



CREAMER 316192
L81, S72, H73, 150 CC.



CREAMER 316191
L67, S60, H60, 70 CC.



CREAMER 316190
L39, S34, H41, 20 CC.



SUGAR STICK HOLDER 313009
D89.1, H74.3, 200 CC.



SUGAR BOWL 316811
D108.4, H52.7, 220 CC.



BOWL 313011
D117.8, H65, 300 CC.



BOWL 313013
D130, H70, 350 CC.



SUGAR PACKET HOLDER 316840
L110, S72, H54, 220 CC.



SAUCE BOAT 316510
L180, S81.9, H68.7, 180 CC.



SAUCER SAUCE BOAT 20 CM. 316511
L200, S100, H19



ASHTRAY W/2 NOTCHES 9 CM 311600
D89.6, H27.5



VASE 13.8 CM 316201
D70, H38



SALT 4.8 CM 316502
D48, H60



PEPPER 4.8 CM 316503
D48, H60



SALT 4.8 CM 316500
D48, H60



PEPPER 4.8 CM 316501
D48, H60



SALT 4.7 CM 306500
D47, H48.8



PEPPER 4.6 CM 306501
D46, H48.5



STACKABLE MUG 312411
L117.5, S85.3, H115.7, 450 CC.



STACKABLE MUG 312413
L112.5, S79.3, H99.5, 300 CC.



BREAKFAST CUP 312192 SET

BREAKFAST CUP 312190
L144.5, S113.8, H71, 400 CC.



SAUCER 18 CM. 312191
D178, H25



SOUP CUP 2 HANDLES 312212 SET

SOUP CUP 2 HANDLES 312210
L174, S113.8, H71, 400 CC.



SAUCER 18 CM. 312191
D178, H25



TEA CUP 312032 SET

TEA CUP 312030
L128.5, S104.3, H56, 230 CC.



SAUCER 16.5 CM. 312031
D163.7, H22



COFFEE CUP 312037 SET

COFFEE CUP 312035
L119, S88.3, H75, 250 CC.



SAUCER 16.5 CM. 312031
D163.7, H22



DEMITASSE CUP 312112 SET

DEMITASSE CUP 312110
L88, S65.4, H56, 70 CC.



SAUCER 12.5 CM. 312111
D124.2, H21



TEA POT 316037 SET

TEA POT 316035
L232, S140, H144, 650 CC.

TEA POT LID 316016
D120, H39



TEA POT 316027 SET

TEA POT 316025
L206, S126, H109, 450 CC.

TEA POT LID 316006
D62, H35



COFFEE POT 316032 SET

COFFEE POT 316030
L221, S120, H150, 600 CC.

COFFEE POT LID 316011
D102, H40



COFFEE POT 316022 SET

COFFEE POT 316020
L190, S98, H122, 360 CC.

COFFEE POT LID 316001
D92, H33



COFFEE POT 316047 SET

COFFEE POT 316045
L203, S116, H126, 650 CC.

COFFEE POT LID 316046
D100, H36



TEA POT 316042 SET

TEA POT 316040
L184, S116, H100, 450 CC.

COFFEE POT LID 316046
D100, H36



BOWL 9 CM. 300359



D90, H50, 150 CC.



BOWL 10 CM. 300360



D100, H35, 130 CC.



BOWL 7 CM. 300357



D70, H35, 70 CC.



TUMBLER 6 CM. 302406

D60, H70, 130 CC.



GOURMET BOWL 302237 SET

GOURMET BOWL 302235

L135, S119, H45, 190 CC.

GOURMET BOWL LID 302236

D117, H36



SAUCER SOUP BOWL 18 CM. 302218

D163.6, H19.5



GOURMET BOWL 302227 SET

GOURMET BOWL 302225

L115, S98, H38, 100 CC.

GOURMET BOWL LID 302226

D100, H34



COUP SAUCER 16.5 CM. 302066

D163.8, H20.8



GOURMET BOWL 302207 SET

GOURMET BOWL 302205

L106, S90, H30, 80 CC.

GOURMET BOWL LID 302206

D92, H26



SAUCER 12.5 CM. 302101

D125, H16



GOURMET BOWL 302232 SET

GOURMET BOWL 302230

L124, S106, H55, 190 CC.

GOURMET BOWL LID 302231

D108, H42



COUP SAUCER 16.5 CM. 302066

D163.8, H20.8



GOURMET BOWL 302222 SET

GOURMET BOWL 302220

L110, S92, H50, 130 CC.

GOURMET BOWL LID 302221

D94, H39.5



COUP SAUCER 16.5 CM. 302066

D163.8, H20.8



GOURMET BOWL 302202 SET

GOURMET BOWL 302200

L96, S80, H45, 95 CC.

GOURMET BOWL LID 302201

D82, H33



SAUCER 12.5 CM. 302101

D125, H16



GOURMET OVAL BOWL 304812 SET

GOURMET OVAL BOWL 304810

L174, S90, H45, 230 CC.

GOURMET OVAL BOWL LID 304811

L152, S92, H46



OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



GOURMET OVAL BOWL 304807 SET

GOURMET OVAL BOWL 304805

L145, S75, H38, 130 CC.

GOURMET OVAL BOWL LID 304806

L127, S77, H39



OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



GOURMET OVAL BOWL 304802 SET

GOURMET OVAL BOWL 304800

L116, S60, H30, 80 CC.

GOURMET OVAL BOWL LID 304801

L102, S62, H31

OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



GOURMET OVAL BOWL 304852 SET

GOURMET OVAL BOWL 304803

L100, S60, H30, 80 CC.

GOURMET OVAL BOWL LID 304801

L102, S62, H31

OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



GOURMET OVAL BOWL 304857 SET

GOURMET OVAL BOWL 304804

L125, S75, H38, 130 CC.

GOURMET OVAL BOWL LID 304806

L127, S77, H39

OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



GOURMET OVAL BOWL 304862 SET

GOURMET OVAL BOWL 304809

L1150, S90, H45, 230 CC.

GOURMET OVAL BOWL LID 304811

L152, S92, H46

OVAL UNDERLINER 18 CM. 304018

L180, S110, H20



RECTANGULAR PLATE

35 CM. 304035

L350, S155, H15.1



SQUARE PLATE 30 CM.

304930

300X300, H15



SQUARE PLATE 24 CM.

304924

240X240, H15



SQUARE PLATE 20 CM.

304920

200X200, H15



SQUARE PLATE 18 CM.

304918

180X180, H15



BREAKFAST CUP 312092 SET

BREAKFAST CUP 312090

L136, S117.8, H65, 300 CC.

SAUCER 18 CM. 312091

D177.5, H22



SOUP CUP 2 HANDLES 312207 SET

SOUP CUP 2 HANDLES 312205

L156, S117.8, H65, 300 CC.

SAUCER 18 CM. 312091

D177.5, H22



COFFEE CUP 312002 SET

COFFEE CUP 312000

L114, S89.1, H74.3, 200 CC.

SAUCER 16.5 CM. 312001

D162.2, H25.9



SAUCER 16 CM. 312066

D161.3, H25.8



COFFEE CUP 312012 SET

COFFEE CUP 312010

L120, S95, H85, 250 CC.

SAUCER 16.5 CM. 312011

D162.2, H25.9



TEA CUP 312007 SET

COFFEE CUP 312005

L117, S93.1, H62, 150 CC.

SAUCER 16 CM. 312006

D162.2, H23.7



SAUCER 16 CM. 312066

D161.3, H25.8



TEA CUP 312102 SET

COFFEE CUP 312100

L86, S66.4, H58.7, 70 CC.

SAUCER 12 CM. 312101

D118.2, H19.5



MUG 312410

L122, S94, H95.1, 300 CC.



BREAKFAST CUP 312097 SET

BREAKFAST CUP 312095

L133.5, S103.9, H63.9, 300 CC.

SAUCER 18 CM. 312091

D177.5, H22



SOUP CUP 2 HANDLES 312202 SET

SOUP CUP 2 HANDLES 312200

L183, S103.9, H63.9, 300 CC.

SAUCER 18 CM. 312091

D177.5, H22



TEA/COFFEE CUP 312017 SET

COFFEE CUP 312015

L105, S89.1, H74.3, 230 CC.

SAUCER 16 CM. 312006

D162.2, H23.7



SAUCER 16 CM. 312066

D161.3, H25.8



ESPRESSO CUP 312107 SET

COFFEE CUP 312105

L76, S55.6, H59.8, 90 CC.

SAUCER 12 CM. 312101

D118.2, H19.5



CAN CUP 312052 SET

COFFEE CUP 312050

L99.5, S71.9, H76.9, 200 CC.

SAUCER 16 CM. 312066

D161.3, H25.8

AURA

HOLLOWWARE & ACCESSORIES



 
AURA

SQUARE COLLECTION






SQUARE TRAY 32 CM.
314982
320X320, H15.1

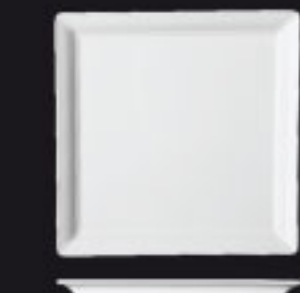


SQUARE TRAY 24 CM.
314924
240X240, H15

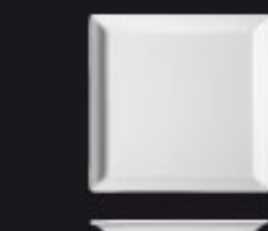 

SQUARE TRAY 16 CM.
314916
160X160, H15

 SQUARE TRAY 13 CM.
314913
130X130, H15

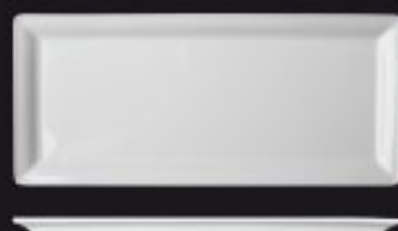

RECTANGULAR TRAY 35 CM. 314035
L354, S156.5, H15.1

RECTANGULAR TRAY 27 CM. 314027
L271, S131.8, H13.1

RECTANGULAR TRAY 24 CM. 314024
L241.6, S120.4, H13.4



COCKTAIL TRAY 27 CM.
314077
L271.8, S132.1, H14.8



CAVIAR TRAY 24 CM. 314074
L241.6, S120.4, H13.4
MATCH WITH ESPRESSO CUP 312100



CAVIAR TRAY 24 CM. 314074
L241.6, S120.4, H13.4
MATCH WITH CREAMER 316191



CAVIAR TRAY 24 CM. 314424
L241.6, S120.4, H13.4
MATCH WITH COFFEE CUP 312000



COCKTAIL & SANCK TRAY 24 CM. 314095
L241.6, S120.4, H13.4



COCKTAIL TRAY 24 CM. 314094
L241.6, S120.4, H13.4



COCKTAIL & SANCK TRAY 27 CM. 314097
L271.8, S132.1, H14.8



SQUARE SALAD BOWL 24 CM. 315674
240X240, H100, 2250 CC.



 
SQUARE VEGETABLE BOWL 24 CM. 315624
240X240, H75, 1580 CC.



SQUARE SOUP BOWL 18 CM.
315618
180X180, H60, 580 CC.



SQUARE CEREAL BOWL 16 CM.
315616
160X160, H72, 500 CC.

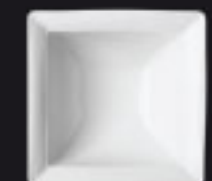


SQUARE FRUIT BOWL 13 CM.
315613
130X130, H59, 270 CC.



SQUARE PASTA BOWL 24 CM. 315524
240X240, H48, 900 CC.



 SQUARE PASTA PLATE 18 CM. 315518
183.3X183.3, H40.7, 340 CC.

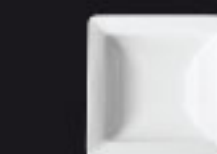

SQUARE CONDIMENT PLATE 13 CM. 315513
130X130, H40.1, 170 CC.



SQUARE RAMEKIN 10 CM.
315510
100X100, H25, 65 CC.



SQUARE RAMEKIN 8 CM.
315508
80X80, H25, 30 CC.



SQUARE BOWL 15 CM. 314965
150X150, H47, 600 CC.



SQUARE PLATE 14 CM. 314964
140X140, H23, 300 CC.

