MANUAL INSTRUCTION


Switch Remote Controller for Pool Light

(V2.1-EN)



Thank you for choosing our company's SWITCH REMOTE CONTROLLER. Before installing and using this product, please carefully read this manual to ensure complete understanding and avoid damage and additional costs. Before unpacking and using, please verify if the product has been damaged during transportation. If any damage occurs, please notify our company immediately and stop using the damaged product.

1.WIRING DIAGRAM

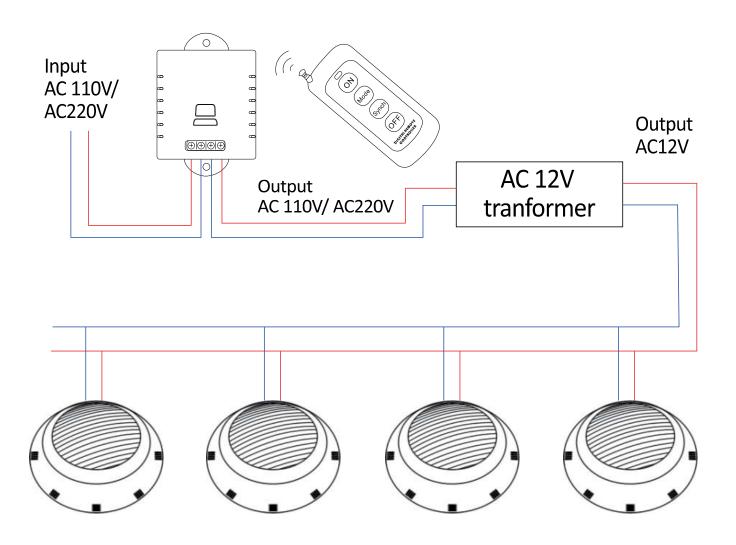


WARNINGS:

- The transformer's output must be **Voltage 12V AC. Don't use electronic transformers which may damage the light.** You should use industrial frequency transformer, such as toroidal transformer and square transformer.
- The persons who are in charge of installation should have the required qualifications for this type of work.
- Avoid making contact with the electric voltage.
- Replacement must be performed with the lamp disconnected from the electric power system.
- Do not handle any electrical components with wet feet.

2.PROGRAMS OPERATING MANUAL

2.1 Remote control Pairing & Unpairing with the controller

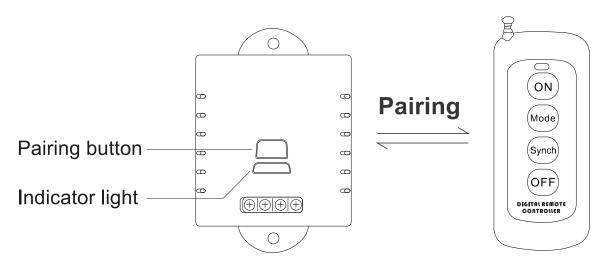

Pairing ▼

- Short press: Turns the device on/off.
- Long press (3 seconds): Enters learning mode, indicated by the light slowly flashing while waiting for pairing.
- Press any button on the remote control to complete pairing.

Unpairing ▼


• Long press (8 seconds): Enters pairing reset mode, indicated by the light quickly flashing when the reset is successful.

WARNINGS:

- The transformer's output must be **Voltage 12V AC. Don't use electronic transformers which may damage the light.** You should use industrial frequency transformer, such as toroidal transformer and square transformer.
- The persons who are in charge of installation should have the required qualifications for this type of work.
- Avoid making contact with the electric voltage.
- Replacement must be performed with the lamp disconnected from the electric power system.
- Do not handle any electrical components with wet feet.

2.PROGRAMS OPERATING MANUAL

2.1 Remote control Pairing & Unpairing with the controller

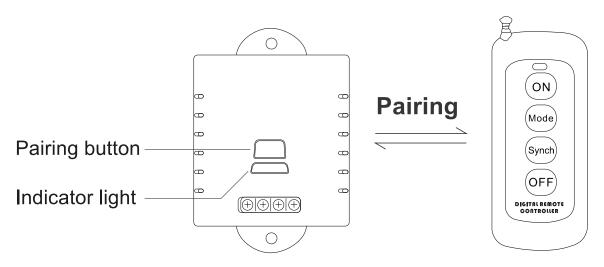

Pairing ▼

- Short press: Turns the device on/off.
- Long press (3 seconds): Enters learning mode, indicated by the light slowly flashing while waiting for pairing.
- Press any button on the remote control to complete pairing.

Unpairing ▼

• Long press (8 seconds): Enters pairing reset mode, indicated by the light quickly flashing when the reset is successful.