


Cloud alarm WiFi 01

WiFi Alarm System

User Manual

Printed in China
PA : Cloud alarm WiFi 01-UM-EN-V1.0

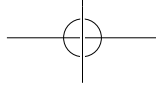

Foreword

Congratulations on your purchase of the **Cloud alarm WiFi 01** Alarm system. Before you commence installation we recommend that you unpack the product, familiarise yourself with the component parts, and carefully read through this instruction guide.

There are some parts of the installation must be completed in the order shown to ensure successful installation.

Disclaimer

Dear users,

We have reviewed this manual thoroughly in order that it will be an easy to use guide to this product. All statements, technical information, recommendations in this manual are believed reliable, but the accuracy and completeness thereof are not guaranteed or warranted.


The specifications and information regarding the products in this document are subject to change without notice.

Photocopy, copy, reproduction, translation to any language, modification, storage in a retrieval system or retransmission, in any form or by any means, electronic, mechanical or otherwise, is strictly prohibited without prior written permission.

In no event we are liable for any indirect, special, incidental, or consequential damages, including, without limitation, lost profits or loss or damage to data arising out of the use or inability to use this document, even if the product has been advised of the possibility of such damages.


Contents

| | |
|--|-------|
| Packing List | 1 |
| Control Panel | 2~3 |
| Remote Control | 4 |
| Door/Window Sensor | 5 |
| Pet Immune PIR Motion Sensor | 6-7 |
| Pairing New Accessories to the Control Panel | 7 |
| WiFi Setup | 8-9 |
| App Control and Settings | 10-12 |
| Notifications | 13 |
| Installation | 14-17 |
| Replacing Accessory Batteries | 18 |
| FAQ | 19-20 |
| Specifications | 21-22 |

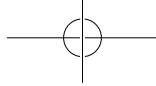


Packing List


1x Cloud alarm WiFi 01 Control Panel

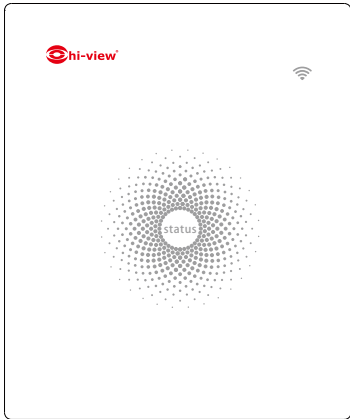

1x OHW-10 Pet Immune PIR Motion Sensor

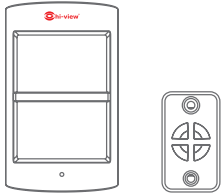


3x OMC-10 Door/ Window Sensor

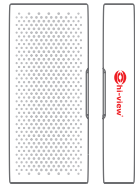

2x OYK-10 Remote Control



1x Power Adapter

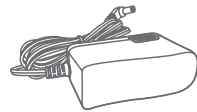

1x User Manual



1


Control Panel

All Sensors are wirelessly linked to the Control Panel.

In the event of alarm activation, for example, when a Sensor is triggered, a push notification will automatically be sent to all registered users.


The system can be controlled and monitored both on-site using the Remote Control supplied and remotely from anywhere in the world, with the FREE iOS and Android Apps.

The system can easily be expanded to include up to: **50 Wireless Sensors and 10 Remote Controls.**

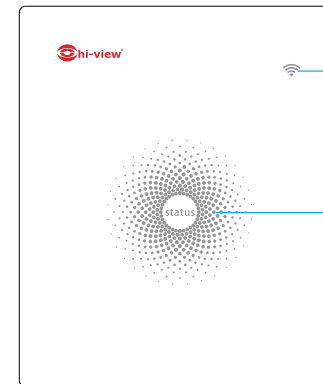

WiFi Indicator

Status Indicator

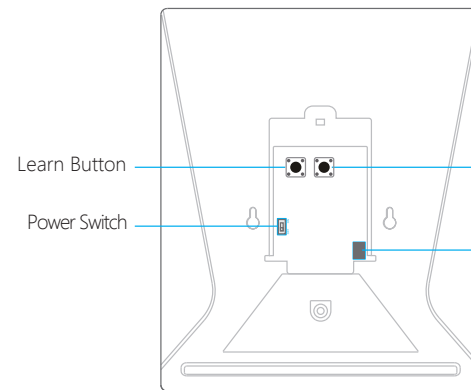

Learn Button

Power Switch

Network Configuration

Power Adapter Jack

2

LED Indication

| | | |
|--|--------------------------|--|
| WiFi Indicator (Blue) | Steady On | Connected with Router |
| | One flash per second | Searching for a network or disconnected from Router |
| | Off | 1) Initialization (the Control Panel beeps every 3 seconds): lasts for up to 30 seconds after power up 2) The Power Adapter is not plugged in |
| Status Indicator (Red, Blue and Green) | Steady On | Stable WiFi connection |
| | Red | System is Armed |
| | Blue | System is in Home Mode (Part Arm) |
| | Green | System is Disarmed |
| | One flash per second | Disconnected from the Router |
| | Three flashes per second | Alarm condition |

Functionality of Buttons behind the Back Cover


| | |
|--------|--|
| Learn | Used to pair an accessory with the Control Panel |
| WiFi | Used to pair the Control Panel with the Router |
| On/off | Power Switch |

Note: The Control Panel must be plugged in to the Power Adapter in order to maintain the WiFi connection.

When AC power is lost, the control panel will last for 2 minutes to send out a push notification to the connected smartphones, and the sounder will keep beeping for 30 seconds.


Remote Control

The Remote Control can be used to arm, part arm or disarm the system, and trigger an emergency alarm (SOS).

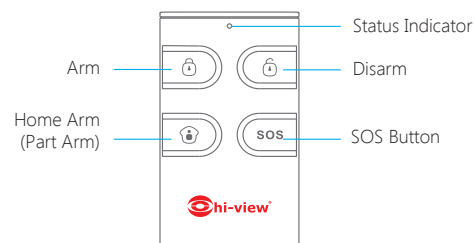


| Button | System Status |
|------------|---|
| | All Sensors will be Armed. This mode is for use when the property is unoccupied. |
| | The System will be Disarmed, no Sensors will be triggered. Note: When set to 'Disarm', Fire, Smoke, and Gas Leakage Sensors will remain active as they are factory set to '24 Hour Zone' |
| | Sensors which are set to the Home Zone will not be Armed. All other Sensors will be Armed. This mode allows for selected Sensors (for example, front/back door(s) to be Armed, allowing the occupier freedom of movement within the property. |
| SOS | The SOS Button will trigger an 'emergency' alert notification to registered users regardless of the Control Panel mode. |
| + | Press the [] button. After the indicator on the remote control blinks once, press [] button within 3 seconds to mutely arm the system. |
| + | Press the [] button. After the indicator on the Remote Control blinks once, press [] button within 3 seconds to mutely disarm the system. |

Note: To turn off the Arm/Disarm tone permanently, open the Alarm App **AW1**, go to 'Internal Siren'.

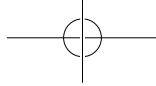

Door/ Window Sensor

Door/ Window Sensor is set to 'Normal Zone' by default and are ideal for protecting entry/exit points such as front and back doors and windows. When the system is Armed, should a Sensor be triggered (Magnet separated from the Transmitter), a push notification showing the named Sensor will automatically be sent to the registered users and the Control Panel Internal Siren will sound immediately.

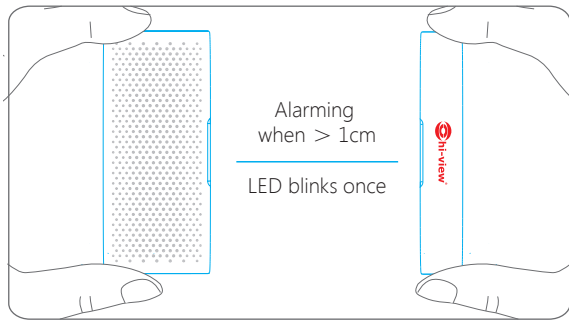

Tamper Switch


The Tamper Switch (small black button underneath the back cover) will activate an alarm condition if an unauthorized attempt is made to remove the Sensor from its installed location.

Low Battery Indication

If the LED indicator flashes once per 3 second, the battery must be replaced.

Pet Immune PIR Motion Sensor

The Motion Sensor is designed for use on interior walls and is set to Home Mode by default. Whenever the Sensor detects movement (while the alarm is armed) you will receive a push alert notification showing the name of the Sensor that has been triggered and the Control Panel Internal Siren will sound immediately.

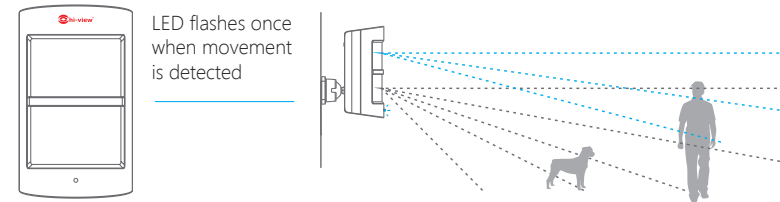

Tamper Switch

The Tamper Switch (a black button with a silver spring at the top, located inside this Sensor) is used to indicate an unauthorized attempt to remove its cover. Whenever this button is released, it will trigger an alarm and the push alert will notify you which Sensor has been triggered on tamper.

Low Battery Indication

If the LED indicator blinks once per 3 second, the battery must be replaced.

Working Mode



Test Mode

The Sensor enters a 1 minute settling down period on power up, thereafter entering into Test Mode. In Test Mode, the Sensor detects movement every 10 seconds and emits an alarm signal every time movement is detected. Test Mode will remain active for 3 minutes, thereafter entering into Power Saving Mode.

Note: You may also enter Test Mode by pressing the Test Button at the back of the Sensor.

Power Saving Mode

If the Sensor detects movement twice within 3 minutes the Sensor will automatically enter into Sleep Mode and no movement will be detected. The Sensor will leave Sleep Mode after a 3 minute period without any movement.

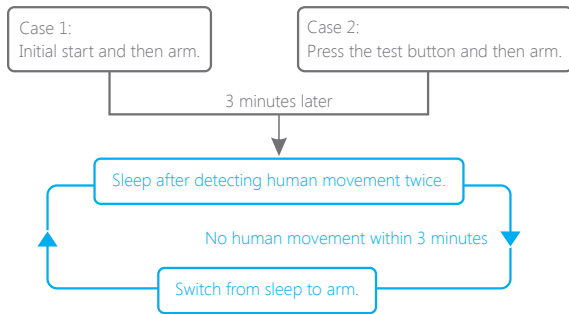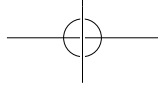

Pairing New Accessories to the Control Panel

There are two ways of pairing Accessories to the Control Panel – manually and via App.

Manual Pairing

To pair Accessories manually please follow the instructions below:

Remote Control and Sensors:

1. Press the Learn button at the back of the Control Panel
2. Press any button on the Remote Control or trigger the Sensor

Very Important: Please note that pressing the Tamper Switch instead of triggering the Sensor will register it as a 24 Hour Zone.

(Optional Accessory) Wireless Siren:

1. Press the Learn Button on the Siren
2. Arm the Control Panel via the App

Pairing from the App

To pair the Accessories via App, open the Alarm App **AW1**, go to 'Edit Accessories' and follow the instructions on the screen.

WiFi Setup


Step One: Download the App


The App can be downloaded from the App Store or Google Play by searching for **'AW1'**.

Step Two: Power On

1. Remove the back cover from the Control Panel.
2. Connect the Power Adapter.
3. Set the Power Switch to "ON".
4. Wait until the WiFi Indicator starts to blink (approx. 30 seconds)

Note: The Control Panel will emit a short 'beep' every 3 seconds when powered up. After 30 seconds there will be a long 'beep' to confirm that the Panel is ready for use.

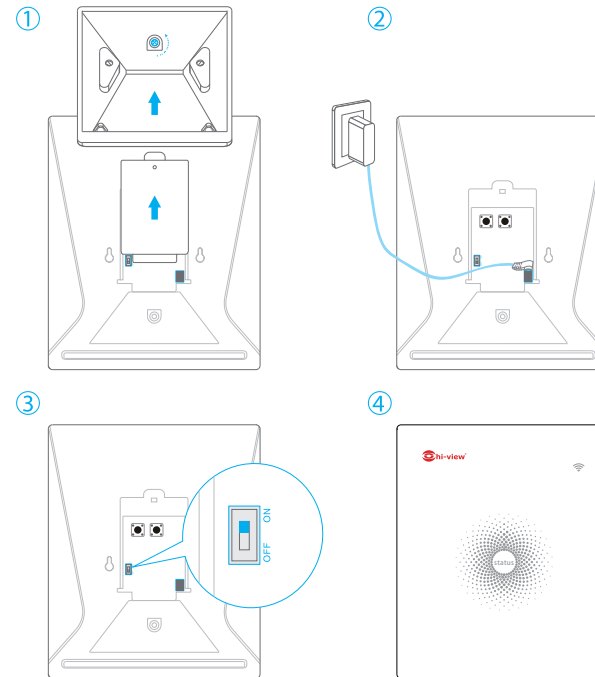

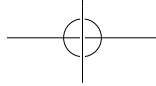


Step Three: Connect the Control Panel to the Router

Important: Cloud alarm WiFi 01 does not support WiFi of 5GHz band, If dual-band(5GHz and 2.4GHz) router is used, make sure to connect with the 2.4GHz WiFi instead of the 5GHz's. Make sure your smartphone is connected to the local WiFi network and then follow the steps in the App to connect the Cloud alarm WiFi 01 Control Panel to the Router.


1. Press and hold the [WiFi] Button inside the Control Panel for 3 seconds, the Control Panel will emit one 'beep'.
2. Tap [WiFi] in the [Settings] of your smartphone, and select the 'WiFi Alarm' network.
3. Return to the App and key in your WiFi name and password or open the drop down menu to scan for all the nearby wireless networks.
4. The Control Panel will beep once, wait until the WiFi indicator and the Status indicator stop blinking, indicating that the Control Panel has successfully connected to the network.

①

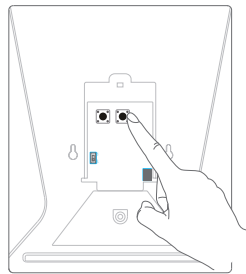


②


Make sure this network icon appears in the Status Bar

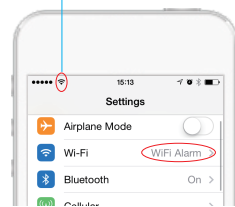

③

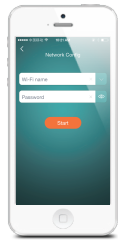

④

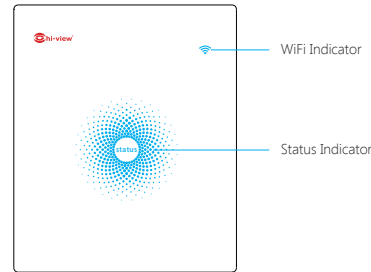

APP Control and Settings

Important Notice

In order to control the system remotely (WiFi/App), the Control Panel must be 'mains' powered via the Power Adapter. WiFi accessibility is disabled when the Control Panel Power Adapter is unplugged from the mains power supply and running on batteries.



Access to an optional IP Camera
Re-configuring the network

Pull down to refresh and see the 'Live Alarm' status


Arm

Disarm

Home Arm (Part Arm)


Synchronize Time (Important Setting)


The time shown on your mobile device must be synchronized with the time shown on the Server prior to setup. Operation history will only be recorded once synchronization is complete.

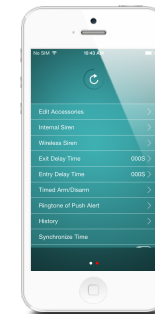



Edit Accessories

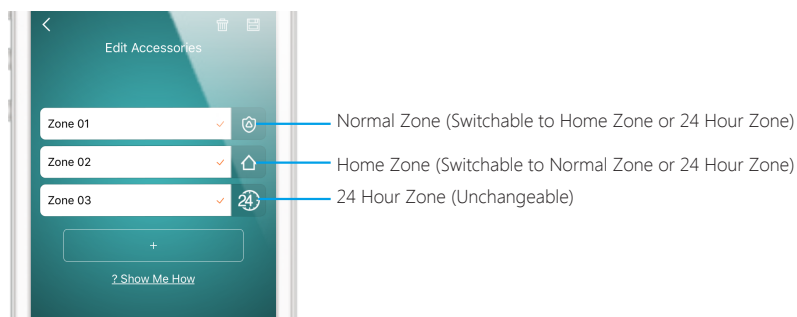Rename, add, delete and change the Zone Mode of each Sensor. (except the 24 Hour Zone). Remember to tap the Save button in the top right hand corner to save the changes.



Normal Zone : Sensors set to Normal Zone are armed whether the alarm is in Arm (Full Arm) or Home Arm (Part Arm) Mode. We recommend setting Window/ Door Sensors to Normal Zone.

Home Zone : Sensors set to Home Zone are only armed in Arm (Full Arm) Mode. If Home Mode (Part Arm) is used, these Sensors are not armed and will not activate the alarm on trigger. We recommend setting PIR Motion Sensors to Home Zone.

24 Hour Zone : Sensors set to 24 Hour zone will activate the alarm when triggered, regardless of the alarm status at the time (armed or disarmed).

Note: Smoke, Gas Leakage or Water Flood Sensors are automatically registered as 24 Hour Zone Sensors and cannot be changed to Normal or Home Zone. Any Motion or Door/ Window Sensor paired to the Control Panel by pressing the Tamper Switch will also register as a 24 Hour Zone Sensor. A 24 Hour Sensor will activate the alarm when triggered, regardless of the alarm status at the time (armed or disarmed)."

Internal Siren

The volume level, alarm duration, and arm/disarm beep can be adjusted in the App.

Wireless Siren

When connecting an Outdoor Siren (optional accessory) to the Control Panel, it can be enabled/ disabled by switching the Alarm option to on/off. The on/off arm/disarm beep and alarm duration can also be adjusted.

Exit Delay Time


Set a time delay for you to leave your property without triggering an alarm.

Entry Delay Time

Set a time delay for you to enter your property without triggering an alarm.

Timed Arm/Disarm

The system can be programmed to automatically Arm and Disarm the alarm at predefined times by following the steps below:

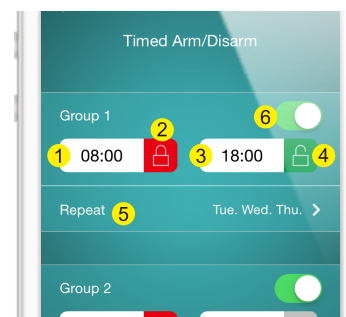

1. Set the time you want the alarm to arm (on the left)
2. Tap the Arm Button once to activate automatic arming and twice to disable it
3. Set the time you want the alarm to Disarm (on the right)
4. Tap the Disarm Button once to activate automatic disarming and twice to disable the automatic disarming
5. Select the days you want the alarm to automatically arm/ disarm
6. Slide the switch to the 'on' position to activate the new schedule

Ringtone of Push Alert

The selected ringtone will be heard when a Push Alert is received.

History

The Event Log holds a record of up to 100 events (More details in 'Notifications' on page 13).

Passcode

We recommend that passcode protection is enabled to avoid unauthorized access to the App.

Delete User

The alarm can be controlled by up to 5 Users who will also receive Push Alerts. To delete a User Account from the App go to the submenu 'More' and select 'Delete Users'

Notifications

The system uses status notification to give you feedback about how the system is functioning.

Operation Notification (Record in App Menu-History)

| | |
|---------------------|---|
| System Arm | System armed by Remote Control |
| System Disarm | System disarmed by Remote Control |
| System Home Arm | System home armed by Remote Control |
| Arm by App | System armed by App |
| Disarm by App | System disarmed by App |
| Home Arm by App | System home armed by App |
| Arm as Scheduled | System has auto-armed according to the 'Timed Arm/Disarm' schedule |
| Disarm as Scheduled | System has auto-disarmed according to the 'Timed Arm/Disarm' schedule |

Alarm Notification

| | |
|-----------------------|---|
| System SOS Alarm | Remote Control SOS button activation has triggered an emergency alert |
| (Zone 1) Alarm | A zone no. 1 sensor has been triggered |
| (Zone 1) Tamper Alarm | Unauthorized attempt to remove the cover of a zone no. 1 sensor. |

Status Notification

| | |
|---------------------------|---|
| (Zone 1) Low Battery | A zone no. 1 sensor battery is low. Change the battery as soon as possible. |
| Control panel AC failure | Lost connection with AC Power |
| Control panel AC recovery | Regain connection with AC Power |


Installation

Control Panel

Wall Mounting

The Control Panel can be wall mounted using the Wall Bracket provided.


Using the screws supplied, mount the Wall Bracket onto the wall (ensuring that the arrow on the bracket is pointing upwards), then match-up the Wall Bracket hooks to the holes at the back of the Control Panel, and slide the Control Panel down onto the Wall Bracket.

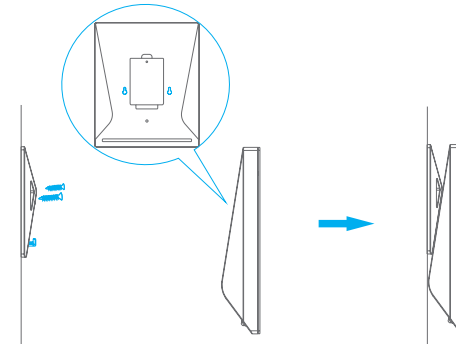

Free-standing


The Wall Bracket can also be used as a tabletop stand.

Turn the Wall Bracket upside down so that the arrow is pointing downwards, and align the screw hole underneath the Control Panel Battery Cover with the screw hole on the Wall Bracket. Use the remaining screw to secure in place.

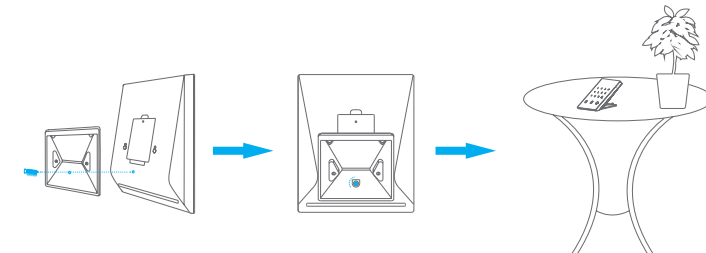


Warning:

A weak WiFi signal can seriously affect the performance of this Security Alarm System. Please make sure that the Control Panel is located as close as possible to the main Router for optimal connectivity.

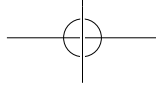


Door/ Window Sensor:


Step 1: To power up the Sensor, remove the Battery Tab

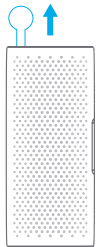

Step 2: Attach the Adhesive Pads to the back of the Transmitter and Magnet

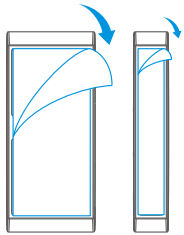


Step 3: Place the Sensor on the door/ window frame and the magnet on the door/ window ensuring that the distance between them is not greater than 1cm when the door/ window is shut.

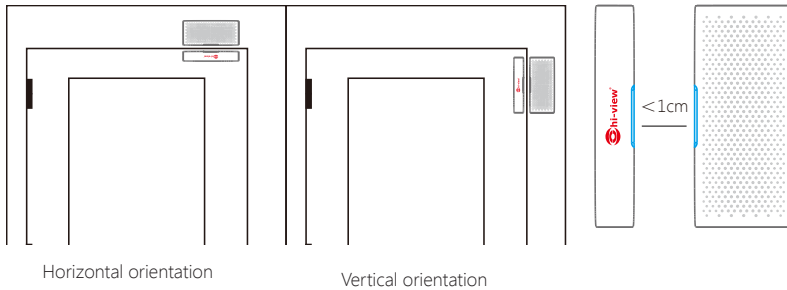


PIR Motion Sensor:


Warning - Do not install

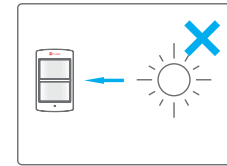

Facing direct sunlight

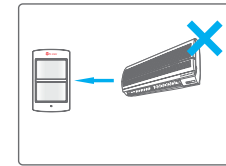


Near air conditioning/ heat sources

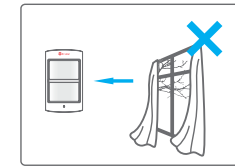


Facing moving objects


Direction of motion and Detection Range

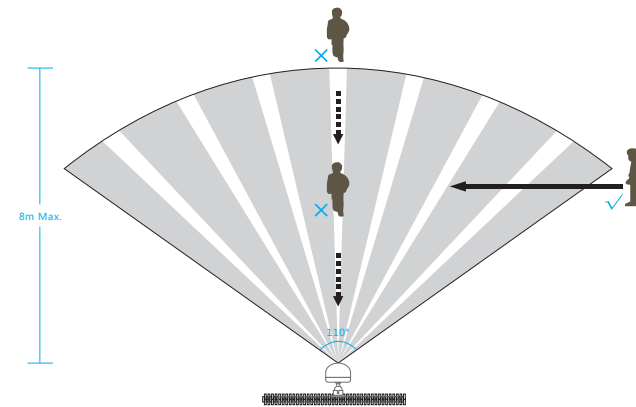

It is easier to detect objects that move sideways in front of the sensor, but more difficult to detect objects that move directly toward the sensor.

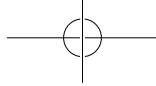


Step 1: To power up the Sensor, remove the Battery Tab

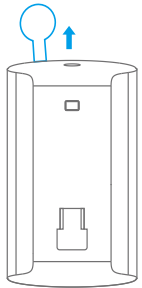


Step 2: Perform a Walk Test Sensor

Press the Test Mode button at the back of the sensor to put it in Test Mode.

Place the Sensor in your desired location (don't use screws at this point), arm the system and walk in front of the Sensor to test that the Sensor triggers the alarm.

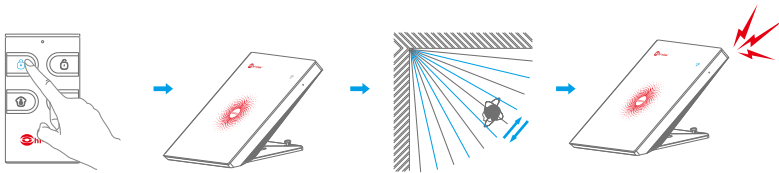


Step 3: Install the sensor

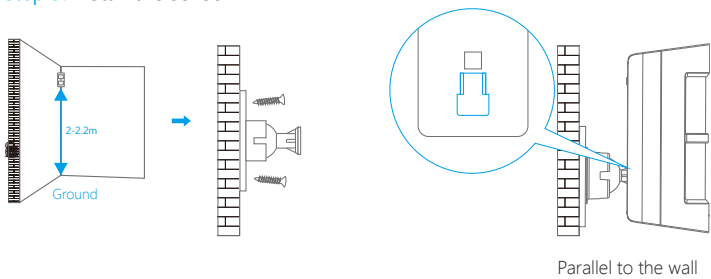


Replacing Accessory Batteries

Remote Control

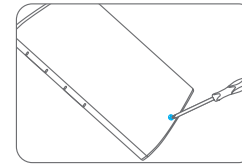


Remove the screw

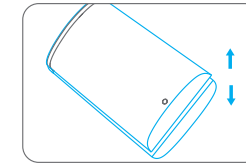


Open the casing

Door/Window Sensor

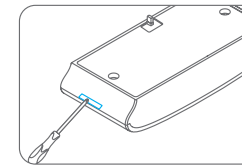


Open the casing


PIR Motion Sensor

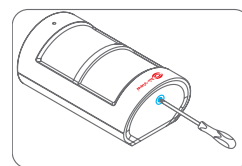

Remove the screw

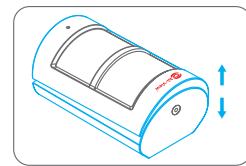

Open the casing

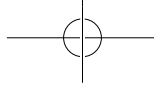

FAQ

Failed to connect to the WiFi

Check whether the WiFi Indicator on the Control Panel has stopped flashing

If the WiFi Indicator stops flashing and the Control Panel cannot be controlled from the App, please make sure that your local WiFi network is available and working properly.

Check that the WiFi name and password are correct.

Connect to a 2.4G WiFi network instead of 5G

Check that the Power Adapter is connected to the Control Panel.

Re-linking the Control Panel to the Router again by following the steps on page 7

The WiFi indicator and the status indicator are on, but I can't control the alarm by App

Check that your smartphone is connected to a WiFi network.

Wait a few minutes to see if the WiFi indicator and the status indicator start flashing. If they do, your local WiFi network is not stable. Make sure that the Control Panel is located in an area with good WiFi coverage and then re-pair with your local WiFi network.

No response from the Control Panel when a Sensor is triggered

The Sensor is not within range of the Control Panel.

Check that the Sensor has been successfully paired to the Control Panel: Press any Button on the Remote Control, arm the system and separate the Contact from the Magnetic Sensor or press the Test Button on the Motion Sensor. You can re-pair the Sensor to the Control Panel by following the instructions in the App – [Edit Accessories] – [Show Me How]

I can't Arm or Home Arm (Part Arm) my alarm by App

If the alarm has been triggered and hasn't been disarmed and a user tries to Arm or Home Arm the System, an error notification will appear stating "Operation failed". In event of Operation Failure first disarm the system and then try again.

How to delete an Accessory

You can delete any Sensor in the App by going to [Edit Accessories] and tapping the 'bin' icon in the top right hand corner of the screen.

To delete all accessories press and hold the [Learn] button inside the Control Panel for 3 seconds, the Control Panel will beep once to indicate that all accessories have been deleted.

No sound when alarming

Check that the Control Panel Alarm volume is not set to mute and the ring time is not set to '0'.

Adjust the volume and the ring time accordingly.

How to reset the alarm system

Press and hold the [WiFi] button inside the Control Panel for 7 seconds.

You will hear one short beep after 3 seconds and then a long beep after another 4 seconds.

The reset has been completed and all the settings have been restored to default conditions.

Please note that this process does not delete any Sensors.

I've done the reset but I keep receiving notifications from the Control Panel

To stop receiving notifications from the Control Panel you can either do a Reset or Delete User (submenu 'More') within the App, but make sure the panel has been connected with WiFi network before the operation.

Specifications

Control Panel

| | |
|-----------------------------|--|
| Power Supply | DC 12V 500 mA |
| Battery | 3.7V 600 mAh Li-ion x 1pc |
| Battery Life Recharge Cycle | 300 times |
| WiFi | IEEE 802.11b/g/n |
| Standby Current | <27mA |
| Alarm Current | <180 mA |
| Internal Siren | 85 dB |
| Optional Accessories | 10 Remote Controls, 50 Sensors |
| Radio Frequency | 433.92 MHz |
| Housing Material | ABS Plastic |
| Operating Condition | Temperature 0°C~+55°C Relative Humidity <80% (non-condensing) |
| Control Panel Dimensions | 125 x 150 x 30 mm (L x W x H) |
| Bracket Dimensions | 87.5 x 81.5 x 12 mm (L x W x H) |

Remote Control

| | |
|-----------------------|--|
| Power Supply | DC 3V (CR2025 lithium battery x 1pc) |
| Transmit Current | <7 mA |
| Transmitting Distance | <80 m (open area/no interference) |
| Radio Frequency | 433.92 MHz |
| Housing Material | ABS Plastic |
| Operating Condition | Temperature 0°C~+55°C Relative Humidity <80% (non-condensing) |
| Dimensions | 53 x 31 x 11 mm (L x W x H) |

Door/ Window Sensor

| | |
|------------------------|--|
| Power Supply | DC 3V (CR2032 lithium battery x 2pcs) |
| Static Current | <5 uA |
| Alarm Current | <9 mA |
| Transmitting Distance | <80 m (open area/no interference) |
| Radio Frequency | 433.92 MHz |
| Housing Material | ABS Plastic |
| Operating Condition | Temperature 0°C~+55°C Relative Humidity <80% (non-condensing) |
| Transmitter Dimensions | 71 x 31.5 x 15 mm (L x W x H) |
| Magnet Dimensions | 71 x 12.5 x 15 mm (L x W x H) |

Pet Immune PIR Motion Sensor

| | |
|-----------------------|--|
| Power Supply | DC 3V (AA 1.5V LR6 battery x 2pcs) |
| Static Current | <25 uA |
| Alarm Current | <13 mA |
| Detection Scope | 8m/110° |
| Transmitting Distance | <80 m (open area/no interference) |
| Radio Frequency | 433.92 MHz |
| Housing Material | ABS Plastic |
| Operation Condition | Temperature 0°C~+55°C Relative Humidity <80% (non-condensing) |
| Detector Dimensions | 100 x 59 x 43 mm (L x W x H) |
| Bracket Dimensions | 52 x 30 x 26.5 mm (L x W x H) |