


Accessories List

Current Transformer



For user consumption metering in Single-phase M-Combiner (MC100/MC100L)

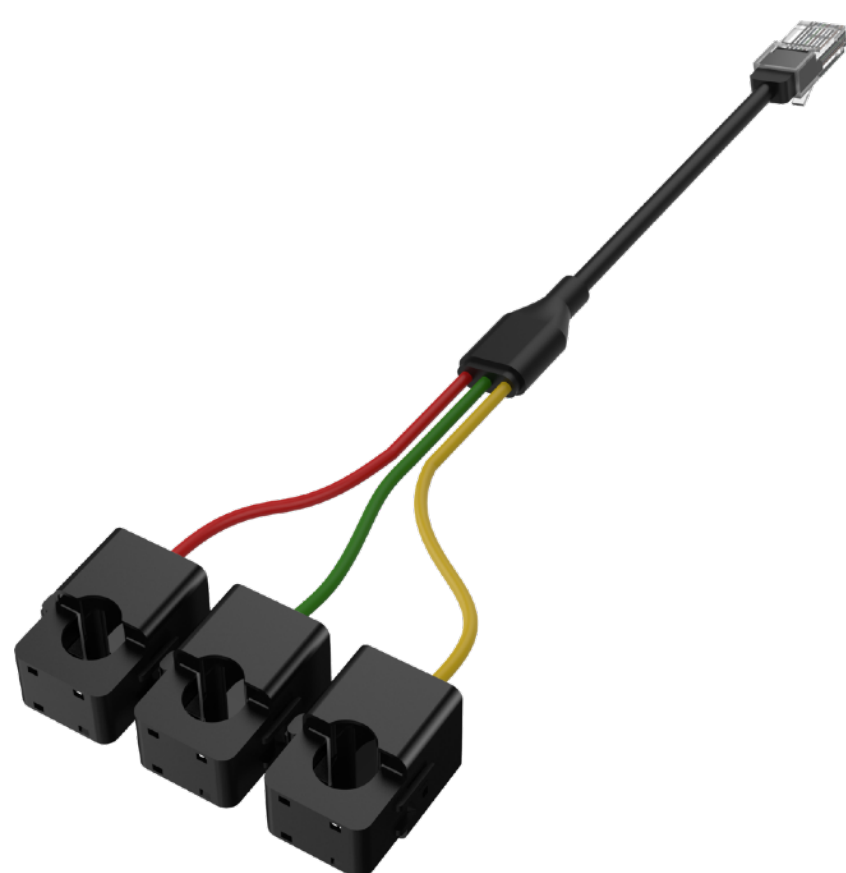

For user consumption metering in Three-phase M-Combiner (MC100-T)



CT extension cable (15 m)

Parameters	Split-core CTs
Nominal frequency	50/60 Hz
Nominal primary current	250 A
Turns ratio	2000:1
Rated load	20 Ω
Accuracy	≤0.5%
Dimensions	36 mm x 47 mm
Aperture	16 mm
Cable length	5,000±80 mm
Operation temperature	-20 to 60°C
Altitude	3000 m


Disconnect Tools



Used to disconnect PV DC connectors and AC connectors

- 1 For disconnecting the AC cable connector
- 2 For disconnecting the DC cable connector

M-Cable

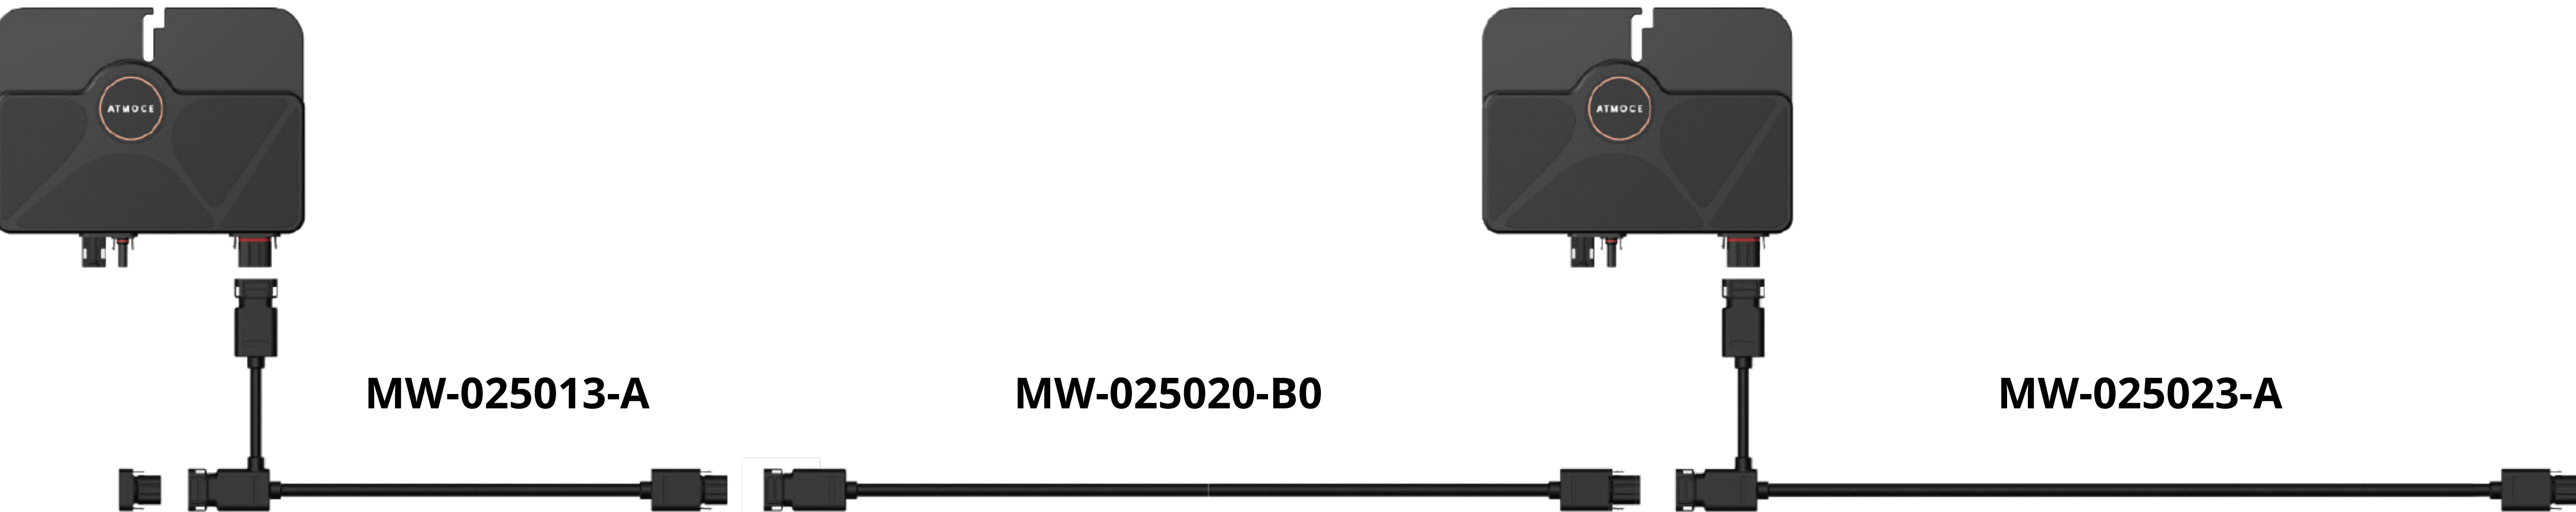


Model	MW-025013-A	MW-025023-A	MW-025020-B0
Type	Three-terminal AC cable	Three-terminal AC cable	Two-terminal AC cable
Copper conductor and length	 1.3 m, 2.5 mm ²	 2.3 m, 2.5 mm ²	 2 m, 2.5 mm ²
Temperature	90 °C		
Voltage rating	600 V (connector rating 300 V)		
Maximum nominal voltage	300 Vac		
Scenario	Installation of PV modules in portrait	Installation of PV modules in landscape	AC extension cable (male/female)

M-Adaptor

A quick connector to replace traditional rooftop junction box.



Single-phase junction adaptor

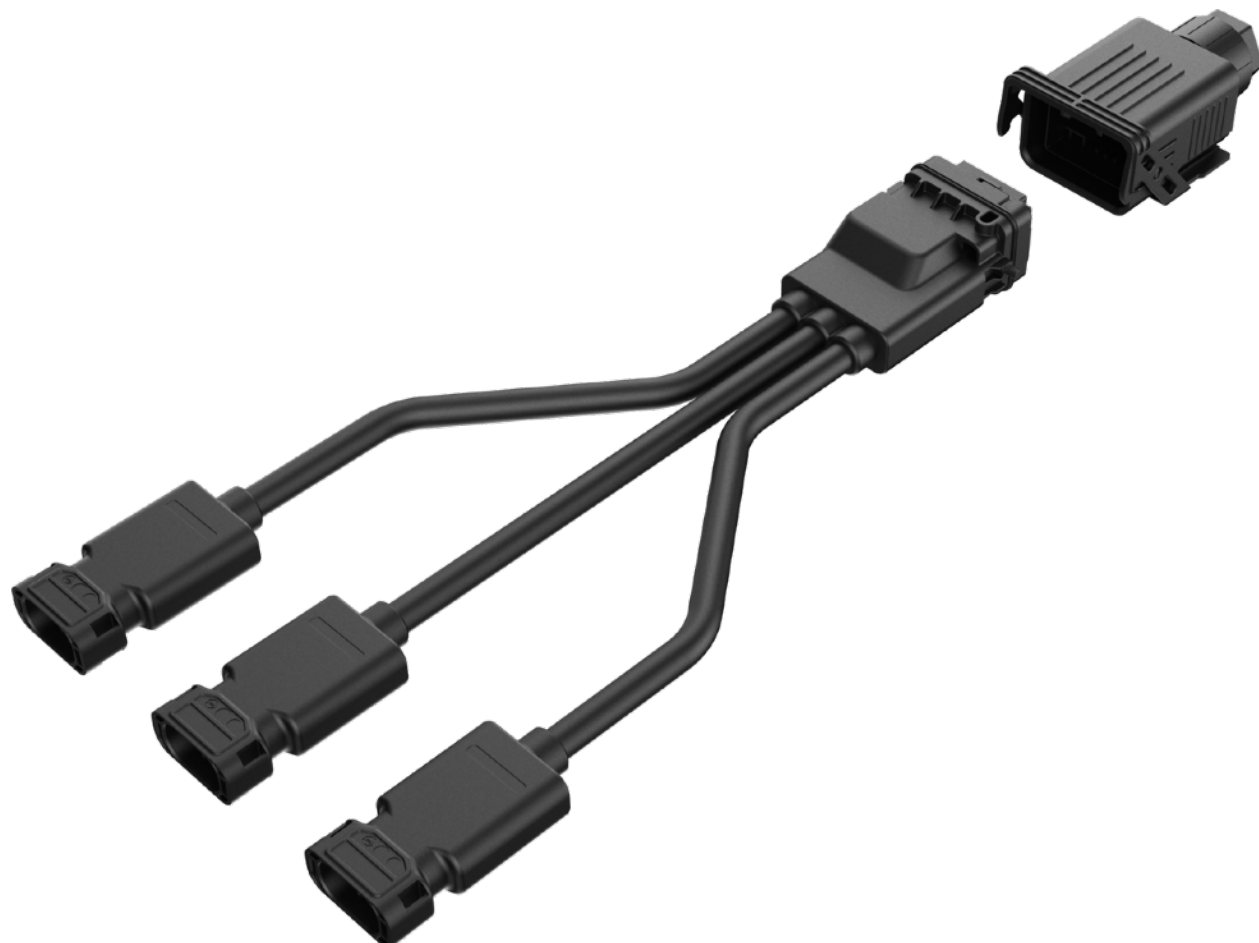


Three-phase junction adaptor



2 in1 adaptor

Terminal Caps

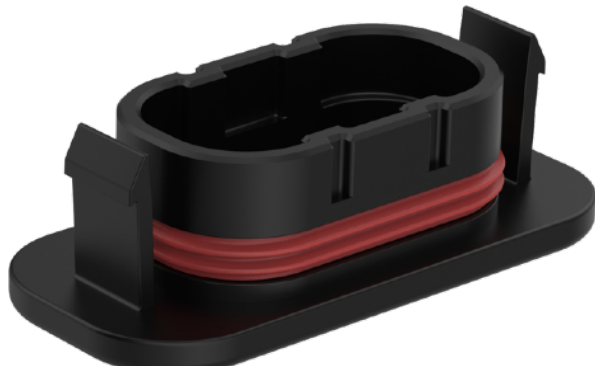Diagram	Type	Description
	Microinverter DC connector sealing cap (positive pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter DC connector sealing cap (negative pole)	Usually covers the DC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	Microinverter AC connector sealing cap	Usually covers the AC connector of the microinverter. When the microinverter needs to be installed, the sealing cap needs to be removed.
	M-Cable AC connector sealing cap	When connecting AC cables, cover the unused AC connectors.