Installed DP-4100F System Example

Up to 2 x **Sigma-X18B** wired in parallel per channel can be used, providing bass reinforcement. satellite speaker options can be chosen as shown in the diagram, with a maximum of 4 per channel wired in parallel.

Amplification is handled with a single **DP-4100F**.

The system is suitable for fixed install applications such as clubs, bars, house of worship, and multi-function spaces.
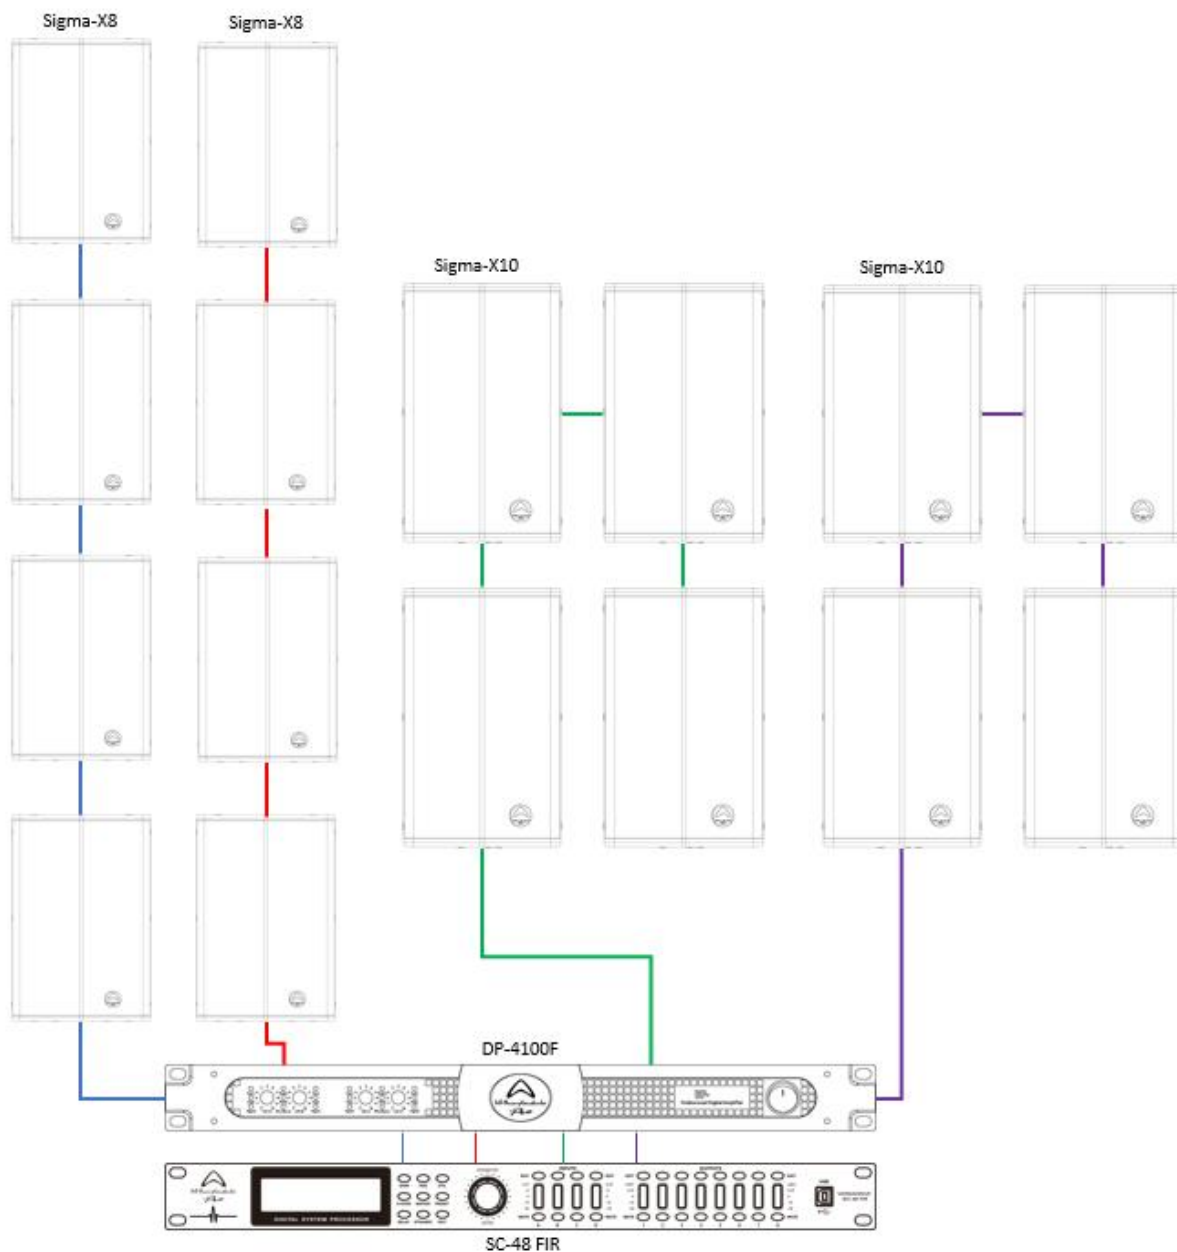
Installed DP-4035 System Example

Up to 4 x **Sigma-X8** or **Sigma-X10** can be wired in parallel per channel

Amplification is handled with a single **DP-4035**, DSP is provided with a single **SC-48 FIR.**

The system is suitable for fixed install applications such as retail, clubs, bars, restaurants, house of worship, and multi-function spaces.
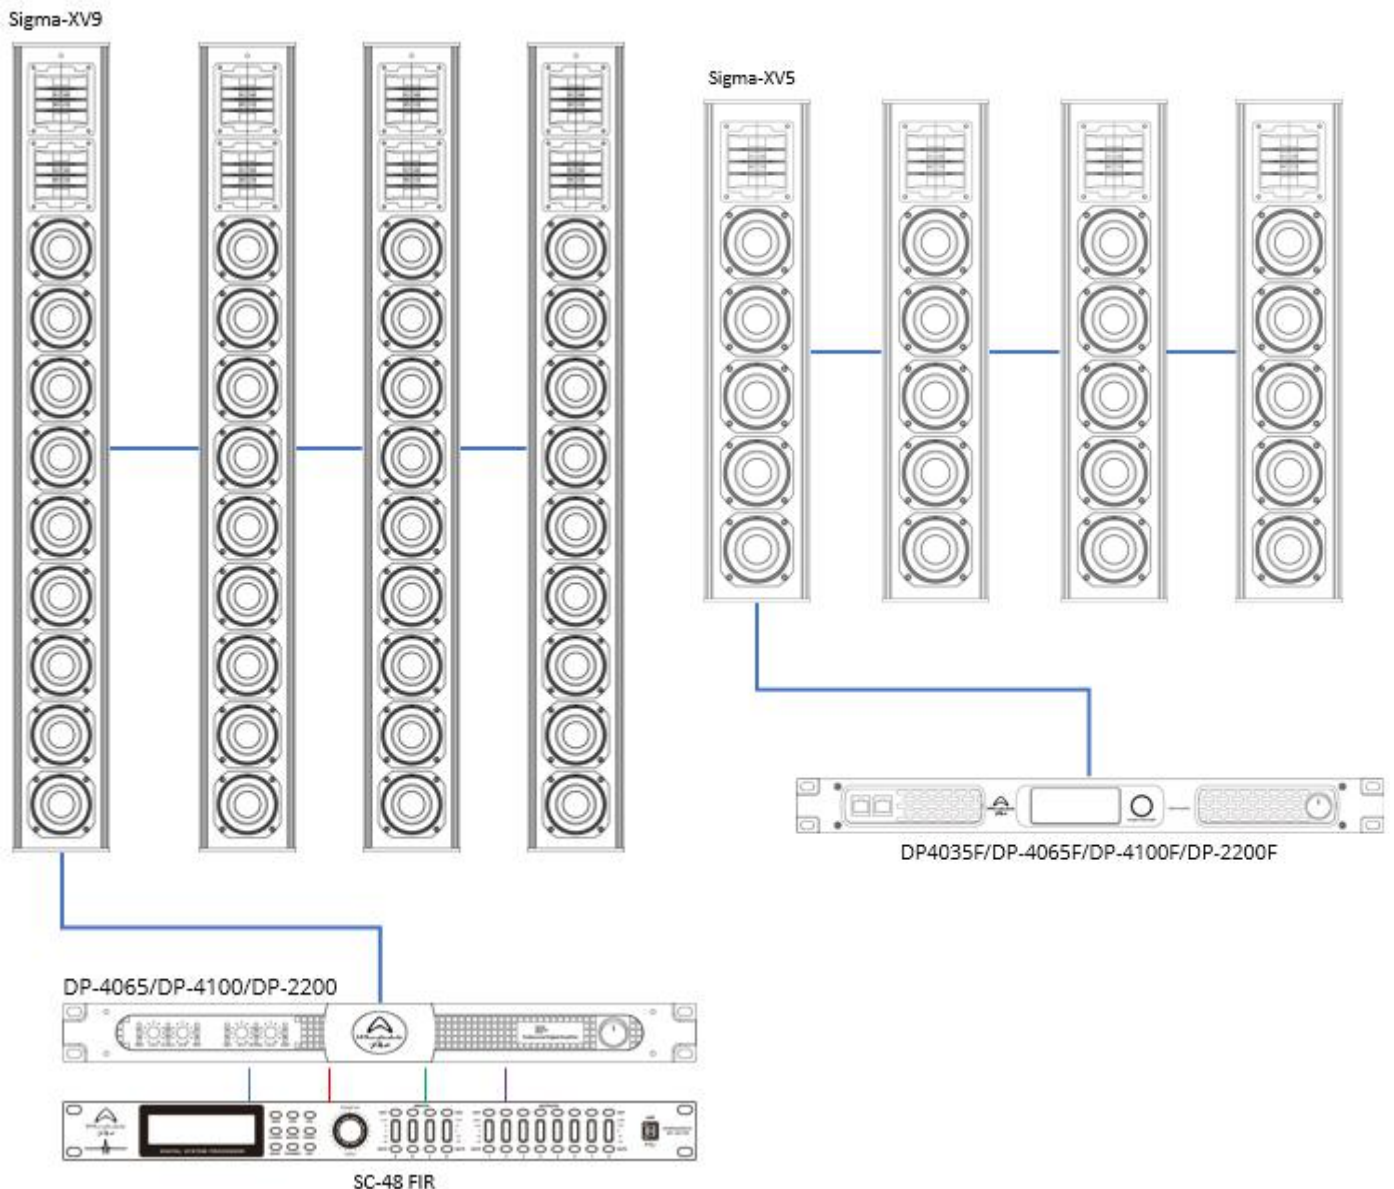
Installed XV System Example

Up to 4 x **Sigma-XV5** can be wired per channel using **DP-4035, DP-4035F** or higher rated power model.

Up to 4 x **Sigma-XV9** can be wired in parallel per channel using **DP-4065**, **DP-4065F** or higher rated power model.

Amplification is handled with a **DP or DP-F** series, DSP is provided with a single **SC-48 FIR** when using amplifier without DSP.

The system is suitable for fixed install applications such as transport, retail, clubs, bars, restaurants, house of worship, and multi-function spaces.

Installed XVT Column System Example

A large number of **Sigma-XV5T** or **Sigma-XV9T** can be wired in parallel per channel when using transformer taps in a 70 or 100 volt constant voltage system.

Amplification can be handled with **DP-4065/DP-4100/DP-2200** models and the corresponding **DP-F** models.

Please ensure total total sum of transformer tapped wattages does not exceed 50% of the rated power of amplifier channel.

The system is suitable for fixed install applications such as retail, clubs, bars, restaurants, and multi-function spaces.

Sigma-XV9T

Tap B — Tap C — Tap D + Tap E etc…

Tap A

DP-4065/DP-4100/DP-2200

SC-48 FIR

Transformer taps A+B+C+D+ etc….
must be equal to or less than 50%
of rated channel power

Please refer to user manual for
more information.

Sigma-XV5T

Tap B — Tap C — Tap D + Tap E etc…

Tap A

DP-4065F/DP-4100F/DP-2200F