

The background of the advertisement is a high-quality photograph of a Gokusen Smart Auto Blender, model GK-7800. The image is heavily stylized with a blue color overlay. The blender is shown from a low angle, highlighting its sleek, modern design. A hand is visible in the lower right, with a finger pressing one of the touch-sensitive buttons on the control panel. The control panel features a digital display showing '00:00' and several circular buttons labeled with functions like 'Blend', 'Cook', 'Steam', 'Boil', 'Keep Warm', and 'Start/Cancel'. The brand name 'gokusen' is printed on the front of the blender's base. The overall aesthetic is clean and tech-oriented.

gokusen

MULTI FUNCTIONAL
SMART AUTO BLENDER
GK-7800

COOKINGCO
OOKINGCOO
KINGCOOKIN
INGCOOKING
COOKINGCO
OOKINGCOO
KINGCOOKIN
INGCOOKING



เรียน ลูกค้า

ขอแสดงความยินดีกับการซื้อสินค้าของคุณ โปรดอ่านคำแนะนำต่อไปนี้อย่างละเอียดและปฏิบัติตาม เพื่อป้องกันความเสียหายที่อาจเกิดขึ้น เราไม่รับผิดชอบต่อความเสียหายที่เกิดจากการเพิกเฉยต่อคำแนะนำและการใช้งานที่ไม่เหมาะสม

โปรดสแกน QR CODE เมื่อต้องการสอบถามเพิ่มเติมเกี่ยวกับผลิตภัณฑ์



สารบัญ

คำแนะนำด้านความปลอดภัย	2
ภาพรวมของอุปกรณ์	3
แผงควบคุม	4
การใช้งาน	5
ฟังก์ชัน	6
สูตรอาหาร	7
การทำความสะอาด	8
การแก้ไขปัญหา	10
รหัสข้อผิดพลาด	12
คำแนะนำในการกำจัด	14


ข้อมูลทางเทคนิค

รุ่น	GK-7800
กำลังไฟ	220-240 V ~ 50 Hz
พลังงาน	300 W
พลังงาน (โหมดร้อน)	1250 W
ความเร็วรอบปั่น	30,000 RPM
ความจุ	300-1200 ml


คำแนะนำด้านความปลอดภัย

- ตรวจสอบให้แน่ใจว่าเชื่อมต่อเครื่องกับเต้ารับที่มีแรงดันไฟฟ้าเหมาะสมเท่านั้น
- อย่าปล่อยเครื่องทิ้งไว้โดยไม่มีใครดูแลในขณะที่เสียบปลั๊กอยู่ ถอดปลั๊กเครื่องออกจากเต้ารับหลังจากใช้งานแต่ละครั้ง
- เด็กที่มีอายุตั้งแต่ 8 ปี ตลอดจนผู้ที่มีความบกพร่องทางร่างกาย ทางประสาทสัมผัสและจิตใจ บุคคลอาจใช้เครื่องได้ก็ต่อเมื่อคุ้นเคยกับการใช้งานของผู้รับผิดชอบและเข้าใจข้อควรระวังด้านความปลอดภัยรวมถึงสถานที่แล้วเท่านั้น
- ตรวจสอบให้แน่ใจว่าเด็กๆ ไม่ได้เล่นกับเครื่อง
- อย่าให้เครื่องโดนฝนหรือแสงแดดโดยตรง
- ตรวจสอบให้แน่ใจว่าเด็กๆ ไม่ได้เล่นกับเครื่อง
- ตรวจสอบให้แน่ใจว่าสายไฟไม่สัมผัสกับพื้นที่ร้อน
- ห้ามจุ่มเครื่อง ปลั๊ก สายไฟ ในน้ำหรือของเหลวอื่นๆ
- ห้ามสัมผัสชิ้นส่วนที่เคลื่อนไหวระหว่างการใช้งาน
- วางเครื่องบนพื้นราบที่มั่นคง
- เครื่องจะทำงานเมื่อถ้วยอยู่ในตำแหน่งที่ถูกต้องเท่านั้น
- ห้ามใส่ส่วนผสมในขณะที่เครื่องกำลังทำงาน
- ห้ามใส่เครื่องหากมีข้อบกพร่อง
- ปิดและถอดปลั๊กเครื่องก่อนเคลื่อนย้ายถ้วย
- ถอดปลั๊กเครื่องทุกครั้งเมื่อไม่ใช้งานและเมื่อทำความสะอาด ประกอบ หรือถอดอุปกรณ์เสริม
- อย่าดึงปลั๊กออกจากเต้ารับโดยใช้สายเคเบิลและใช้มือจับไว้เสมอ
- ห้ามใช้เครื่องหากปลั๊กหรือสายไฟชำรุดหรือเครื่องทำงานผิดปกติ ให้เครื่องตรวจสอบโดยผู้เชี่ยวชาญ
- หากสายไฟเสียหาย จะต้องเปลี่ยนโดยผู้ผลิตหรือช่างบริการที่มีคุณสมบัติเหมาะสม เพื่อป้องกันไฟฟ้าช็อตและการบาดเจ็บ
- เครื่องนี้มิได้สำหรับใช้ในบ้านและในสภาพแวดล้อมที่คล้ายคลึงกันเท่านั้น ไม่ได้มีไว้ใช้สำหรับพาณิชยกรรม
- หากคุณทิ้งเครื่องใช้ไฟฟ้า ให้ตัดสายไฟและนำชิ้นส่วนที่เป็นอันตรายทั้งหมดออก เพื่อไม่ให้เด็กๆ ได้รับบาดเจ็บหากเล่นด้วย
- เก็บวัสดุบรรจุภัณฑ์ให้พ้นมือเด็ก เพื่อไม่ให้ทำร้ายตัวเอง

ภาพรวมของอุปกรณ์

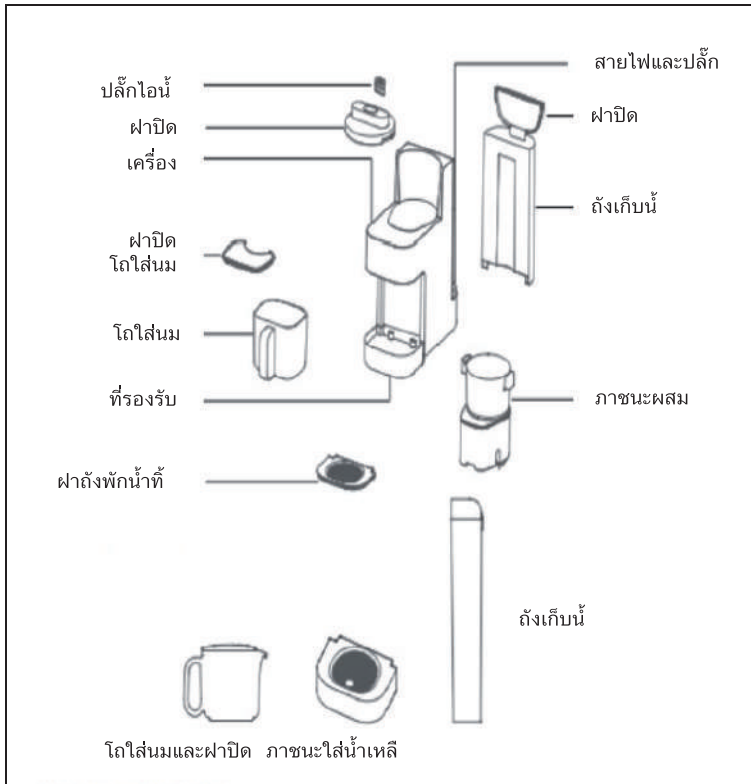

แผงควบคุม

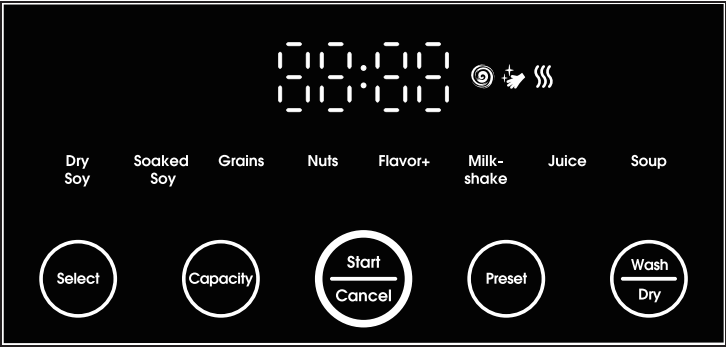

ก่อนใช้งานครั้งแรก

กดปุ่ม Wash/Dry 2 ครั้ง เพื่อเข้าสู่โหมด Deep Clean เมื่อปิดภาชนะผสม ตรวจสอบให้แน่ใจว่า เครื่องหมายบนฝาและบนเครื่องอยู่ในแนวเดียวกัน

คำเตือน/เคล็ดลับ

1. ใส่ส่วนผสมตามคำแนะนำเพื่อหลีกเลี่ยงไม่ให้หม้อล้น ทางออกอุดตัน และการผสมที่ไม่ดี
2. เมื่อใช้ฟังก์ชัน Milkshake และ juice อย่าเพิ่มอาหารที่มีเส้นใยมากเกินไป
มิฉะนั้นหัวฉัดนมอาจอุดตัน
3. อย่าใส่ส่วนผสมที่ของแข็ง (เช่น น้ำตาลก้อน น้ำแข็ง ฯลฯ) เพื่อหลีกเลี่ยงไม่ให้เครื่องเสียหาย

การใช้งาน

การเตรียมเครื่องดื่ม

1. เชื่อมต่อเครื่องเข้ากับแหล่งจ่ายไฟ
2. เปิดเครื่องโดยแตะปุ่ม Start/Stop ตอนนี้หน้าจอแสดงผลจะสว่างขึ้น
3. คุณสามารถเลือกโปรแกรมต่างๆ ได้ ด้วยปุ่ม Select กดหลายๆ ครั้งเพื่อเลือกเมนูที่ต้องการ
4. กดปุ่ม Capacity ซ้ำๆ เพื่อเลือกปริมาณ 300 มล./600 มล./900มล./1,200 มล. (ความจุมาตรฐาน 600 มล.)
เมื่อเลือกปริมาณมากเครื่องจะประมวลผล 2 รอบ เพราะต้องเทส่วนผสมทั้งหมดลงในภาชนะผสมที่จุดเริ่มต้น
5. เติมน้ำในถังเก็บน้ำ
6. เทส่วนผสมทั้งหมดในภาชนะผสม
7. กดปุ่ม Start/Stop เพื่อเริ่มโปรแกรม
8. กดปุ่ม Start/Stop อีกครั้ง ในช่วงนาทียแรกเพื่อหยุดโปรแกรม
9. เครื่องทำงานเสร็จสิ้น เทเครื่องดื่มของคุณลงในภาชนะแก้ว ระวัง! ภาชนะร้อนมาก ถือภาชนะด้วยมือจับเท่านั้น
หลังจากกระบวนการผสมเสร็จสิ้น เครื่องจะเปลี่ยนเป็นโหมดสแตนด์บายโดยอัตโนมัติ ตอนนี้คุณสามารถ
เอาถาดนมออกได้ ระบบเครื่องจะเข้าสู่ฟังก์ชันทำความสะอาดตัวเองโดยอัตโนมัติ และไฟแสดงฟังก์ชันที่
ความสะอาดตัวเองจะสว่างขึ้น ล้างถังเก็บน้ำที่เหลือหลังจากทำความสะอาด

ตั้งเวลา/ฟังก์ชันเวลา

คุณสามารถตั้งค่าเครื่องเพื่อเตรียมเครื่องดื่มในภายหลังได้

1. เมื่อต้องการทำสิ่งนี้ ให้เลือกโปรแกรมและความจุ
2. กดปุ่มตั้งเวลา โดยการกดปุ่มหลายๆ ครั้ง คุณสามารถเพิ่มเวลาที่ตั้งไว้ล่วงหน้าได้ทีละ 30 นาที
จาก 30 นาที สูงสุด 24 ชั่วโมง เซตเริ่มต้นตั้งไว้ คือ 8 ชั่วโมง โปรแกรมจะเสร็จสิ้นหลังจาก 8 ชั่วโมง
3. เลือกโปรแกรม ด้วยเหตุผลด้านความปลอดภัย โปรแกรม “Soaked Soy” และ “Juice” จะแยกกัน
4. ใส่ส่วนผสมแล้วกดปุ่ม Start/Stop
5. คุณสามารถหยุดโปรแกรมและเวลาได้โดยกดปุ่ม Start/Stop อีกครั้งในช่วงนาทียแรก ตอนนี้คุณสามารถทำการ
เลือกใหม่ หลังจากกดปุ่ม Preset ค้างไว้ 5 วินาที เพื่อเวลาบนหน้าจอจะเพิ่มขึ้น และคุณสามารถปล่อยปุ่ม
เมื่อถึงเวลาที่ต้องการ

หมายเหตุ : เพื่อสุขภาพและความปลอดภัยของคุณ

- หากอุณหภูมิห้องสูงกว่า 30°C อยู่ตั้งเวลาให้เกิน 12 ชั่วโมง เพื่อหลีกเลี่ยงการก่อตัวของเชื้อโรค

ฟังก์ชั่น

โปรแกรม	อธิบาย	วัตถุดิบ
Dry Soy / Soaked Soy	สำหรับถั่วเหลืองแห้งหรือแช่และผักอื่นๆ	สำหรับถั่วเหลืองแห้งหรือแช่และผักอื่นๆ
Nuts	สำหรับถั่วต่างๆ เมล็ดพืช	- อัลมอนด์และเฮเซนัท**** (คั่ว ลวก หรือแบบธรรมชาติ) - เมล็ดมะม่วงหิมพานต์ - มะพร้าวตากแห้ง** - แปรงลูปิน* - ถั่วแมคคาเดเมีย
Grains	สำหรับธัญพืช สารทดแทนธัญพืช	- ข้าว*** - ข้าวโอ๊ตและสเปลท์ - บัควีท* - เมล็ดป่านเปลือก - ข้าวฟ่าง
Juice	สำหรับผลไม้ 500 กรัม ผลไม้เนื้ออ่อนนุ่ม (เบอร์รี่ ฯลฯ) เติมผลไม้สูงสุด 250 กรัม	- กล้วย - เบอร์รี่ - ลูกพีช - แอปเปิ้ลคอก - ผลไม้เนกเตอร์
Milkshake	สำหรับเครื่องดื่มไอศกรีมเนื้อครีม	- นม - ไอศกรีม - ผลไม้หรือเครื่องปรุงรส
Soup	สำหรับอุ่นหรือซุปรว	- ผัก - ครีมหรือน้ำซุปรว - เครื่องเทศ - ข้าว/ธัญพืช
Flavour+	สำหรับผลิตภัณฑ์ที่ไม่ใช่ นมที่ปรุงแต่งรส	- ผลไม้ - ซอตโกแลต

หมายเหตุสำหรับ

ฟังก์ชั่นซูป :

ถ้าใส่แครอท ซูปจะไม่สามารถไหลผ่านช่องได้ ดังนั้นหากน้ำซูปข้นเกินไป โปรดถอดอุปกรณ์และเทน้ำซูปจากโถน้ำด้วยมือ

*	แช่น้ำ
**	ซูด ต้องขัดหรือทำความสะอาดรอบที่ 2 เพราะวัตถุดิบเช่นมะพร้าวที่แห้งมีผิวเหนียว ต้องล้างให้สะอาด
***	ล้างแล้วปรุง
****	ควรใช้ถั่วที่ปอกเปลือกแล้วเพราะอาจทำให้โถปั่นสกปรก

สูตรอาหาร

เครื่องดื่ม	ส่วนผสม	โทมด
นมถั่วเหลือง	300 ml: 30 g 600 ml: 50 g ถั่วเหลืองแช่น้ำ	Dry soy Soaked soy
นมเมล็ดมะม่วงหิมพานต์, นมอัลมอนต์, นมแมคคาเดเมีย	300 ml: 25 g 600 ml: 40 g ถั่วต่างๆ	Nuts
นมกล้วย	300 ml: 25 g อัลมอนต์ , ½ กล้วย 600 ml: 50 g อัลมอนต์ , 1 กล้วย	+Flavour
นมช็อกโกแลต	300 ml: 25 g อัลมอนต์, น้ำตาลเล็กน้อย ,ผงโกโก้เล็กน้อย 600 ml: 50 g อัลมอนต์, น้ำตาลเล็กน้อย ,ผงโกโก้เล็กน้อย	+Flavour
นมข้าวโอ๊ต	300 ml: 20 g 600 ml: 40 g ข้าวโอ๊ต	Grains
นมถั่วเขียว	300 ml: 25 g 600 ml: 50 g เมล็ดถั่วเขียว	Grains
นมบัควีท	300 ml: 20 g 600 ml: 40 g บัควีท	Grains
นมสเปลท์	300 ml: 15 g 600 ml: 24 g สเปลท์	Grains
นมข้าว	300 ml: 25 g 600 ml: 40 g ข้าว	Grains
นมมะพร้าว	300 ml: 25 g 600 ml: 40 g มะพร้าวตากแห้ง	Grains
น้ำผลไม้, น้ำแดงโม น้ำสตอเบอรี่, น้ำมะม่วง	350 g ผลไม้	Juice

หมายเหตุ : คาวานีโหลดแอปพลิเคชัน Klarstein เพื่อทำเมนูสุขภาพ

iOS	Android
	

การทำความสะอาด

ห้ามใส่ส่วนประกอบแต่ละชิ้นของเครื่องในเครื่องล้างจาน หลังจากแต่ละโปรแกรม เครื่องจะสลับไปที่การทำความสะอาดตัวเองอัตโนมัติ การทำความสะอาดใช้เวลาประมาณ 7 นาที ต้องใช้น้ำเปล่าเท่านั้นในการทำความสะอาดตัวเอง หลังจากใช้โปรแกรมทำความสะอาดตัวเองแลปล่อยให้ภาชนะผสมแห้ง 2. คุณยังสามารถเลือกโหมดการทำความสะอาดได้โดยตรงโดยใช้จอแสดงผล เช่น หากไม่ได้ใช้งานเครื่องเป็นเวลานาน หลังจากเตรียมเครื่องดีมรสหวานแล้ว (ใส่น้ำตาล ไซรัป หรือผลไม้) หรือเมื่อต้องการทำความสะอาดชั้นพื้นฐาน

- เลือกเมนูและกดปุ่ม Wash/Dry (ถอดโถใส่หม้อออก ก่อนทำความสะอาด)และ หน้าจอ LED จะแสดงเวลาที่จะแสดงเวลาที่ต้องใช้สำหรับฟังก์ชันที่เกี่ยวข้อง
- กดปุ่ม 4 ครั้ง สำหรับรอบการซักล้างอย่างรวดเร็วและ กด 2 ครั้ง สำหรับกาซักล้างอย่างละเอียด กดปุ่ม 3 ครั้งเพื่อให้แห้งด้วยความร้อน (เปิดฝาดังผสมระหว่างการอบแห้งด้วยความร้อน)
- หลังจากสิ้นสุดรอบการทำความสะอาดตัวเอง ให้เปิดฝาเพื่อให้ภาชนะผสมแห้ง

การล้างอย่างรวดเร็ว : กดปุ่ม Wash/Dry 1 ครั้ง จากนั้นกดปุ่ม Start/Stop เพื่อเริ่มวงจร หากต้องการหยุดการทำความสะอาด ให้กดปุ่ม Start/Stop เมื่อใดก็ได้ในระหว่างรอบการทำความสะอาด

การล้างอย่างดี : หากโถผสมมีรอยเปื้อนเมื่อเวลาผ่านไป ให้ใช้ฟังก์ชัน “Fine Wash” ใช้น้ำยาทำความสะอาดเล็กน้อยก่อนเริ่มโปรแกรมเมื่อใช้งานครั้งแรก ตรวจสอบให้แน่ใจว่าทำความสะอาด ไม่ได้ใส่น้ำยาทำความสะอาดเข้มข้นเกินไปเพราะอาจทำให้เกิดฟองมากเกินไปในโถผสม กดปุ่ม Wash/Dry 2 ครั้ง จากนั้นกดปุ่ม Start/Stop เพื่อเริ่มรอบการทำความสะอาดแบบละเอียด หากสิ้นสุดโปรแกรมแล้วยังมีฟองตกค้าง ให้ล้างในรอบการล้าง 3 นาที หลังจากสิ้นสุด ให้เปิดฝาภาชนะผสมให้แห้ง

- นอกจากนี้ คุณควรทำความสะอาดหมุดโลหะที่เข้าไปส่วนผสมอย่างสม่ำเสมอ ซึ่งเป็นวาล์วซิลิโคนที่น้ำไหลเข้าสู่โถผสม เช่นเดียวกันทำความสะอาดซิลิโคนด้วยผ้าชุบน้ำหมาดๆ
- ทำความสะอาดถึงเก็บน้ำอย่างสม่ำเสมอเพื่อให้สะอาด
- ทำความสะอาดภายนอกเครื่องด้วยผ้านุ่มชุบน้ำหมาดๆ แล้วเช็ดให้แห้งอย่างทั่วถึง
- โปรแกรมทำความสะอาด ห้ามถอดสายไฟออกจากเครื่องระหว่างการทำงานหรือขัดจังหวะ




คำเตือน

เสี่ยงบาดเจ็บ! หากคุณต้องการทำความสะอาดใบมีดด้วยมือ ให้ปิดเครื่อง และถอดปลั๊กไฟออก ระวังใบมีดคมมาก

การจัดสิ่งตกค้างจากภาชนะผสม :

ทำตามขั้นตอนด้านล่างหากคุณต้องการเอาสารตกค้างหรือนมที่หลงเหลือในภาชนะผสม (เนื่องจากไฟฟ้าขัดข้องหรือสาเหตุอื่นๆ)

- เชื่อมต่อเครื่องกับแหล่งจ่ายไฟ
- ทันทีที่สัญลักษณ์ทั้งหมดแสดงบนจอแสดงผล คุณสามารถนำสิ่งตกค้างออกได้ โดยกดปุ่ม Wash/Dry ค้างไว้
- จากนั้นเริ่มโปรแกรมทำความสะอาดด้วยตนเอง กดปุ่ม Wash/Dry

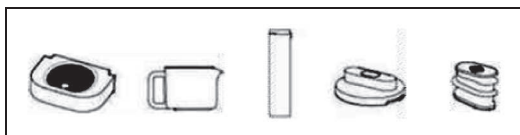

อุปกรณ์เสริมที่แสดงด้านบนสามารถถอดออกจากเครื่องและล้างด้วยมือ : ถังน้ำที่เหลือ, โถนม, ฝาปิดโถนม, ถังเก็บน้ำ, ปลั๊กไอน้ำ หลังจากทำความสะอาดอุปกรณ์ทั้งหมดแล้ว ขอแนะนำปλύยให้อากาศแห้งและเก็บไว้ในที่แห้งและมีอากาศถ่ายเทสะดวก

คราบหินปูน/ตะกรัน :

ใช้งานเครื่องอย่างระมัดระวังและใช้น้ำกรองเท่านั้น โปรดทราบว่าควรทำความสะอาดคราบหินปูน/ตะกรันอย่างสม่ำเสมอ ขอแนะนำให้คุณทำทุกๆ 50 ครั้ง หรือเมื่อใดก็ตามที่คุณพบคราบตะกรันบน/ในเครื่อง ดำเนินการดังต่อไปนี้เพื่อขจัดคราบตะกรัน

1. เติมน้ำเบกกิ้งโซดา 3 ช้อนชาลงในถังน้ำแล้วเติมน้ำ
2. เลือกใช้งานโปรแกรม สำหรับ 300 ml. โดยไม่ใส่ส่วนผสม
3. เมื่อเสร็จสิ้น ถอดถังเก็บน้ำ ระบายน้ำที่เหลือออก(น้ำที่ผสมเบกกิ้งโซดา) รอ 1 ชั่วโมงแล้วเปลี่ยนน้ำสะอาดในถังเก็บน้ำ เสร็จสิ้น
4. หากยังสะอาดไม่เพียงพอ เลือกใช้งานโปรแกรมเครื่องดื่มอาหาร 2 โปรแกรม โดยไม่ใส่ส่วนผสม อย่างละ 1,000 ml. ทำซ้ำจนกว่าจะพอใจ

การแก้ไขปัญหา

ปัญหา	สาเหตุที่เป็นไปได้	วิธีการแก้ไข
ไฟแสดงสถานะ ไม่ทำงาน	ไฟแสดงสถานะ ไม่ทำงาน	เสียบปลั๊กไฟ
	หน้าจอแสดงผลชำรุด	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
ไฟแสดงสถานะ ไม่ทำงาน	ยังไม่เลือกโปรแกรม	เลือกโปรแกรมที่ต้องการ
	ถังเก็บน้ำไม่ได้เติมน้ำหรือ ไม่ได้ต่อเข้ากับเครื่อง	เติมน้ำลงในถังเก็บน้ำให้ถึง เครื่องหมายแล้วติด เข้ากับเครื่อง
	ถังเก็บน้ำไม่ได้เติมน้ำหรือ ไม่ได้ต่อเข้ากับเครื่อง	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
น้ำไม่ไหลลงโถผสม	ปั้มน้ำเสีย	ปั้มน้ำเสีย
	ตัวกรองที่ด้านล่างของ ถังเก็บน้ำถูกปิดกั้น	ถอดไส้กรอง ทำความสะอาด แล้วใส่กลับเข้าไปในถังเก็บน้ำ
มอเตอร์ทำงาน โดยไม่หยุด	อาจมีน้ำในเครื่องยนต์	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
เครื่องทำความร้อน ทำงานปิด/เปิดเอง	เซ็นเซอร์อุณหภูมิเสียหาย	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม

ปัญหา	สาเหตุที่เป็นไปได้	วิธีการแก้ไข
เครื่องไม่ตอบสนอง เวลากดปุ่ม	สวิตช์ปิดเร็วเกินไป และเครื่อง ไม่สามารถรีเซ็ตได้	หลังจากปิดเครื่องทิ้งไว้ 2 นาที ก่อนเปิดเครื่องอีกครั้ง
	บอร์ดจอแสดงผลชำรุด	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
ไม่สามารถ แปรรูปอาหารได้	วัตถุดิบมากหรือน้อยเกินไป	ใส่ส่วนผสมตามที่คู่มือแนะนำ
	ความผิดพลาดของอุปกรณ์	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
	เลือกโปรแกรมผิด	เลือกโปรแกรมให้ถูกต้อง

รหัสข้อผิดพลาด

โค้ด	คำอธิบาย	ทางแก้ไขที่เป็นไปได้
E01	โถนม/ฝาปิดโถนม ปิดไม่ถูกต้อง หรือไม่ถอดโถนมหรือฝาปิดก่อน ใช้งานโหมดทำความสะอาดตัวเอ	ตรวจสอบว่าโถนมและฝาปิดอยู่ใน ตำแหน่งที่ถูกต้องและ ถอดถ่วงนมและฝาปิดออกก่อน ใช้งานโหมดทำความสะอาดตัวเอ
E02	ไม่มีน้ำในถังเก็บน้ำหรื ตัวกรองที่ด้านล่างของถังเก็บน้ำอุดตัน	เติมน้ำหลังจากแก้ไขการอุดตันแล้ว
E03	ฝาโถผสมอยู่ในตำแหน่งที่ไม่เหมาะสม	จัดตำแหน่งฝารอบให้ถูกต้อง
E05	ส่วนผสมมากเกินไปทำให้ เครื่องทำงานหนัก	ใช้ส่วนผสมน้อยลง ทำความสะอาดเครื่อง แล้วลองอีกครั้ง
E06	อิเล็กโทรดระดับน้ำด้านบนถูกปิดกั้นหรือ มีส่วนผสมในเครื่องมากเกินไป	ทำความสะอาดอิเล็กโทรดหรือ ลดปริมาณส่วนผสมที่ใช้
E07	แรงดันไฟผิดปกติ	ตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้า ต่ำกว่า 160V หรือ มากกว่า 260V ใช้แหล่งจ่ายไฟที่มีการควบคุมความ สม่ำเสมอหรือไม่
E08	การสื่อสารที่ผิดปกติระหว่าง ตัวควบคุมหลักและไดรเวอร์	ติดต่อศูนย์บริการเพื่อ ตรวจสอบ ซ่อมแซม
E09	โถผสมหายไปหรือวางโถผสมไม่ถูกต้อง	ตรวจสอบให้แน่ใจว่าโถผสมอยู่บน เครื่องแล้วให้แห้งที่ถูกต้อง (สำหรับการใช้โถบด)

โค้ด	คำอธิบาย	ทางแก้ไขที่เป็นไปได้
E10	วาล์วทางออกอุดตันหรืออุดตันจากสิ่งแปลกปลอม	ทำความสะอาดทางออกหรือปิดเครื่องส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E11	เซ็นเซอร์อุณหภูมิชำรุด	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E12	วงจรไฟฟ้าของเซ็นเซอร์อุณหภูมิสำหรับโหมสที่ชำรุด	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E13	ความล้มเหลวในการตรวจจับการไหล	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E14	สูญเสียสัญญาณข้ามศูนย์	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E15	สวิตช์ตั้งเวลาทำความร้อน-ปิดโหมส	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E16	สวิตช์ตั้งเวลาทำความร้อน-ปิดโหมส	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E17	อิเล็กทรอนิกส์ด้านล่างชำรุด	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม
E18	อิเล็กทรอนิกส์ด้านบนชำรุด	ส่งไปที่ศูนย์บริการเพื่อตรวจสอบซ่อมแซม

คำแนะนำในการกำจัด



หากมีข้อบังคับทางกฎหมายในประเทศของคุณเกี่ยวกับการกำจัด อุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ สัญลักษณ์นี้หมายความว่า คุณต้องไม่ทิ้งผลิตภัณฑ์นี้ร่วมกับของเสียในครัวเรือน แต่จะต้องนำไปยังจุดรวบรวมเพื่อรีไซเคิลอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์แทน การกำจัดผลิตภัณฑ์ตามข้อบังคับ เพื่อป้องกันสิ่งแวดล้อมและสุขภาพของคนรอบข้างคุณจากผลเสีย สำหรับข้อมูลเกี่ยวกับการรีไซเคิลและการกำจัดผลิตภัณฑ์นี้ ติดต่อหน่วยงานราชการในพื้นที่ของคุณหรือบริการกำจัดขยะในครัวเรือน

Dear customer,

Congratulations on the purchase of your appliance. Please read the following instructions carefully and follow them to prevent potential damage. We accept no liability for damage caused by disregarding the instructions and improper use. Please scan the QR code to access the latest operating instructions and further information about the product.



CONTENTS

Safety instructions	16
Appliance overview	17
Control panel	18
Before first use	19
Warnings / Tips	19
Use	19
Functions	20
Basic recipes	21
Cleaning	22
Troubleshooting	24
Error codes	26
Disposal instructions	28


TECHNICAL INFORMATION

Product code	10036344
Power supply	220-240 V ~ 50 Hz
Motor output	300 W
Heating output	1250 W
Speed	30,000 RPM
Capacity	300-1200 ml

SAFETY INSTRUCTIONS

- Ensure to only connect the appliance to sockets with the appropriate voltage.
- Do not leave the appliance unattended while it is plugged in. Unplug the appliance from the socket after each use.
- Children from the age of 8 as well as physically, sensory and mentally impaired persons may only use the appliance if they have been familiarised by a responsible person with its functions and understand the safety precautions in place as well as any associated risks.
- Make sure that children do not play with the appliance.
- Do not expose the appliance to rain or direct sunlight.
- Make sure that the power cord does not come into contact with hot surfaces.
- Do not immerse the appliance, plug or power cord in water or other liquids.
- Do not touch any moving parts during operation.
- Place the appliance on a level, stable surface.
- The appliance only works when the cup is in the correct position.
- Do not add ingredients while the appliance is in operation.
- Do not use the appliance if defective.
- Switch off and unplug the appliance before moving the cup.
- Always unplug the appliance when not in use and when cleaning, assembling or removing accessories.
- Do not pull the plug out of the socket by the cable and always hold it with your hand.
- Do not use the appliance if the plug or the power cord is damaged or if the appliance is malfunctioning. Have the appliance checked by a specialist.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service technician to prevent electric shock and injury.
- The appliance is intended for use in the home and similar environments only. It is not intended for commercial use.
- If you dispose of the appliance, cut off the power cord and remove all dangerous parts so that children cannot injure themselves if they play with it.
- Keep the packaging material out of reach of children so that they do not injure themselves.

APPLIANCE OVERVIEW

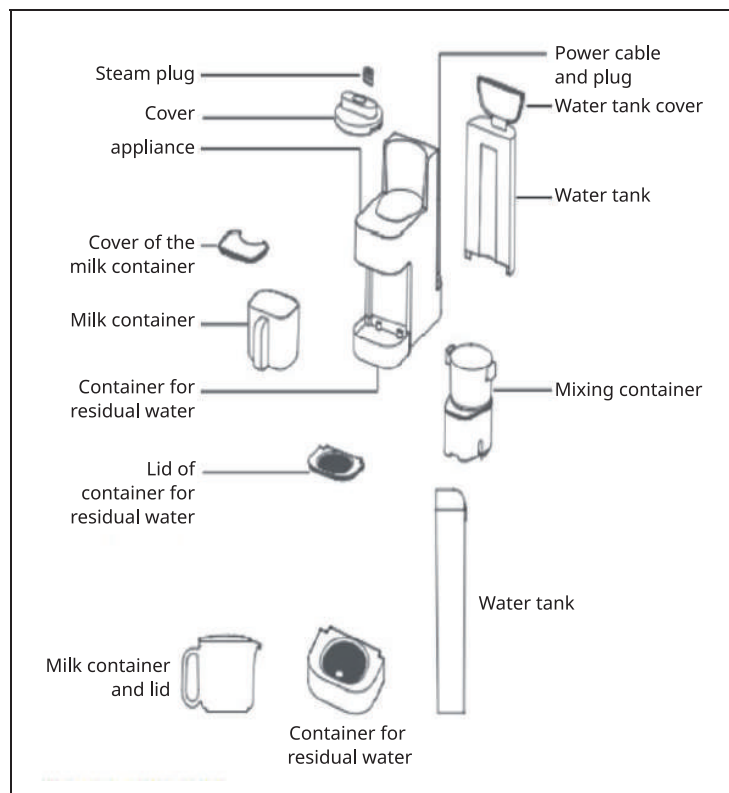

CONTROL PANEL



BEFORE FIRST USE

Press Wash/Dry button 2 times to enter Deep Clean mode. When closing the mixing container, make sure that the markings on the lid and on the unit are in line.

WARNINGS / TIPS

1. Add the ingredients according to the instructions to avoid milk overflow, outlet clogging and poor mixing.
2. When using the milkshake and juice functions, do not add too many foods containing fibre, otherwise the milk nozzle may become blocked.
3. Do not add solid ingredients (such as sugar cubes, ice, etc.) to avoid damaging the appliance.

USE

Preparation of a drink

1. Connect the appliance to the power supply.
2. Turn on the appliance by tapping the Start/Stop button. The display now lights up.
3. You can select the various programmes with the Select button. Press the button several times to do this.
4. Press the Capacity button repeatedly to select the quantity. You can prepare 300 ml, 600 ml, 900 ml or 1,200 ml. The standard capacity is 600 ml. The appliance processes large quantities in two cycles. However, all ingredients must be poured into the mixing container at the beginning.
5. Fill the water tank with filtered water.
6. Pour all ingredients into the mixing container.
7. Press the Start/Stop button to start the programme.
8. Press the Start/Stop button again during the first minute to stop the programme.
9. The machine pours your drink into the glass container. Warning! The drink and the glass container are very hot. Hold the glass by the handle only. After the mixing process is completed, the appliance automatically switches to standby mode. Now you can remove the milk container. The system automatically enters the self-cleaning function and the self-cleaning function light comes on. Empty the residual water tank after cleaning.

Timer / delay function

You can set the machine to prepare the drink at a later time.

1. To do this, select the programme and the capacity
2. Press the Timer button. By pressing the button several times, you can increase the preset time in 30-minute increments, from 30 minutes to a maximum of 24 hours. The preset time is 8 hours. The programme is then finished after 8 hours.
3. Select the programme. For safety reasons, the "Soaked Soy" and "Juice" programmes are not included.
4. Add the ingredients and press Start/Stop.
5. You can stop the programme and the delay time by pressing the Start/Stop button again during the first minute. Now you can make a new selection. After pressing and holding the Preset button for 5 seconds, the time on the display will increase and you can release the button when the desired time is reached.

Note: For your health and safety - if the room temperature is higher than 30°C, do not set the timer to over 12 hours to avoid germ formation.

FUNCTIONS

Programme	Description	Ingredients
Dry Soy / Soaked Soy	For dry or soaked soy and other vegetables	• Dried soybeans • Soybeans soaked for 12 hours
Nuts	For nuts, seeds and kernels	• Almonds and hazelnuts (roasted, blanched or natural)**** • Cashews • Desiccated coconut** • Lupine flour* • Macadamia nuts
Grains	For grains and grain substitutes	• Rice*** • Oats and spelt (regular, harvested or instant) • Buckwheat* • Hulled hemp seeds • Millet
Juice	For about 500 g of fruit / fruit nectar from washed and chopped berries and soft fruits. Fill with a maximum of 250 g of fruit.	• Bananas • Berries • Peach • Apricot • Nectarines
Milkshake	For creamy ice cream drinks	• Milk • Ice cream • Fruits or flavourings
Soup	For warm, mixed soups	• Vegetables • Cream or broth • Spices • Rice, grains
Flavour+	For non-dairy products with added flavourings	• Fruits • Chocolate

Note for the soup function: The blending jug can be dyed by carrot. Chunky soups will not be able to extrude through the machine, so if soup is too chunky please unplug the device and pour soup by hand from the mixing jug.

*	Soaked
**	Grated. Second round quick wash or hand wash is needed because the desiccated coconut is adhesiv
***	Washed and cooked
****	Best to use peeled nuts as skins may stain the jug

BASIC RECIPES

Drink	Ingredients	Mode
Soy milk	300 ml: 30 g 600 ml: 50 g soaked soybeans	Dry soy Soaked soy
Cashew, almond, hazelnut or macadamia milk	300 ml: 25 g 600 ml: 40 g nuts	Nuts
Banana milk	300 ml: 25 g almonds, ½ banana 600 ml: 50 g almonds, 1 banana	+Flavour
Chocolate milk	300 ml: 25 g almonds, a little sugar, a little cocoa or chocolate syrup 600 ml: 50 g almonds, a little sugar, a little cocoa or chocolate syrup	+Flavour
Oat milk	300 ml: 20 g 600 ml: 40 g oats	Grains
Hemp milk	300 ml: 25 g 600 ml: 50 g hemp seed	Grains
Buckwheat milk	300 ml: 20 g 600 ml: 40 g buckwheat	Grains
Spelt milk	300 ml: 15 g 600 ml: 24 g spelt	Grains
Rice milk	300 ml: 25 g 600 ml: 40 g rice	Grains
Coconut milk	300 ml: 25 g 600 ml: 40 g desiccated coconut	Grains
Watermelon, strawberry, mango juice	350 g fruit	Juice

Note: Download the Klarstein app for more recipes:

<i>iOS</i>	<i>Android</i>
	

CLEANING

Do not put the individual components of the appliance in the dishwasher. After each programme, the appliance automatically switches to self-cleaning mode. The cleaning takes 7 minutes. Only water is needed for self-cleaning. At the end of the self-cleaning programme, open the lid to allow the mixing container to dry. 2. You can also select the cleaning mode directly using the display, e.g. if the appliance has not been used for an extended period, after preparing a sweet drink (with sugar, syrup or fruit) or whenever basic cleaning is required:

- Select the menu and press the Wash/Dry button (remove the milk container before cleaning) and the LED screen will display the time required for the corresponding function.
- Press the button 4 times for a quick wash cycle and 2 times for a fine wash cycle. Press the button 3 times for a hot drying cycle (open the lid of the mixing container during hot drying).
- After the end of the self-cleaning cycle, open the lid to allow the mixing container to dry.

Quick Wash: Press the Wash/Dry button 1 time and then press the Start/Stop button to start the cycle. To stop cleaning, press the Start/Stop button at any time during the cleaning cycle.

Fine wash: If the mixing bowl has become stained over time, use the "Fine wash" option. Add a drop of mild detergent to the mixing bowl before starting the programme. When using it for the first time, make sure that the cleaning agent is not too concentrated to avoid excessive foaming in the mixing container. Press the Wash/Dry button twice in succession and then press the Start/Stop button to start a fine cleaning cycle. If there is still foam residue once the programme has concluded, rinse the appliance on the 3-minute rinse cycle. After the end of the self-cleaning cycle, open the lid to allow the mixing container to dry.

- Also, you should regularly clean the metal pins pointing into the mixing container, the silicone valve through which water flows into the mixing container as well as the silicone spout with a damp cloth.
- Clean the water tank regularly to keep it clean.
- Clean the appliance's exterior with a soft, damp cloth and then dry it thoroughly.
- Do not disconnect the power supply to the appliance during or interrupt the cleaning programme.


**CAUTION**

Risk of injury! If you want to clean the blades by hand, switch off the appliance and disconnect the mains plug. Be careful, the blades are very sharp.

Remove residue from the mixing container

Follow the steps below if you want to remove residue or milk left in the mixing container (due to a power failure or other reasons):

- Connect the appliance to a power supply.
- As soon as all symbols are shown on the display, you can remove the residue by pressing and holding the Wash/Dry button.
- Then start a manual cleaning programme with the Wash/Dry button

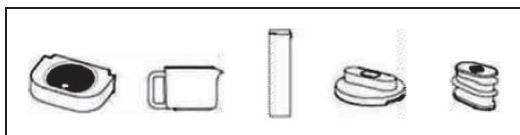

The accessories shown above can be removed from the machine and washed by hand: Residual water tank, milk tank, milk tank cover and lid, water tank, steam plug. After all accessories have been cleaned, it is recommended that they be allowed to air dry and are then stored in a dry and well ventilated area.

Decalcification

Handle the appliance with care and only use filtered water. Note that you should decalcify the appliance regularly. It is recommended that you decalcify after every 50th use or whenever you notice significant limescale deposits on or in the appliance. Proceed as follows to descale:

1. Add 3 tsp of baking soda to the water container and fill it with water.
2. Run a preparation programme for 300 ml without adding ingredients.
3. Stop the preparation by removing the water container. Drain the remaining water with baking soda. Wait 1 hour and replace the water in the water tank with fresh water. Now let the programme finish its cycle.
4. Then run through two preparation programmes without using ingredients, each for 1,000 ml. Repeat the procedure if necessary.

TROUBLESHOOTING

Problem	Potential cause	Solution
The indicator light does not work.	The power cord has not been plugged in.	Plug in the power cord.
	Display board defective	Contact a dealer for repair and maintenance.
The indicator light is on but the appliance is not working	A programme has not been selected.	Select a programme.
	The water tank has not been filled with water or is not attached to the appliance.	Fill the water tank with water up to the mark and attach it to the appliance.
	The temperature or water level sensor is defective.	Contact a dealer for repair and maintenance.
The water does not flow into the mixing container.	Defective water pump.	Contact a dealer for repair and maintenance.
	The filter at the bottom of the water tank is blocked.	Remove the filter, clean it and then reinsert it into the water tank.
The motor runs without stopping.	Water in the engine.	Contact a dealer for repair and maintenance.
The heater keeps turning off and on.	Defective temperature sensor.	Contact a dealer for repair and maintenance.

Problem	Potential cause	Solution
The appliance does not respond to button pushing.	The switch-off time was too quick and the appliance could not be reset.	After a power failure, wait 2 minutes before switching the unit back on.
	Defective display board.	Send the appliance to the local service department for repair and maintenance.
Food cannot be processed.	Too much or too little food.	Add the ingredients according to the instructions in the manual.
	Appliance error.	Send the appliance to the local service department for repair and maintenance.
	Wrong programme selected.	Select the correct programme.

ERROR CODES

Code	Description	Potential solution
E01	The milk cup or its lid is not inserted correctly or the milk cup or its lid is not removed before self-cleaning.	Check that the milk cup and its lid are well positioned and that the milk cup and its lid are removed before a self-cleaning cycle.
E02	No water in the water tank or the filter in the bottom of the water tank is clogged.	Fill up with water after the clogging has been rectified.
E03	The lid of the mixing container is not well positioned.	Position the cover correctly.
E05	Too many ingredients overload the engine.	Use fewer ingredients, clean the appliance and try again.
E06	The upper water level electrode is blocked or there are too many ingredients in the appliance.	Clean the electrode or reduce the amount of food used.
E07	Abnormal voltage.	Make sure that the current voltage is lower than 160 V and higher than 260 V. Use a regulated power supply.
E08	Abnormal communication between main controller and driver.	Send the appliance to the local service department for repair and maintenance.
E09	Mixing container is missing or not the correct container is placed.	Ensure the mixing container is installed on device. Use a dry grinding mixing container for the grinding function.

Code	Description	Potential solution
E10	Outlet valve is blocked or blockage caused by foreign body.	Clean the outlet valve or turn off the appliance and send it to the local service department for repair and maintenance.
E11	Defective temperature sensor.	Send the appliance to the local service department for repair and maintenance.
E12	Electric circuit of temperature sensor for mixing container defective.	Send the appliance to the local service department for repair and maintenance.
E13	Failure of flow detection.	Send the appliance to the local service department for repair and maintenance.
E14	Zero crossing signal loss	Send the appliance to the local service department for repair and maintenance.
E15	Heating time switch-off of the mixing vessel	Send the appliance to the local service department for repair and maintenance.
E16	Abnormal height detection	Send the appliance to the local service department for repair and maintenance.
E17	Lower water electrode defective	Send the appliance to the local service department for repair and maintenance.
E18	Upper water electrode defective	Send the appliance to the local service department for repair and maintenance.

DISPOSAL INSTRUCTIONS



If there is a legal regulation in your country regarding the disposal of electrical and electronic equipment, this symbol on the product or on the packaging indicates that this product must not be disposed of with household waste. Instead, it must be taken to a collection point for the recycling of electrical and electronic equipment. By disposing of this product in accordance with the regulations, you protect the environment and the health of those around you from negative consequences. For information on recycling and disposal of this product, contact your local government or household waste disposal service.

Imported & Distributed by :
SHIMONO (THAILAND) CO., LTD.
No. 292/3 Prasert Manukit Road
Nawamin, Bueng Kum, Bangkok 10230
Tel 02-056-1118 Fax 02-056-1119

 **Gokusen Thailand**

 **gokusenth**

 **@shimonoth**

