


**SHIMONO**

คู่มือการใช้งาน  
**INSTRUCTION MANUAL**

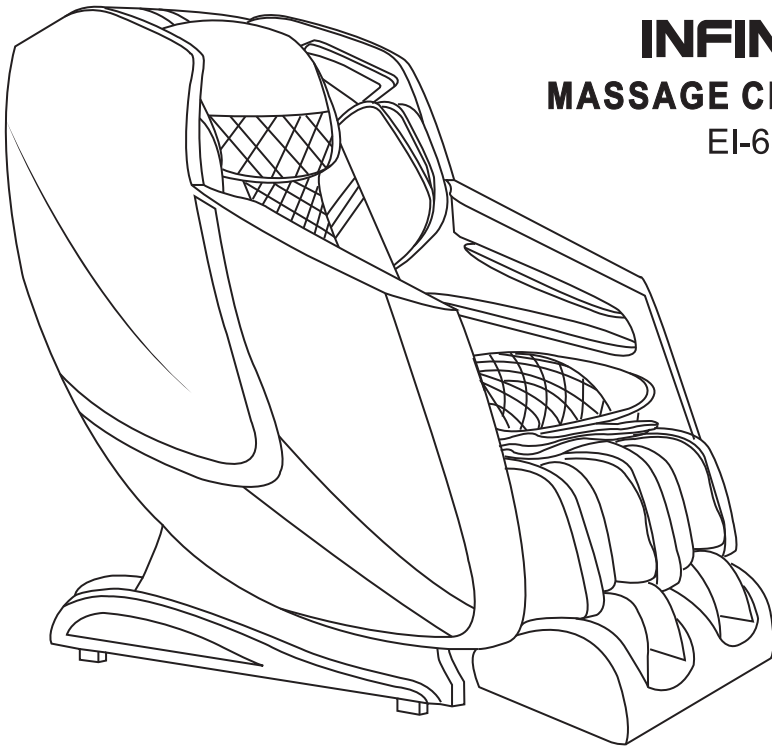

**INFINITI**  
**MASSAGE CHAIR**  
EI-6501D

กท.สน.146/2564

บ.จ.น.65-2-2-2-0002856



- Please read the user manual carefully before use.
- The appearance of the product is subject to the actual product.
- In case of technical or software upgrades, these changes will be made without further notification.



# สารบัญ

## ก่อนการใช้งาน

|                                      |     |
|--------------------------------------|-----|
| คำแนะนำด้านความปลอดภัยที่สำคัญ ..... | 1   |
| ข้อควรระวังด้านความปลอดภัย .....     | 2-3 |
| ส่วนประกอบเก้าอี้ .....              | 4-5 |
| การติดตั้งเก้าอี้ .....              | 6   |
| การตั้งค่าเก้าอี้แนว .....           | 7   |
| การเตรียมก่อนการใช้งาน .....         | 8-9 |

## วิธีการใช้งาน

|                     |       |
|---------------------|-------|
| รีโมทคอนโทรล .....  | 10    |
| วิธีการใช้งาน ..... | 10-14 |

## ถาม-ตอบ และสิ่งสำคัญ

|                                      |    |
|--------------------------------------|----|
| การทำความสะอาดและการบำรุงรักษา ..... | 15 |
| การแก้ไขปัญหา .....                  | 16 |
| คำแนะนำการต่อสายดิน .....            | 17 |
| ข้อมูลผลิตภัณฑ์ .....                | 18 |

ขอขอบคุณที่สั่งซื้อเก้าอี้ตัวนี้

ก่อนการใช้งานเก้าอี้แนว โปรดอ่านคู่มือคำแนะนำในการใช้งานและ  
ใช้ในการอ้างอิงเมื่อจำเป็น

# คำแนะนำด้านความปลอดภัยที่สำคัญ

เมื่อใช้เครื่องใช้ไฟฟ้า ควรปฏิบัติตามข้อควรระวังพื้นฐานเสมอ รวมทั้งสิ่งต่อไปนี้ และอ่านคำแนะนำทั้งหมดก่อนใช้งาน (อุปกรณ์นี้)

## อันตราย

เพื่อลดความเสี่ยงจากไฟฟ้าช็อต

- ควรถอดปลั๊กเครื่องนี้ออกจากเต้าเสียบทันทีหลังใช้งานและก่อนทำความสะอาด
- ห้ามใช้หมุดหรือที่ยึดโลหะอื่นๆ กับเครื่องนี้
- ตรวจสอบฝาครอบอย่างระมัดระวังก่อนการใช้งานแต่ละครั้ง ควรทิ้งเครื่องถ้าฝาครอบมีสัญญาณของการเสื่อมสภาพ

## คำเตือน

เพื่อลดความเสี่ยงต่อการไหม้, ไฟไหม้, ไฟฟ้าช็อต หรือการบาดเจ็บต่อบุคคล

- ไม่ควรปล่อยอุปกรณ์ทิ้งไว้โดยไม่มีการดูแลเมื่อเสียบปลั๊ก ถอดปลั๊กจากเต้ารับเมื่อไม่ใช้งาน และก่อนใส่หรือถอดชิ้นส่วน
- การดูแลอย่างใกล้ชิดเป็นสิ่งจำเป็นเมื่อใช้เครื่องนี้โดย เปิดหรือทำงานใกล้เด็ก คนทุพพลภาพ หรือผู้พิการ
- ใช้เครื่องนี้ตามวัตถุประสงค์การใช้งานเท่านั้นตามที่อธิบายไว้ในคู่มือนี้ อย่าใช้งานโดยไม่อ่านคู่มือแนะนำโดยผู้ผลิต
- ห้ามใช้งานอุปกรณ์นี้หากมีสายไฟหรือปลั๊กชำรุด หากไม่สามารถใช้งานได้ อย่างถูกต้องหากทำตกหล่น ชำรุด หรือหล่นลงไปในน้ำ ส่งคืนเครื่องไปยังศูนย์บริการเพื่อตรวจสอบและซ่อมแซม
- อย่าพกพาเครื่องนี้ด้วยสายไฟหรือใช้สายไฟเป็นที่จับ
- เก็บสายไฟให้ห่างจากพื้นผิวที่ร้อน
- ห้ามใช้งานเครื่องขณะที่ปิดกั้นช่องอากาศ
- ห้ามวางหรือแทรกวัตถุใดๆ เข้าไปในช่องเปิดใดๆ
- ห้ามใช้งานกลางแจ้ง
- ห้ามใช้งานในบริเวณที่มีการใช้ผลิตภัณฑ์สเปรย์ หรือสถานที่ที่ให้ออกซิเจน
- หากต้องการตัดการเชื่อมต่อ ให้กดปุ่มปิดการใช้งาน จากนั้นถอดปลั๊กออกจากเต้ารับ
- ให้เด็กอยู่ห่างจากส่วนรองรับเท้าที่ยึดออก
- เชื่อมต่อเครื่องนี้กับเต้ารับที่ต่อสายดินอย่างถูกต้องเท่านั้น ดูคำแนะนำ



- เชื่อมต่อเครื่องนี้กับเตาอบที่ต่อสายดินอย่างถูกต้องเท่านั้น ดูคำแนะนำในการต่อสายดิน
- ใช้พื้นผิวที่ร้อนอย่างระมัดระวัง อาจทำให้เกิดแผลไหม้อย่างรุนแรง ห้ามใช้เกินบริเวณผิวที่บอบบางหรือในบริเวณที่มีการไหลเวียนไม่ดี การใช้งานแบบอัดโนมัตความร้อนจากเด็กหรือผู้ทุพพลภาพอาจเป็นอันตรายได้
- ห้ามใช้งานใต้ผ้าห่มหรือหมอน เพราะความร้อนที่มากเกินไปอาจทำให้เกิดไฟไหม้ไฟฟ้าช็อต หรือการบาดเจ็บต่อบุคคล

## ข้อควรระวังเพื่อความปลอดภัย

เมื่อมีใช้แก้อั้วนวด ควรปฏิบัติตามข้อควรระวังพื้นฐานเสมอ เพื่อลดความเสี่ยงที่จะเกิดไฟฟ้าช็อต ไฟไหม้ ไฟไหม้ หรือการบาดเจ็บต่อบุคคล โปรดอ่านข้อควรระวังต่อไปนี้ก่อนใช้แก้อั้วนวด

- ตรวจสอบให้แน่ใจว่าเสียบปลั๊กไฟเข้ากับเตาอบไฟฟ้าที่เหมาะสมอย่างแน่นหนา เพื่อลดความเสี่ยงที่จะเกิดไฟฟ้าลัดวงจรและไฟไหม้
- ขอแนะนำอย่างยิ่งให้ใช้อุปกรณ์ป้องกันไฟกระชากเพื่อป้องกันความเสียหาย
- ห้ามใช้แก้อั้วนวดในบริเวณที่มีความชื้นสูง เช่น ห้องอบไอน้ำ, สระว่ายน้ำ, ห้องน้ำหรือห้องระบายความร้อน เป็นต้น
- ห้ามใช้แก้อั้วนวดในพื้นที่กลางแจ้ง และหลีกเลี่ยงบริเวณที่โดนแสงแดด
- หากไม่ได้ใช้งานแก้อั้วนวด ให้ปรับสวิตช์ไปที่ตำแหน่ง OFF และถอดปลั๊กแก้อั้วนวดออกจากปลั๊กไฟ เพื่อป้องกันความเสียหายของแก้อั้วนวด เมื่อไฟดับหรือไฟกระชากที่สามารถทำให้เกิดความเสียหายร้ายแรง
- ไม่ควรเสียบหรือถอดปลั๊กเมื่อมือเปียก
- ดูแลอย่างใกล้ชิดและต่อเนื่องเมื่อมีความจำเป็นต้องใช้แก้อั้วนวดใกล้เด็กหรือผู้พิการ
- ควรใช้แก้อั้วนวดไม่เกิน 1 คน
- แก้อั้วนวดมีไว้สำหรับการใช้งานตามที่อธิบายในคู่มือ ห้ามใช้งานนอกเหนือจากสิ่งที่แนะนำ
- ห้ามยืนหรือนั่งบนพนักพิง ที่วางแขน หรือที่วางขา เพื่อป้องกันการเกิดอุบัติเหตุการบาดเจ็บหรือความเสียหายต่อแก้อั้ว
- หลีกเลี่ยงการนอนขณะใช้แก้อั้วนวด
- รักษาแก้อั้วนวดให้สะอาดอยู่เสมอ และห้ามใส่วัตถุใดๆ เข้าไปในช่องว่างรอบๆ เครื่องนวด
- ห้ามเคลื่อนย้ายแก้อั้วนวดโดยการดึงสายไฟ
- ให้แน่ใจว่าไม่มีเด็ก สัตว์เลี้ยงหรือสิ่งของอื่นๆ อยู่ด้านหลังหรือข้างใต้แก้อั้วนวด
- หากพบรอยขาดในผ้าของแก้อั้วนวด ให้ติดต่อฝ่ายบริการและหยุดการใช้งานแก้อั้วทันที
- แก้อั้วนวดถูกออกแบบมาให้ใช้ภายในบ้าน ห้ามนำไปติดตั้งใช้นอกบ้าน

- โปรดปรึกษาแพทย์ หากคุณมีข้อสงสัยว่าคุณควรใช้เก้าอี้นวดตัวนี้หรือไม่
- โปรดปรึกษาแพทย์ก่อนใช้เก้าอี้นวด หากคุณกำลังตั้งครรภ์, อยู่ระหว่างการรักษาทางการแพทย์, การใช้อุปกรณ์อิเล็กทรอนิกส์ทางการแพทย์ เช่น เครื่องกระตุ้นหัวใจ หรือกำลังประสบกับปัญหาเกี่ยวกับสิ่งเหล่านี้: โรคเนื้องอก, โรคหัวใจ, ปวดหลัง, กระดูกสันหลังไม่ปกติหรือโค้งงอ, โรคกระดูกพรุน หรือโรคเจ็บป่วยเฉียบพลัน
- ถ้ารู้สึกเจ็บปวดขณะใช้งานเก้าอี้นวด ให้หยุดการใช้งานและปรึกษาแพทย์ทันที
- ห้ามใช้ฟังก์ชันในการนวดบริเวณที่มีการบวมหรืออักเสบ
- ห้ามใช้เก้าอี้นวดติดต่อกันเกิน 30 นาทีต่อการใช้งาน 1 ครั้ง
- ห้ามใช้เก้าอี้นวดบริเวณที่มีการฉีดสเปรย์หรือบริเวณที่ให้ออกซิเจน
- เก้าอี้นวดไม่ใช่ผลิตภัณฑ์ที่ออกแบบมาเพื่อรักษาพยาบาล
- ตรวจสอบผิวหนังที่สัมผัสกับบริเวณที่โดนความร้อนบ่อยๆ เพื่อลดความเสี่ยงของการบาดเจ็บ หากแผ่นความร้อนทำงานผิดปกติและเกิดความร้อนสูง อาจทำให้เกิดการไหม้อย่างรุนแรงได้
- ผลไหม้อาจเกิดจากการใช้งานที่ไม่เหมาะสม หากเป็นกรณีนี้ให้หยุดการทำงานทันทีและถอดปลั๊กไฟออก
- นำของมีคมออกจากตัวและกระเป๋าทั้งหมด เช่น กุญแจและปากกา
- ให้เด็กอยู่ห่างจากที่วางเท้า (หรือส่วนอื่นๆ)
- ห้ามใช้งานขณะเปียก-ห้ามหมุนเครื่อง
- ห้ามนำผ้าคลุมออก


## คำเตือน

รองรับน้ำหนักผู้ใช้งานได้ถึง 100 กิโลกรัม

สำหรับผู้ใช้งานที่มีน้ำหนักมากกว่า 100 กิโลกรัม การทำงานของผลิตภัณฑ์นี้อาจมีเสียงรบกวนมากขึ้น และผ้าคลุมอาจเกิดการฉีกขาดเร็วขึ้น


# ส่วนประกอบเก้าอี้นวด

## ด้านหลัง

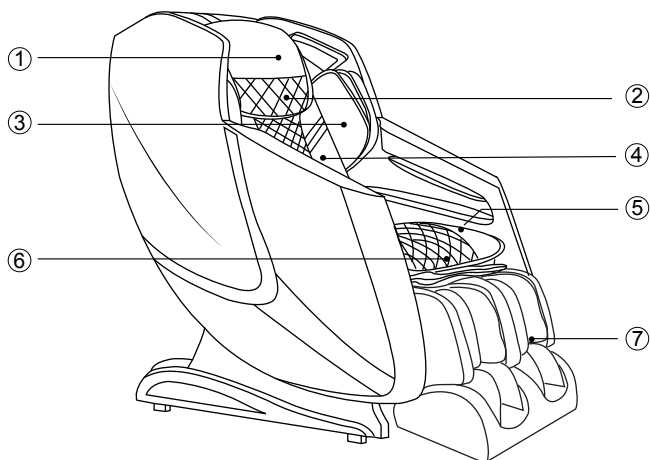

- |                |                    |
|----------------|--------------------|
| ① หมอนหนุน     | ② ส่วนนวดไหล่      |
| ③ หมอนหนุนหลัง | ④ ส่วนนวดมือและแขน |
| ⑤ เบาะรองนั่ง  | ⑥ ที่พักขา         |


## ลำโพงบลูทูธ

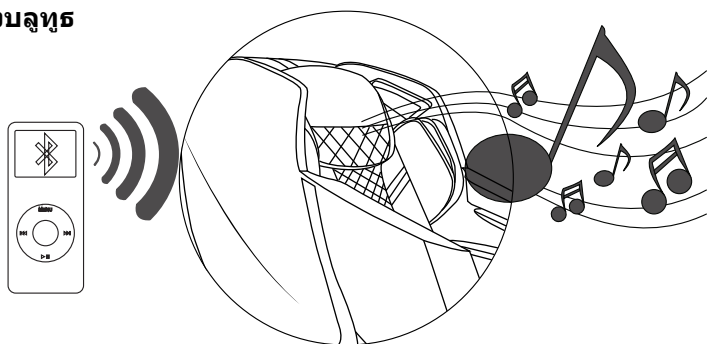

ลำโพงบลูทูธสามารถเชื่อมต่อกับอุปกรณ์บลูทูธได้ครั้งละหนึ่งเครื่องเท่านั้น โปรดปิดอุปกรณ์บลูทูธของคุณหลังจากใช้งานเพื่อให้ผู้ใช้รายอื่นสามารถเพลิดเพลินได้เช่นกัน

# ส่วนประกอบเก้าอี้นวด

พื้นที่นวดลม

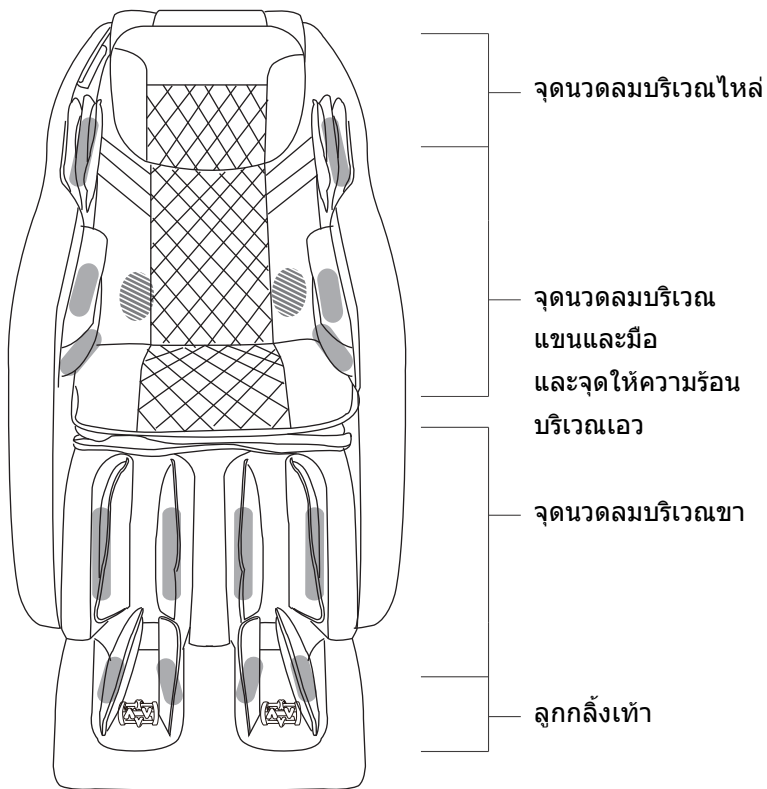

ถูกลม




ความร้อน




ลูกกลิ้งเท้า

## การติดตั้งเก้าอี้นวด

1. นำตัวเครื่องและอุปกรณ์เสริมออกจากกล่องทั้ง 2 กล่อง

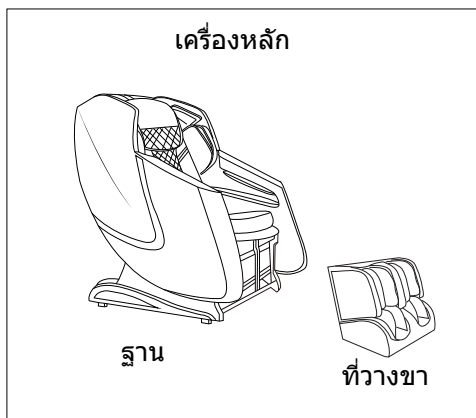


2. เชื่อมต่อสายไฟและท่อลมจากที่รองเท้าและเก้าอี้นั่งตามลำดับ

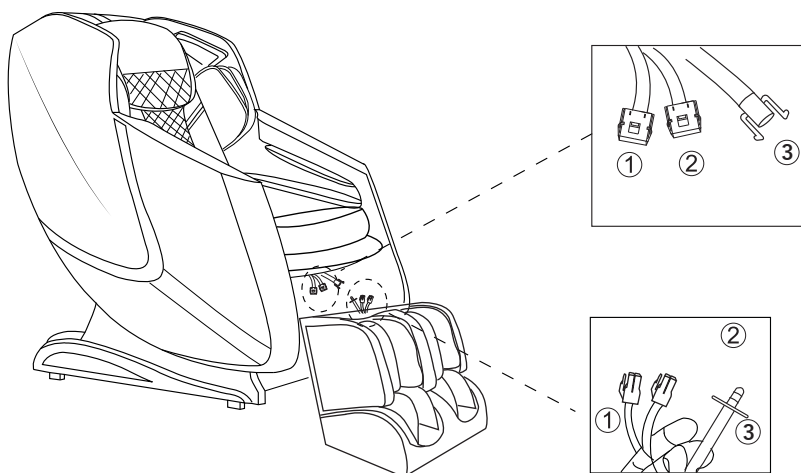

# การตั้งค่าเก้าอี้นวด

## 1. ตำแหน่งในการติดตั้ง

- ต้องแน่ใจว่ามีพื้นที่ในการเอนที่เพียงพอ

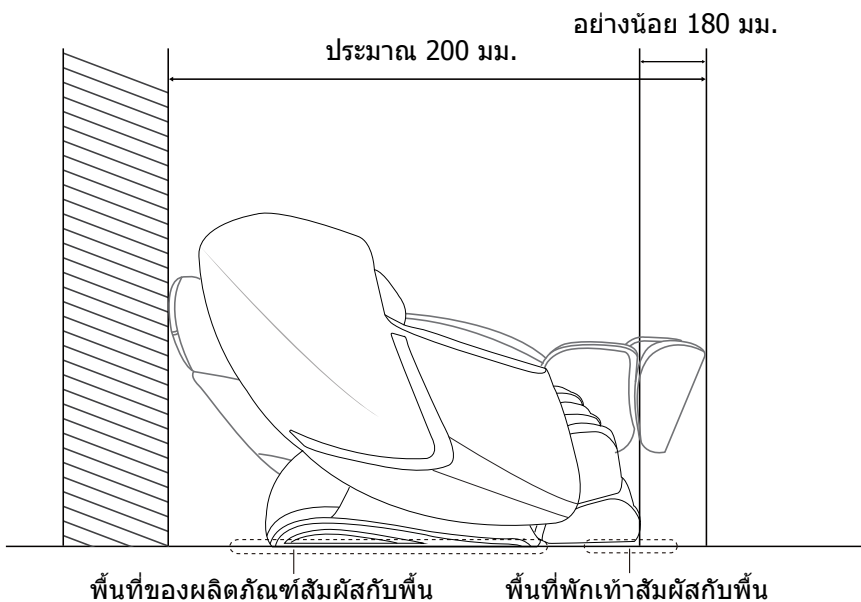


- อย่าให้เก้าอี้นวดถูกแสงแดดหรืออยู่ในที่ที่มีอุณหภูมิสูง ยกตัวอย่าง เช่นอยู่หน้าเครื่องกำเนิดความร้อน เพราะจะทำให้หนังสังเคราะห์เปลี่ยนสีหรือเกิดการแข็งตัวได้
- วางเครื่องบนพื้นที่ราบเพื่อป้องกันความเสียหายแก่เก้าอี้นวด
- เมื่อวางแผ่นรองใต้เก้าอี้นวด ขนาดของแผ่นรองควรครอบคลุมพื้นที่ที่เก้าอี้สัมผัสและที่ที่ขาสามารถแตะพื้นได้ ดังแสดงตัวอย่างในภาพด้านบน
- ติดตั้งเก้าอี้นวดใกล้กับปลั๊กไฟ

# การเตรียมก่อนการใช้งาน


## 1. ตรวจสอบพื้นที่ว่างรอบๆ ผลิตภัณฑ์

ตรวจสอบให้แน่ใจว่าไม่มีคน สัตว์เลี้ยง หรือสิ่งของอื่นๆ ใกล้ผลิตภัณฑ์

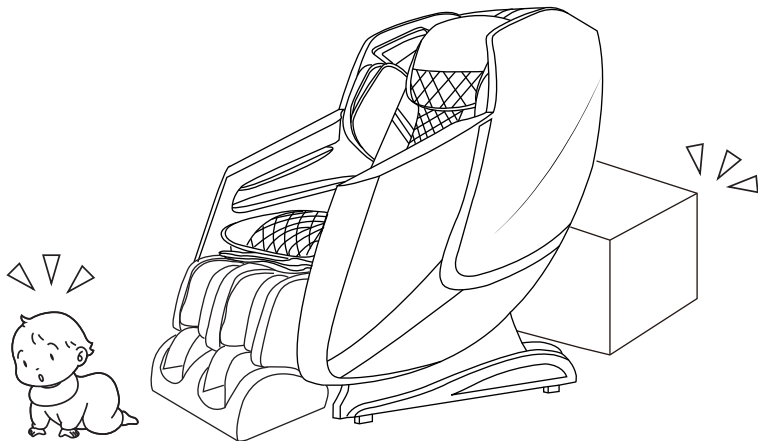




## 2. ตรวจสอบให้แน่ใจว่าไม่มีสิ่งแปลกปลอมอยู่ในตะเข็บของผลิตภัณฑ์

- ก่อนนั่งบนผลิตภัณฑ์ ควรตรวจสอบให้แน่ใจว่าไม่มีสิ่งแปลกปลอมอยู่ระหว่าง 2 ส่วนของผลิตภัณฑ์
- ห้ามวางมือ แขนหรือศีรษะ ไว้ระหว่างพนักพิงและด้านหลัง
- ห้ามวางสัตว์เลี้ยงไว้บนผลิตภัณฑ์ (เช่น ฝ่าหลัง พนักพิง และที่วางแขน)

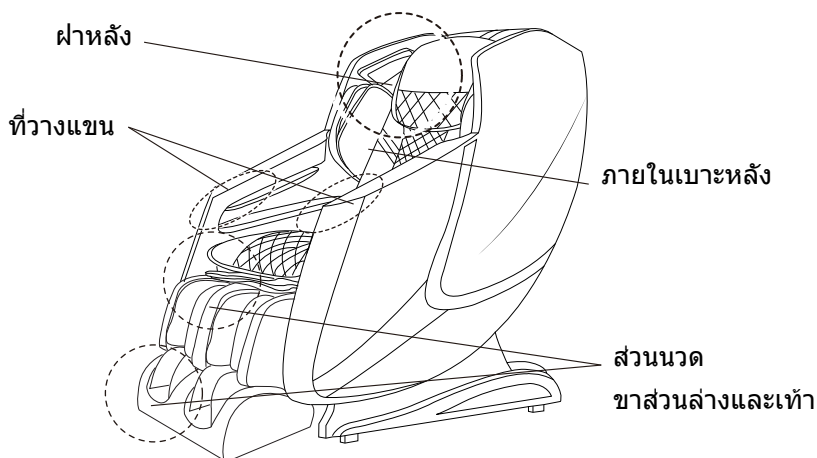

### 3. การเปิดเครื่องผลิตก๊าซ


- ① ดึงขั้วสายไฟให้เชื่อมต่อกับตัวเครื่องจนสุด
- ② เสียบปลั๊กไฟเข้ากับเต้ารับจนสุด
- ③ เปิดสวิตช์ไปที่ตำแหน่ง I

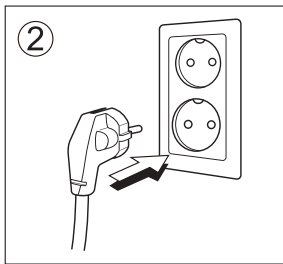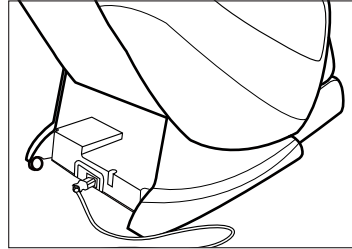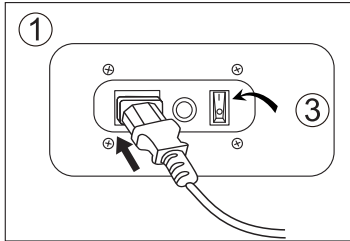

### 4. ตรวจสอบให้แน่ใจว่าลูกกลิ้งนวดมีการหดรัดกลับ

หากไม่เป็นเช่นนั้น ให้กดปุ่ม ON เพื่อกลับไปตำแหน่งหดรัดกลับ


ตรวจสอบบริเวณนี้

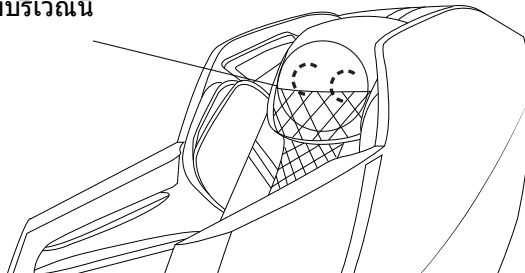



# วิธีการใช้งาน

## รีโมทคอนโทรล

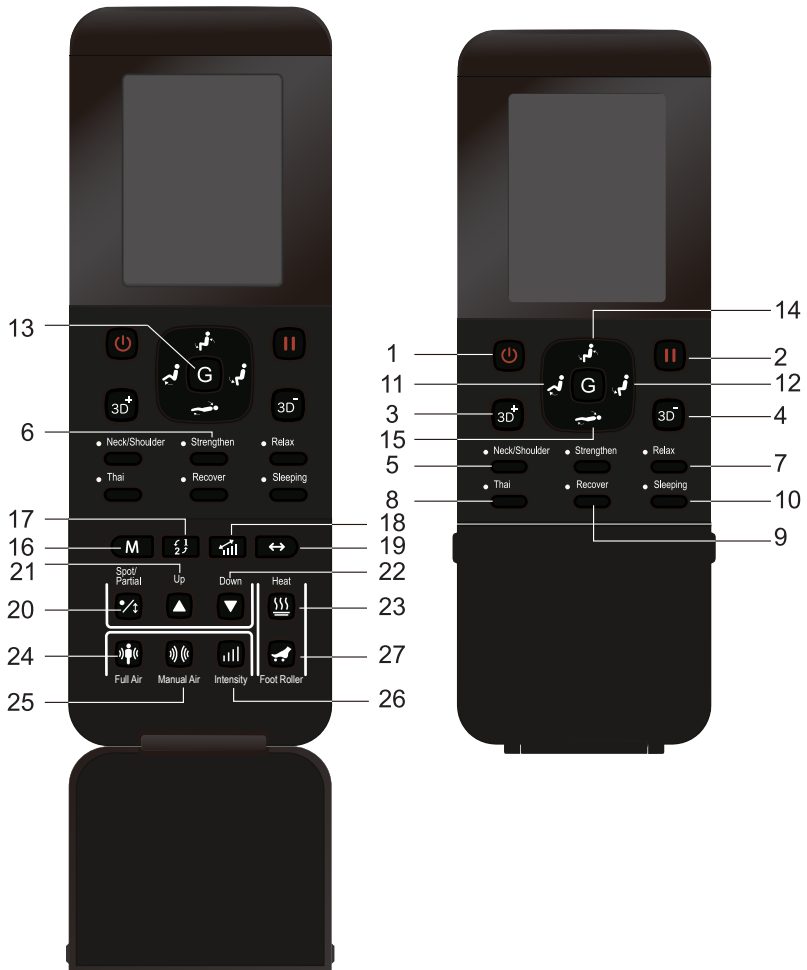

# วิธีการใช้งาน

## รีโมทคอนโทรล

คู่มือการใช้งานอุปกรณ์

เชื่อมต่อกับแหล่งจ่ายไฟแล้ว ให้กดสวิตช์ไปที่ตำแหน่ง I แล้วเก้าอี้จะอยู่ในโหมดปกติ มุมของพนักพิงจะไปถึงตำแหน่งสูงสุดและมุมของที่พักเท้าจะไปถึงตำแหน่งต่ำสุด ในโหมดปกติจะมีเพียง 5 ฟังก์ชันเท่านั้น คือ เปิด/ปิด, เอียง, ปรับเอน, ขาเอียง, ขาปรับเอน ที่สามารถใช้งานได้

ปุ่มควบคุมสำหรับเก้าอี้เอน

| ลำดับ | สัญลักษณ์                                                                           | คำอธิบาย                                                                                                                                                                                                                                                                                   |
|-------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1     |    | ปุ่มควบคุม เริ่ม/หยุด<br>กดปุ่มนี้หนึ่งครั้ง ไฟหน้าจอ LCD และปุ่มเปิด/ปิดจะสว่างขึ้น กดปุ่ม ฟังก์ชันการนอนเพื่อเริ่มฟังก์ชันการนอนของเก้าอี้ สิ่งนี้จะเริ่มต้น ฟังก์ชันจับเวลาด้วย กดปุ่มนี้อีกครั้งเพื่อหยุดฟังก์ชันการนอนทั้งหมด จากนั้นลูกกลิ้งนอน & พนักพิง & ที่พักขาจะกลับสู่ตำแหน่ง |
| 2     |    | ปุ่มหยุดชั่วคราว<br>เมื่อเก้าอี้อยู่ในโหมดนอนและผู้ใช้ต้องการหยุดชั่วคราว ให้กดปุ่ม หยุดชั่วคราวและฟังก์ชันการนอนทั้งหมดจะหยุดลง ปุ่มจะกะพริบ และการนับถอยหลังที่ตั้งไว้จะหยุดชั่วคราว กดปุ่มหยุดชั่วคราว อีกครั้งเพื่อกลับสู่ฟังก์ชันการนอนเดิม                                           |
| 3     |   | กดปุ่มปรับ 3D<br>เพื่อปรับลูกกลิ้งนอน 3 มิติไปข้างหน้า/ข้างหลังตามลำดับ มี 4 ระดับ ให้เลือกปรับเพื่อให้เหมาะสมกับความต้องการด้านความแรงของการนอน                                                                                                                                           |
| 4     |  | กดปุ่มปรับ 3D<br>กดปุ่มนี้เพื่อปรับลูกกลิ้งนอน 3D ถอยหลังมี 4 ระดับให้เลือกปรับให้ เหมาะกับระดับต่างๆ ความต้องการความแรงของการนอน                                                                                                                                                          |
| 5     | Auto<br>Mode<br>โหมด<br>อัตโนมัติ                                                   | Neck/<br>Shoulder<br>คอ/ไหล่<br>กดปุ่มนี้เพื่อเข้าสู่โปรแกรมอัตโนมัติชื่อ "คอ/ไหล่" เน้นนวดบริเวณคอและไหล่ นวดเฉพาะจุดช่วย คลายเส้นเอ็นและกระตุ้นหลักประสาทเสริมความ มีชีวิตชีวาของร่างกาย                                                                                                 |
| 6     |                                                                                     | Strengthen<br>เสริมกำลัง<br>กดปุ่มนี้เพื่อเข้าสู่โปรแกรมอัตโนมัติ "เสริมกำลัง" เน้นนวดเอวและม้านหลังช่วยบรรเทาอาการ ปวดเมื่อยของกล้ามเนื้อ                                                                                                                                                 |

| ลำดับ | สัญลักษณ์                                                                           | คำอธิบาย                                                                                                                                                                                                                         |                                                                                                             |
|-------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| 7     |                                                                                     | Relax<br>ผ่อนคลาย                                                                                                                                                                                                                | กดปุ่มนี้เพื่อเข้าสู่โปรแกรมนี้ ช่วยผ่อนคลายร่างกาย<br>เมื่อยล้าหลังจากที่เหน็ดเหนื่อยมาทั้งวัน             |
| 8     |                                                                                     | Thai<br>แบบไทย                                                                                                                                                                                                                   | กดปุ่มนี้เพื่อเข้าสู่โปรแกรมนี้ นวดแบบไทยช่วยยืด<br>กล้ามเนื้อหลัง มือ น่อง และเต็มตัว                      |
| 9     |                                                                                     | Recover<br>ฟื้นตัว                                                                                                                                                                                                               | กดปุ่มนี้เพื่อเข้าสู่โปรแกรมนี้ นวดพินตัว<br>ช่วยยืด กล้ามเนื้อหลัง มือ น่อง และเต็มตัว                     |
| 10    |                                                                                     | Sleeping<br>นอนหลับ                                                                                                                                                                                                              | กดปุ่มนี้เพื่อเข้าสู่โปรแกรมอัตโนมัติให้คุณผ่อนคลาย<br>อย่างล้าลึกและหลับสบายอย่างอ่อนโยนนวดคullingและกลิ้ง |
| 11    |    | กดปุ่มนี้หนึ่งครั้ง ที่พนักขาจะเริ่มขยับขึ้น เมื่อที่พนักขาถึงตำแหน่งที่<br>สะดวกสบายที่ต้องการ กดปุ่มนี้อีกครั้งเพื่อหยุดมัน                                                                                                    |                                                                                                             |
| 12    |    | กดปุ่มนี้หนึ่งครั้ง ที่พนักขาจะเริ่มเลื่อนลง เมื่อไรที่พนักขาถึงตำแหน่ง<br>ที่สะดวกสบายที่ต้องการ กดปุ่มนี้อีกครั้งเพื่อหยุดมัน                                                                                                  |                                                                                                             |
| 13    |    | กดปุ่มนี้เพื่อเปิดใช้งานฟังก์ชัน เป็นค่าเริ่มต้น Zero-G1                                                                                                                                                                         |                                                                                                             |
|       |                                                                                     | กดปุ่มนี้อีกครั้งเพื่อเปิดใช้งานฟังก์ชัน Zero-G2                                                                                                                                                                                 |                                                                                                             |
|       |                                                                                     | หมายเหตุ:<br>หากกดปุ่มนี้ขณะเคลื่อนที่ไปที่ Zero-G1 เก้าอันวดจะหยุดที่นุ่มล้าสุด<br>หากไม่ได้กดปุ่ม Zero-G ขณะย้ายไปที่ Zero-G1 การนวด<br>เก้าอี้จะหยุดที่นุ่ม Zero-G ที่ตั้งไว้ล่วงหน้า<br>เงื่อนไขเดียวกันกับ ฟังก์ชัน Zero-G2 |                                                                                                             |
| 14    |  | กดปุ่มนี้หนึ่งครั้งสามารถปรับมุมพนักพิงเพื่อเลื่อนขึ้นได้<br>เมื่อพนักพิงถึงตำแหน่งที่ต้องการ ให้กดปุ่มอีกครั้งเพื่อหยุดมัน                                                                                                      |                                                                                                             |
| 15    |  | กดปุ่มนี้หนึ่งครั้งเพื่อปรับมุมพนักพิงให้เลื่อนลง เมื่อพนักพิง<br>ถึงตำแหน่งที่สะดวกสบายที่ต้องการ กดปุ่มอีกครั้งเพื่อหยุดมัน                                                                                                    |                                                                                                             |

| ลำดับ | สัญลักษณ์                                                                                          | คำอธิบาย                                                                                                                                                           |                                                                                                                                 |
|-------|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| 16    |  Manual Mode โหมด | Kneading การนวด                                                                                                                                                    | ครั้งที่ 1 ให้กดปุ่มนี้เพื่อเปิดใช้งานจังหวะ ฟังก์ชันการนวดแบบแมนนวลสำหรับการนวดหลังเต็มรูปแบบที่ความแรงปานกลาง                 |
|       |                                                                                                    | Swedish สวีดิช                                                                                                                                                     | ครั้งที่ 2 ให้กดปุ่มนี้เพื่อเปิดใช้งานจังหวะ ฟังก์ชันการนวดด้วยมือแบบสวีดิชสำหรับการนวดหลังเต็มรูปแบบที่ความแรงปานกลาง          |
|       |                                                                                                    | Tapping และ                                                                                                                                                        | ครั้งที่ 3 ให้กดปุ่มนี้เพื่อเปิดใช้งานการแตะตามจังหวะ ฟังก์ชันการนวดแบบแมนนวลสำหรับการนวดหลังแบบเต็มทุกระดับปานกลางความแข็งแรง. |
|       |                                                                                                    | Shiatsu ชิอัตสึ                                                                                                                                                    | ครั้งที่ 4 กดปุ่มนี้เพื่อเปิดใช้งานชิอัตสึ จังหวะฟังก์ชันการนวดแบบแมนนวลสำหรับการนวดหลังแบบเต็มทุกระดับปานกลางความแข็งแรง.      |
|       |                                                                                                    | Clapping การตบ                                                                                                                                                     | ครั้งที่ 5 ให้กดปุ่มนี้เพื่อเปิดใช้งานจังหวะ ฟังก์ชันการนวดแบบปรบมือเพื่อการนวดหลังเต็มรูปแบบที่ความแรงปานกลาง                  |
|       |                                                                                                    | Rolling การกลิ้ง                                                                                                                                                   | ครั้งที่ 6 ให้กดปุ่มนี้เพื่อเปิดใช้งานการกลิ้งเป็นจังหวะ ฟังก์ชันการนวดแบบแมนนวลสำหรับการนวดหลังเต็มรูปแบบที่ความแข็งแรงปานกลาง |
| 17    |                   | กดปุ่มนี้, นวดด้วยมือ (แตะ, ชิอัตสึ, ปรบมือ) จะเปลี่ยนโหมดจังหวะตามลำดับการแตะ 1 > และ 2 > ชิอัตสึ 1 > ชิอัตสึ 2 > ดบ 1 > ดบ 2                                     |                                                                                                                                 |
| 18    |                  | กดปุ่มนี้เพื่อปรับความเร็วการนวด รวมเป็น 5 ระดับความเร็ว สามารถปรับได้ หลังจากเปิดใช้งานฟังก์ชันการนวดแบบแมนนวล ทุกครั้งที่ปุ่มคือกดความเร็วสามารถปรับจากอ่อนไปแรง |                                                                                                                                 |
| 19    |                 | กดปุ่มนี้เพื่อปรับความกว้างของการนวด รวม 2 ระดับ หลังจากเปิดใช้งานฟังก์ชันการกลิ้ง ผู้ใช้สามารถแตะปุ่มเพื่อปรับความกว้างของการนวด                                  |                                                                                                                                 |
| 20    |                 | ครั้งแรกที่กดปุ่มนี้เพื่อเปิดใช้งานการนวดเฉพาะจุดที่ต้องการ                                                                                                        |                                                                                                                                 |
|       |                                                                                                    | ครั้งที่ 2 ให้กดปุ่มนี้เพื่อสลับเป็นการนวดบางส่วน กลไกจะใช้ตำแหน่งจุดเป็นศูนย์กลางในการดำเนินการนวดบางส่วนในระยะประมาณ 8 ซม.                                       |                                                                                                                                 |

| ลำดับ | สัญลักษณ์                                                                         | คำอธิบาย                                                                                                                                                                    |
|-------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 21    |  | เมื่อคู่มือการสแกนไหลอัตโนมัติ ไม่ตรงตามความต้องการ ตำแหน่งความสูงของไหลสามารถปรับได้ด้วยตนเอง โดยกดปุ่มขึ้น/ลง เมื่อพบสถานที่ที่เหมาะสมปล่อยมือออก ตำแหน่งสุดท้ายจะถูกล็อก |
| 22    |  | หมายเหตุ: ในการนวดเฉพาะจุดหรือบางส่วน คุณสามารถใช้สองสิ่งนี้ได้เช่นกันปุ่มเพื่อปรับตำแหน่งของกลไก                                                                           |
| 23    |  | ทุกครั้งที่คุณกดปุ่มนี้ ฟังก์ชันการทำความร้อนจะเปลี่ยนไปในลำดับของการอุ่นเอน > หยุด                                                                                         |
| 24    |  | กดหนึ่งครั้งเพื่อเปิดใช้งานการนวดกดอากาศทั่วร่างกาย กดอีกครั้งเพื่อหยุดการทำงาน                                                                                             |
| 25    |  | ทุกครั้งที่คุณกดปุ่มนี้ การนวดด้วยแรงดันอากาศแบบแมนนวล ฟังก์ชันจะเปลี่ยนตามลำดับ                                                                                            |
| 26    |  | กดปุ่มนี้เพื่อปรับความกดอากาศ รวมเป็น 5 ระดับความแรงถึงสามารถปรับได้ หลังจากเปิดใช้งานฟังก์ชันความดันอากาศ (อัตโนมัติและแมนนวล) ให้กดปุ่มนี้ ปุ่มเพื่อปรับความเข้มเป็นรอบ   |
| 27    |  | กดหนึ่งครั้งเพื่อเปิดใช้งานลูกกลิ้งด้วยการเดินเท้า กดอีกครั้งเพื่อหยุดฟังก์ชันนี้                                                                                           |


## หลังจากการใช้งาน

กรุณากดปุ่ม เปิด/ปิด หลังการใช้งาน แก้อั้วจะหยุดการทำงาน และลูกกลิ้งนวดจะกลับสู่ตำแหน่งเดิม จากนั้นให้สวิตช์จ่ายไฟที่อยู่ใต้แก้อั้วไปที่ตำแหน่ง O แล้วดึงปลั๊กออกจากเต้ารับไฟฟ้า

# การทำความสะอาดและการบำรุงรักษา

## 1. การทำความสะอาดหนังสังเคราะห์เช็ดหนังสังเคราะห์ด้วยผ้าแห้งนุ่มๆ

- ห้ามทำความสะอาดผลิตภัณฑ์ด้วยสารเคมี อาทิเช่น ทินเนอร์, ก๊าซโซลีน และแอลกอฮอล์
- เมื่อใช้ผลิตภัณฑ์บำรุงรักษาเครื่องหนัง ที่จำหน่ายตามท้องตลาด ให้ปฏิบัติตามคำแนะนำในการใช้งาน
- หากหนังสังเคราะห์สกปรกมาก ให้เช็ดด้วยวิธีด้านล่าง

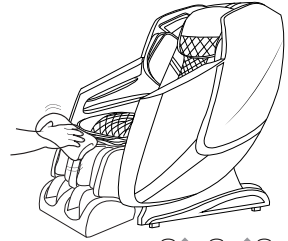

- ① ใส่ชิ้นผ้าที่นุ่มๆ ลงในน้ำหรือผงซักฟอกที่มีค่า pH เป็นกลาง สัดส่วนประมาณ 3-5% ผสมกับน้ำร้อนแล้วบิดออก
- ② เช็ดผิวสัมผัสของหนังสังเคราะห์ด้วยผ้านุ่มๆ
- ③ ล้างผงซักฟอกด้วยผ้าที่แช่ในน้ำสะอาดแล้วบิดออก
- ④ เช็ดด้วยผ้านุ่มบิดหมาดๆ
- ⑤ นำหนังสังเคราะห์ไปผึ่งลมให้แห้งด้วยธรรมชาติ

- หากขจัดคราบบนหนังสังเคราะห์ได้ยาก ให้แช่แผ่นโฟมเมลามีนลงในผงซักฟอกที่มีค่า pH เป็นกลางแล้วใช้เช็ดผลิตภัณฑ์
- ห้ามทำให้แห้งโดยเครื่องเป่าลม
- ผิวของหนังสังเคราะห์อาจถูกย้อมด้วยสีผ้า ควรระมัดระวังในการเช็ดด้วยผ้ายีนส์หรือผ้าสี
- หนังสังเคราะห์อาจเปลี่ยนสีได้ตั้งนั้นบริเวณที่สัมผัสกับสีย้อมผมจึงควรคลุมด้วยผ้าขนหนู

## 2. การทำความสะอาดในส่วนของพลาสติก


- 1) จุ่มผ้านุ่มๆ ลงในน้ำหรือผงซักฟอกที่มีค่า pH เป็นกลาง ผสมมีน้ำร้อน บิดออกแล้ว เช็ดชิ้นส่วนพลาสติก

- ห้ามทำความสะอาดผลิตภัณฑ์ด้วยสารเคมี อาทิเช่น ทินเนอร์, ก๊าซโซลีน และแอลกอฮอล์

- 2) เช็ดด้วยผ้าสะอาดชุบน้ำและบิดผ้าให้หมาดๆ

- บิดผ้าให้หมาดๆ ก่อนก่อนเช็ดตัวรีโมต

- 3) ชิ้นส่วนพลาสติกควรผึ่งลมให้แห้งด้วยวิธีธรรมชาติ

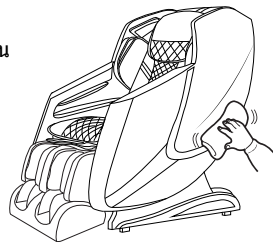

## การแก้ไขปัญหา

ในหน้านี้สรุปปัญหาที่พบบ่อยที่สุดที่ผู้ใช้อาจพบเกี่ยวกับผลิตภัณฑ์ หากไม่สามารถแก้ไขปัญหาด้วยข้อมูลด้านล่างติดต่อศูนย์บริการทันที

หากปัญหาที่พบไม่อยู่ในรายการ โปรดทำตามคำแนะนำต่อไปนี้:


1. ปิดเครื่องพร้อมถอดปลั๊ก
2. รอประมาณ 60 นาที
3. เสียบปลั๊กใหม่พร้อมทั้งรีเซ็ตเครื่อง
4. หากยังพบปัญหาอยู่ ให้ติดต่อศูนย์บริการ

| ปัญหา                   | สาเหตุที่เป็นไปได้                                                                      | วิธีการแก้ไข                                                                                     |
|-------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| ผลิตภัณฑ์ไม่ทำงาน       | เสียบปลั๊กของผลิตภัณฑ์ไม่ถูกต้อง                                                        | ตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้าของผลิตภัณฑ์สอดคล้องกับแรงดันไฟฟ้าที่บ้าน และเสียบปลั๊กอย่างถูกต้อง |
| ผลิตภัณฑ์หยุดทำงาน      | ผลิตภัณฑ์เพ่งเสร็จสิ้นการทำงานแบบตั้งเวลาและได้เปลี่ยนเป็นโหมดสแตนด์บายโดยอัตโนมัติ     | หากต้องการใช้งานต่อให้กดปุ่มพาวเวอร์อีกครั้ง                                                     |
| ผลิตภัณฑ์ไม่ทำงาน       | คุณอาจใช้ผลิตภัณฑ์อย่างต่อเนื่องเป็นเวลา 45 นาที ผลิตภัณฑ์เปิดระบบการป้องกันความร้อนสูง | ให้ถอดปลั๊กออกและรอให้เครื่องเย็นเป็นเวลา 60 นาที ก่อนการใช้งานใหม่อีกครั้ง                      |
| ผลิตภัณฑ์ไม่ทำงาน       | มีน้ำหนักมากเกินไป                                                                      | ลดน้ำหนักลงและเริ่มการใช้งานอีกครั้ง                                                             |
| ผลิตภัณฑ์ร้อนกว่าปกติ   | ผลิตภัณฑ์ถูกใช้งานมากเกินไป                                                             | ถอดปลั๊กและปล่อยให้เครื่องเย็นลงก่อนการใช้งาน                                                    |
| ได้ยินเสียงจากผลิตภัณฑ์ | เสียงรบกวนที่เกิดจากชิ้นส่วนของผลิตภัณฑ์                                                | เป็นเรื่องปกติและไม่ได้หมายความว่าผลิตภัณฑ์มีการชำรุด                                            |

## คำแนะนำการต่อสายดิน

ผลิตภัณฑ์นี้จะต้องต่อสายดิน ถ้าเครื่องทำงานผิดปกติหรือพัง การลงสายดินจะทำให้ความต้านทานกระแสไฟน้อยที่สุดเพื่อลดความเสี่ยงที่จะเกิดไฟฟ้าช็อต ผลิตภัณฑ์นี้มาพร้อมกับสายไฟที่มีตัวนำต่อสายดินอุปกรณ์และปลั๊กต่อสายดิน ต้องเสียบปลั๊กเข้ากับเต้ารับที่เหมาะสมซึ่งได้รับการติดตั้งและต่อสายดินอย่างเหมาะสมตามประมวลกฎหมายและระเบียบข้อบังคับ

การเชื่อมต่ออุปกรณ์กับสายดินที่ไม่ได้มาตรฐาน อาจส่งผลให้เกิดความเสี่ยงจากไฟฟ้าช็อต ตรวจสอบกับช่างไฟฟ้าหรือช่างให้บริการ ว่าผลิตภัณฑ์มีเต้าเสียบที่มีมาตรฐานหรือยัง ถ้ายังไม่มีให้ติดตั้งเต้าเสียบที่ได้มาตรฐานโดยช่างไฟฟ้าที่ผ่านการรับรอง ผลิตภัณฑ์นี้รองรับกำลังไฟอยู่ที่ 220V และมีปลั๊กต่อสายดินที่แสดงด้านล่าง ตรวจสอบให้แน่ใจว่าผลิตภัณฑ์เชื่อมต่อกับเต้ารับที่ช่องเสียบเดียวกับปลั๊ก ไม่ควรใช้อะแดปเตอร์กับผลิตภัณฑ์นี้

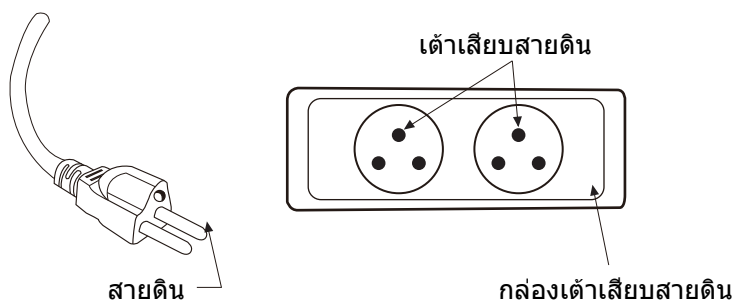



## ข้อมูลผลิตภัณฑ์

|                          |                                         |
|--------------------------|-----------------------------------------|
| ชื่อผลิตภัณฑ์            | เก้าอี้วนวด                             |
| รหัสรุ่น                 | EI-6501D                                |
| แรงดันไฟฟ้า              | 220-240 โวลต์                           |
| ค่าความถี่               | 50-60 เฮิร์ตซ์                          |
| อัตราการใช้พลังงาน       | 100 วัตต์                               |
| อัตราเวลา                | 15 นาที                                 |
| ขนาด (ยาว x กว้าง x สูง) | ตรง: 156 x 76 x 120 เซนติเมตร           |
|                          | เอน: 184 x 76 x 102 เซนติเมตร           |
| น้ำหนักสินค้า            | กล่อง1: 77 กิโลกรัม กล่อง2: 17 กิโลกรัม |
| น้ำหนักสินค้ารวมกล่อง    | กล่อง1: 91 กิโลกรัม กล่อง2: 17 กิโลกรัม |
| ความยาวสายไฟ             | สายรีโมด : 150 เซนติเมตร                |
|                          | สายไฟ : 180 เซนติเมตร                   |
| เงื่อนไขการใช้งาน        | อุณหภูมิแวดล้อม : 0-35 องศาเซลเซียส     |
|                          | ความชื้น : 20%-80% RH                   |
| เงื่อนไขการจัดเก็บ       | อุณหภูมิในการจัดเก็บ: -5 ถึง 35°C       |
|                          | ความชื้นในที่จัดเก็บ: 20%-80% RH        |
| ระบบการป้องกัน           | ระบบป้องกันอุณหภูมิสูงและไฟฟ้าลัดวงจร   |
| น้ำหนักผู้ใช้งานสูงสุด   | 100 กิโลกรัม                            |

# Contents

---

## Before Use

---

|                                     |       |
|-------------------------------------|-------|
| IMPORTANT SAFETY INSTRUCTIONS ..... | 21    |
| Safety Precautions .....            | 22-23 |
| Chair Components .....              | 24-25 |
| Chair Installation .....            | 26    |
| Setting up the massage chair .....  | 27    |
| Preparation before Use .....        | 28-29 |

## How to Use

---

|                  |       |
|------------------|-------|
| Controller ..... | 30    |
| How to Use.....  | 31-34 |

## Q&A / Important

---

|                                |    |
|--------------------------------|----|
| Cleaning and maintenance ..... | 35 |
| Troubleshooting .....          | 36 |
| Grounding Instructions.....    | 37 |
| Chair Specifications.....      | 38 |

Thank you for purchasing this Massage Chair.  
Before using your massage chair, please read the contents of this  
instruction manual and refer to it when needed.

# IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance).

**DANGER** To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Never use pins or other metallic fasteners with this appliance.
- Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.

**WARNING** To reduce the risks of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not carry this appliance by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Keep children away from extended foot support.
- Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

## SAVE THESE INSTRUCTIONS

# Safety Precautions

---

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire or injury to persons. Please read the following precautions before using the massage chair.

- Make sure the power plug is securely inserted into a proper electrical outlet to reduce the risk of short-circuit and fire.
- It is highly recommended that a surge protector is used to prevent from damage.
- DO NOT use the massage chair in areas where the humidity is high such as sauna steam rooms, pools, bathrooms, AC or heating vents, etc.
- DO NOT use the massage chair outdoors and avoid areas with direct sunlight.
- If the chair is not being used, turn the power switch to the OFF position and unplug the massage chair from the electrical outlet to prevent any damages to the chair when there are power outages/surges that may cause serious damage.
- Never plug/unplug the power cord plug socket with wet hands.
- Close and continuous supervision is necessary when the massage chair is used by, on or near children or disabled persons.
- No more than one person should use the massage chair at the same time.
- The massage chair is intended for use as described in the Instruction Manual. Do not use any attachments other than those recommended by the manufacturer.
- DO NOT attempt to stand or sit on the backrest, armrest or footrest in order to prevent accident, injury or damage to the chair.
- Avoid falling asleep while using the massage chair.
- Always keep the massage chair clean, and never insert any objects into or around the gaps of the massage chair.
- DO NOT move the massage chair by pulling on the power supply cord.
- Make sure there are no children, pets or other obstacles behind or underneath the massage chair.
- If you find any rips or tears in the fabric of the massage chair, contact the service department and stop using the chair immediately.
- This massage chair is designed for household use and should not be used in non-residential settings.

# Safety Precautions

---

- Please consult your doctor if you are in doubt as to whether or not you should use this massage chair.
- Please consult a doctor before using the massage chair if you are pregnant, undergoing any medical treatment, using a medical electronic device such as a pacemaker, or are experiencing any of the following: malignant tumor, heart disease, back pain, abnormal or curved back bone, osteoporosis or acute illness.
- If you experience pain while using the massage chair, stop using the chair immediately and consult your doctor.
- Never use a massage function on swollen or inflamed parts of the body.
- DO NOT use the massage chair for more than 30 minutes at a time.
- DO NOT use the massage chair where aerosol(spray) products are being used or where oxygen is being administered.
- This massage chair is a non-professional product designed to provide a comfortable massage and should not be substituted for appropriate medical treatment.
- Never operate the appliance with the air hoses that inflate while they are blocked. Keep the air openings free of lint, hair, and any other obstructions.
- Check the skin which is in contact with the heated area of the appliance frequently to reduce the risk of injury. If the heating pad malfunctions and extreme heat is produced it may cause serious burns.
- Burns may result from improper use. If this is the case immediately shut off the chair and unplug from the outlet.
- Remove all sharp objects from the body and pockets such as keys and pens.
- Keep children away from extended foot support (or other similar parts.)
- DO NOT WET-DO NOT USE PINS.
- NEVER REMOVE COVER.



## Caution


The user's weight is usually limited to 100 kg.

For those who are weighing 100 kg or more, the product operations may make more noise and the fabric cover may wear out faster.

# Chair Components


---

## Front

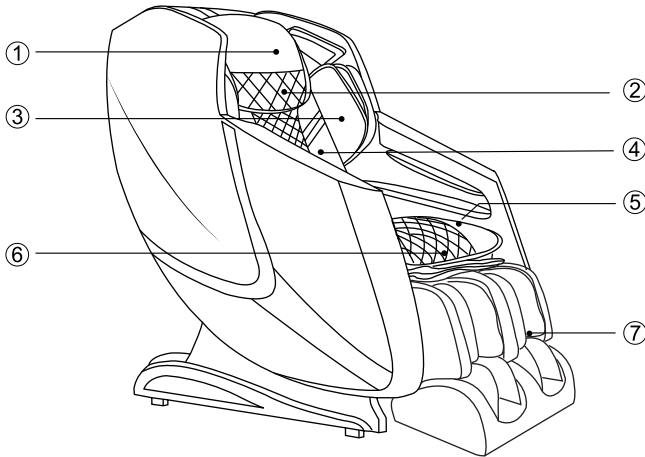

- |                                 |                |
|---------------------------------|----------------|
| ① Pillow Pad                    | ② Mechanism    |
| ③ Shoulder side massage section | ④ Backrest Pad |
| ⑤ Hand and arm massage section  | ⑥ Seat Cushion |
| ⑦ Legrest                       |                |

## Bluetooth Speaker

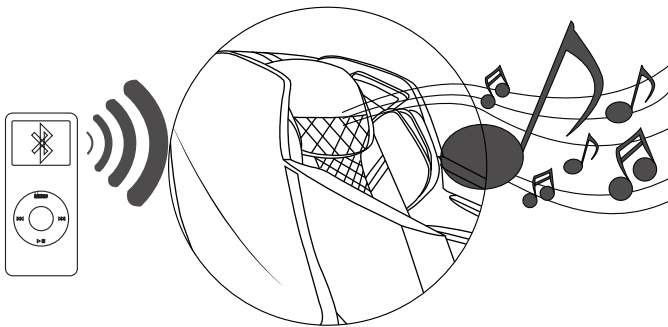


### NOTE:

The bluetooth speaker can only connects with one bluetooth device at a time. Please turn off your bluetooth device after using so that other users can enjoy it as well.

# Chair Components

## Air Massage Area

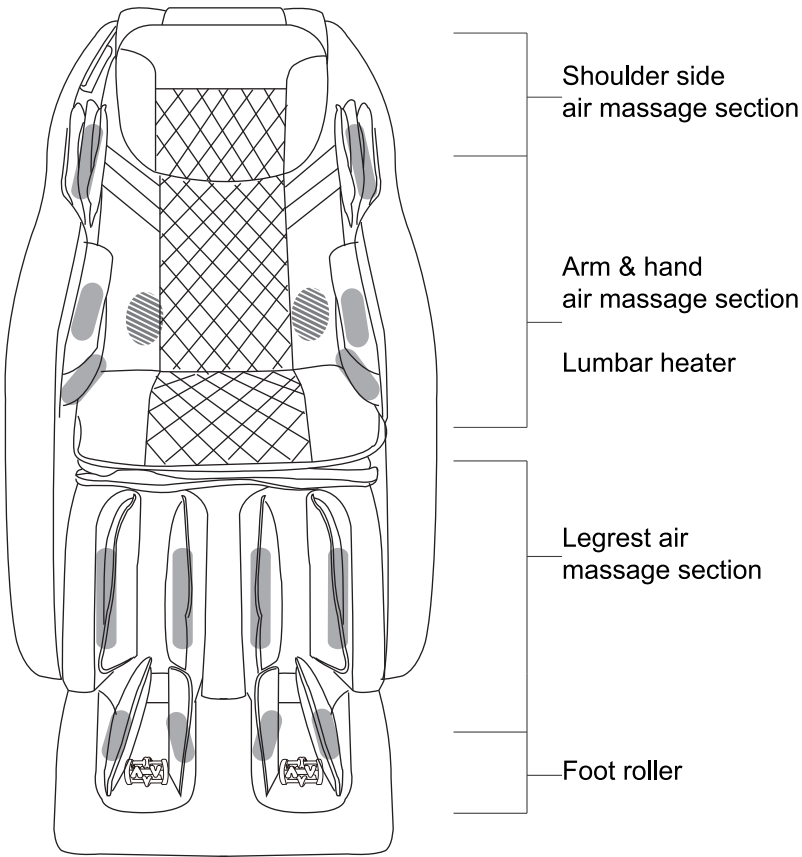



 Air bag

 Heat


 Foot Roller

# Chair Installation

1. Take out the main unit and accessories from two boxes.

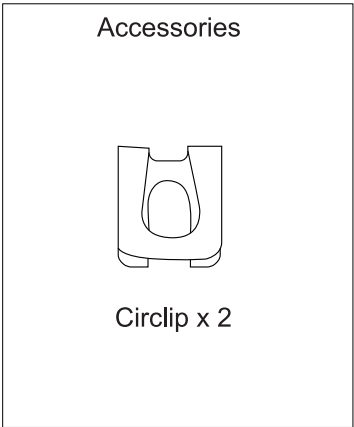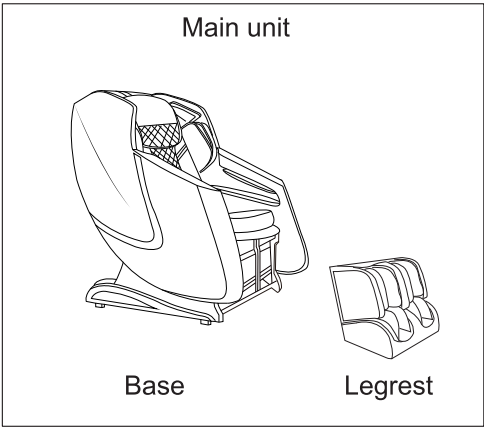

2. Connect the wires and air pipes from the footrest and seat part respectively.

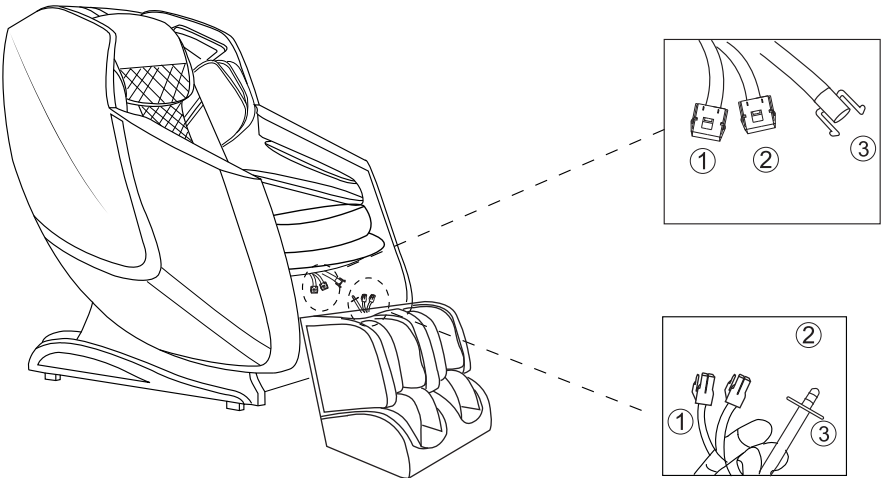




# Setting up the massage chair

---

## 1. Installation Position.

- Ensure there is adequate space to recline.

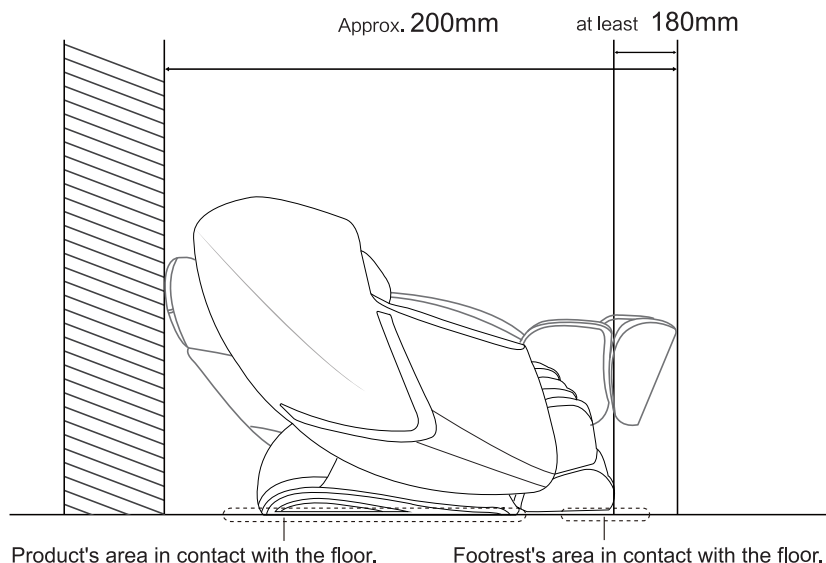


- Do not expose the massage lounger to direct sunlight or high temperatures, such as in front of heating sources, because this can cause discoloration or hardening of the synthetic leather.
- Place the unit on a mat to prevent floor damage.
- When placing a mat under the unit, the size of the mat should be sufficient to cover the areas where the unit touches and where the legrest could touch the floor, as shown in the dia gram on the above.
- Install the unit near a power outlet.

# Preparation before Use

---


## 1. Check the space around the product.

Make sure there is no person, pet, or other object close to the product.

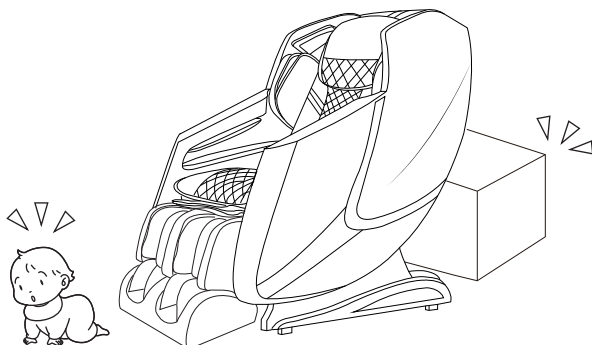

## 2. Make sure there is no foreign matter in the seams of the product.

- Before sitting on the product, make sure there is no foreign matter between any two parts of it.
- Do not put hands, arms or head between the backrest and the back cover.
- Do not put pets on the product (such as its back cover, backrest and armrests).



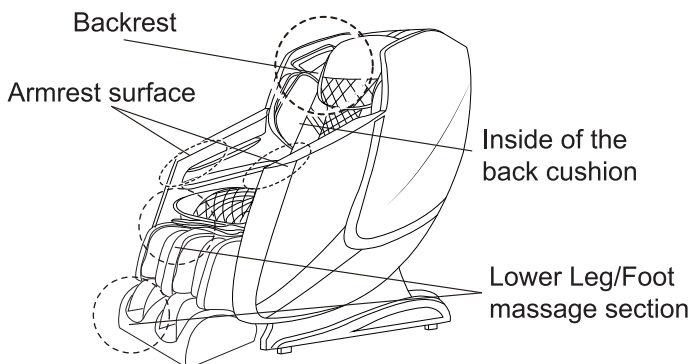


# Preparation before Use

---


## 3. Power on the product

- ① Push the power connector into the appliance inlet till the end.
- ② Insert the power plug into the power outlet till the end.
- ③ Turn the switch to "I" position

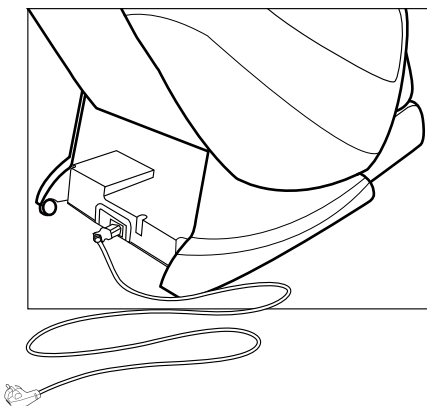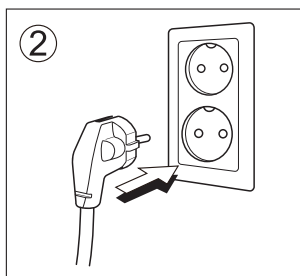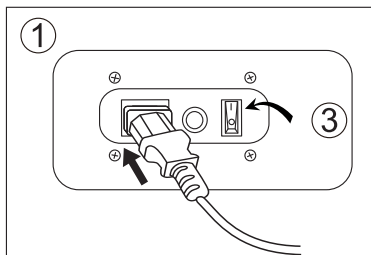


## 4. Make sure the massage rollers are retracted.

If they are not, press ON button to return them to the retracting position.

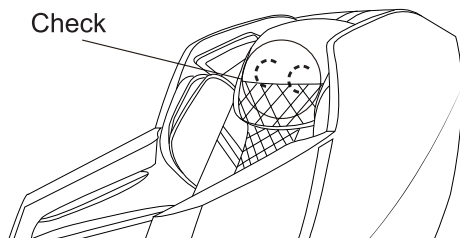

# How to Use

## Controller

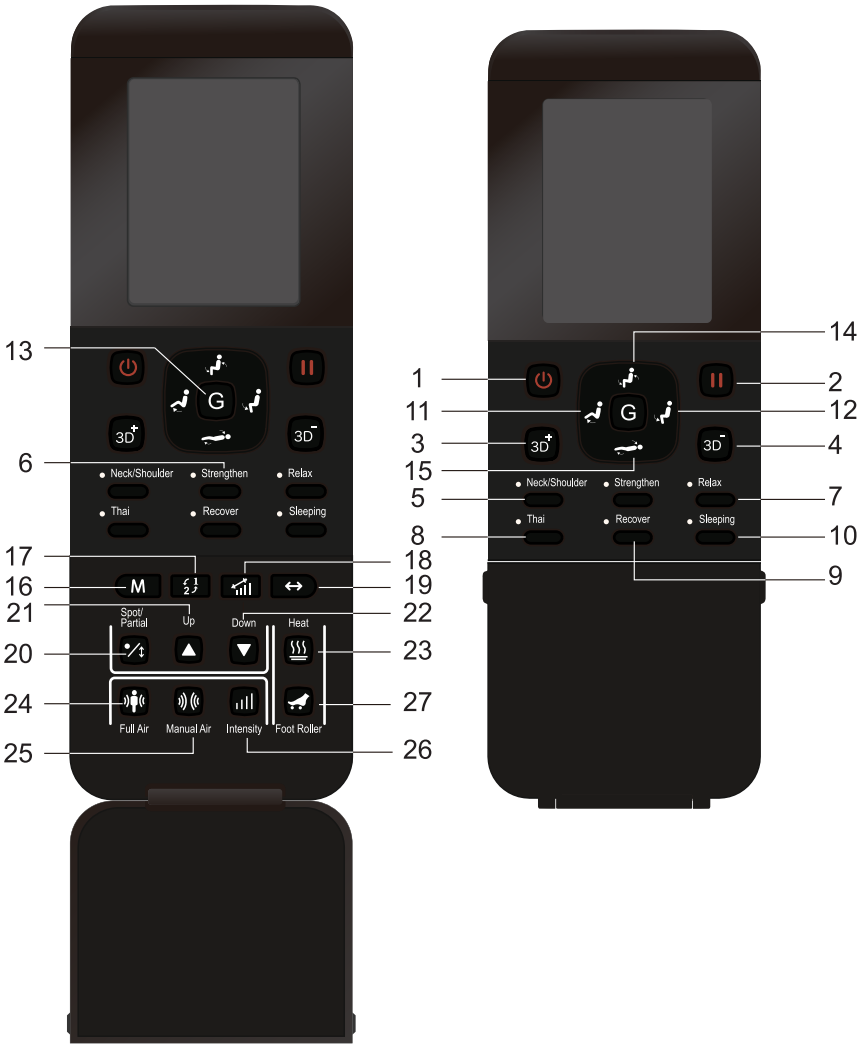

# How to Use

## Product Operation Guide

Connect to the power supply, then turn the switch to "I" position, thus the chair will be in idle mode, and the backrest angle will reach the highest position as well as the footrest angle will reach the lowest position. During its idle mode, there are only five functions: ON/OFF, Incline, Recline, Incline Leg, Recline Leg that can be operated.

| No. | Icons                                                                               | Description                                                                                                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                 |
|-----|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   |    | <p>Press once on this button, the LCD backlight and ON/OFF button will be lit.</p> <p>Press any message function button to start the chair's massage functions. This will also start the timer function.</p> <p>Press this button again to stop all massage functions, and the massage rollers and backrest &amp; leg-rest will return to their position.</p> |                                                                                                                                                                                                                 |
| 2   |    | <p>When the chair is in massage mode and the user wants to temporarily pause it, press this button and all massage functions will stop. The "Pause" button will be blinking and the set time countdown will be paused as well.</p> <p>Press this button again to resume the original massage function, the set time countdown will continue.</p>              |                                                                                                                                                                                                                 |
| 3   |   | <p>Press this button to adjust the 3D massage roller moving forward; there are 4 different levels available for adjustments to suit various massage strength requirements.</p>                                                                                                                                                                                |                                                                                                                                                                                                                 |
| 4   |  | <p>Press this button to adjust the 3D massage roller moving backward; there are 4 different levels available for adjustments to suit various massage strength requirements.</p>                                                                                                                                                                               |                                                                                                                                                                                                                 |
| 5   | Auto Mode                                                                           | Neck/ Shoulder                                                                                                                                                                                                                                                                                                                                                | Press this button to get into auto program named "Neck/ Shoulder". It is focus on neck area massage and shoulder area massage, help to relax tendons and activate collateral, enhance the vitality of the body. |
| 6   |                                                                                     | Strengthen                                                                                                                                                                                                                                                                                                                                                    | Press this button to get into auto program named "Strengthen". It is focus on waist kneading and back rolling, help to relieve muscle soreness.                                                                 |

# How to Use

| No. | Icons                                                                               | Description                                                                                                                                                                                                                                                                  |                                                                                                                                                  |
|-----|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 7   |                                                                                     | Relax                                                                                                                                                                                                                                                                        | Press this button to get into auto program named "Relax". It engages the full body relax, help to ease your tired body after a long day out.     |
| 8   |                                                                                     | Thai                                                                                                                                                                                                                                                                         | Press this button to get into auto program named "Thai". It stretches the back muscles, hands, calves and the full body.                         |
| 9   |                                                                                     | Recover                                                                                                                                                                                                                                                                      | Press this button to get into auto program named "Recover". It stretches the back muscles, hands, calves and the full body.                      |
| 10  |                                                                                     | Sleeping                                                                                                                                                                                                                                                                     | Press this button to get into auto program named "Sleeping". It brings you deep relax and a good sleep with gentle kneading massage and rolling. |
| 11  |    | Press once on this button, the leg-rest will start to move up; when the leg-rest reaches the desired comfortable position, press this button again to stop it.                                                                                                               |                                                                                                                                                  |
| 12  |    | Press once on this button, the leg-rest will start to move down; when the leg-rest reaches the desired comfortable position, press this button again to stop it.                                                                                                             |                                                                                                                                                  |
| 13  |  | Press this button to activate Zero-G1 function in default.                                                                                                                                                                                                                   |                                                                                                                                                  |
|     |                                                                                     | Press this button again to activate Zero-G2 function.                                                                                                                                                                                                                        |                                                                                                                                                  |
|     |                                                                                     | Notes:<br>If this button is pressed while moving to Zero-G1, the massage chair will stop at the latest angle.<br>If Zero-G button is not pressed while moving to Zero-G1, the massage chair will stop at the preset Zero-G angle. Same conditions apply to Zero-G2 function. |                                                                                                                                                  |
| 14  |  | Press this button once can adjust backrest angle to move up; when the backrest reaches the desired comfortable position, press the button again to stop it.                                                                                                                  |                                                                                                                                                  |
| 15  |  | Press this button once can adjust backrest angle to move down; when the backrest reaches the desired comfortable position, press the button again to stop it.                                                                                                                |                                                                                                                                                  |

# How to Use

| No. | Icons                               | Description                                                                                                                                                                                                           |                                                                                                                                     |
|-----|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| 16  | <div> </div> <div>Manual Mode</div> | Kneading                                                                                                                                                                                                              | 1st time to press this button to activate the rhythmic kneading manual massage function for a full back massage at medium strength. |
|     |                                     | Swedish                                                                                                                                                                                                               | 2nd time to press this button to activate the rhythmic Swedish manual massage function for a full back massage at medium strength.  |
|     |                                     | Tapping                                                                                                                                                                                                               | 3rd time to press this button to activate the rhythmic tapping manual massage function for a full back massage at medium strength.  |
|     |                                     | Shiatsu                                                                                                                                                                                                               | 4th time to press this button to activate the rhythmic shiatsu manual massage function for a full back massage at medium strength.  |
|     |                                     | Clapping                                                                                                                                                                                                              | 5th time to press this button to activate the rhythmic clapping manual massage function for a full back massage at medium strength. |
|     |                                     | Rolling                                                                                                                                                                                                               | 6th time to press this button to activate the rhythmic rolling manual massage function for a full back massage at medium strength.  |
| 17  | <div> </div>                        | Press this button, the manual massage (tapping, shiatsu, clapping) will change the rhythmic mode in the sequence of Tapping 1 > Tapping 2 > Shiatsu 1 > Shiatsu 2 > Clapping 1 > Clapping 2.                          |                                                                                                                                     |
| 18  | <div> </div>                        | Press this button to adjust massage speed, total for 5 levels of speed can be adjusted.<br>After activating manual massage function, every time the button is pressed, the speed can be adjusted from weak to strong. |                                                                                                                                     |
| 19  | <div> </div>                        | Press this button to adjust massage width, total for 2 levels available.<br>After activating rolling function, user can touch the button to adjust massage width.                                                     |                                                                                                                                     |
| 20  | <div> </div>                        | 1st time to press this button to activate spot massage at the required location.                                                                                                                                      |                                                                                                                                     |
|     |                                     | 2nd time to press this button to switch to partial massage. The mechanism will take the spot position as the center to perform partial massage at a distance of approximate 8cm.                                      |                                                                                                                                     |

# How to Use

| No. | Icons                                                                             | Description                                                                                                                                                                                                                                            |
|-----|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 21  |  | When the manual of automatic shoulder scanning can't meet individual requirements, the shoulder height position can be manually adjusted by pressing Up/Down button. Once appropriate location found release the key, the final position will be lock. |
| 22  |  | Note: in the spot or partial massage, you can also use these two buttons to adjust the mechanism position.                                                                                                                                             |
| 23  |  | Every time this button is pressed, the heating function will be change in the sequence of Lumbar heating > stop.                                                                                                                                       |
| 24  |  | Press once to activate the air-pressure massage at full body; press again to stop the function.                                                                                                                                                        |
| 25  |  | Every time this button is pressed, the manual air-pressure massage function will change in the sequence of FOOTREST>LEGREST> ARMREST>SHOULDER>STOP                                                                                                     |
| 26  |  | Press this button to adjust air-pressure, total for 5 levels of intensity to can be adjusted.<br>After activating the air-pressure function (Auto and Manual), press this button to adjust the intensity in cycles.                                    |
| 27  |  | Press once to activate the roller on foot, press again to stop the foot roll function.                                                                                                                                                                 |

## End Operation

Please press the "ON/OFF"button after use, and the chair will stop its operation, while the massage rollers will return to their original position; then switch the power supply button under the chair to "O"position and unplug the machine from the electrical outlet.




# Cleaning and maintenance

## 1. Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.


- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.
- If the synthetic leather is very dirty, wipe it with the method below.

- ① Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
  - ② Wipe surface of the synthetic leather with the soft cloth.
  - ③ Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
  - ④ Wipe with a piece of wrung soft cloth.
  - ⑤ Have the synthetic leather take natural air drying.
- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
  - Do not dry the surface by a hair drier.
  - Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
  - Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.

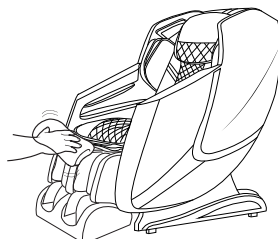

## 2. Cleaning of the plastic parts

- 1) Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.
- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- 2) Wipe with a piece of cloth once soaked in clean water and wrung out.
- Wring the cloth out before using it to wipe the remote controller.
- 3) Have the plastic parts take natural air drying.

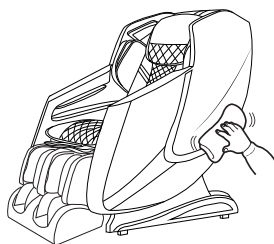

# Troubleshooting

---

This page summarizes the most common problems you could encounter with the product. If you are unable to solve the problem with the information below, contact service center immediately.

If the problem encountered is not listed, please try the following suggestions:

1. Turn off the product and unplug it.
2. Wait for 60 minutes.
3. Plug the product back to the recommended outlet and restart.
4. If the problem persists, contact the authorized service center.

| Problem                             | Possible Cause                                                                                               | Suggestion                                                                                                                                 |
|-------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| The product does not work           | The product is not plugged in properly.                                                                      | Ensure the voltage on the product corresponds to the local mains voltage and then plug in again. Make sure the outlet is properly working. |
| The product stopped working         | The product has just finished its auto timer session and has automatically switched to standby mode.         | If you want another session, press the Power button again.                                                                                 |
| The product stopped working         | You may have used the product continuously for 45 minutes where the over heat protection has been activated. | Unplug the product and let it cool down for 60 minutes before you use it again.                                                            |
| The product does not work           | An excessive load has been applied on the product.                                                           | Reduce the excessive load and start again.                                                                                                 |
| The product is abnormally warm      | The product is likely to be overused.                                                                        | Unplug the product and let it cool down before using it again.                                                                             |
| Noise can be heard from the product | Noise is made by the mechanical parts of the product.                                                        | This is normal and does not mean that the product is faulty.                                                                               |


# Grounding Instructions

---

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord with an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**Danger-**Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if the product will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 220V circuit and has grounding plug that looks like that plug illustrated below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

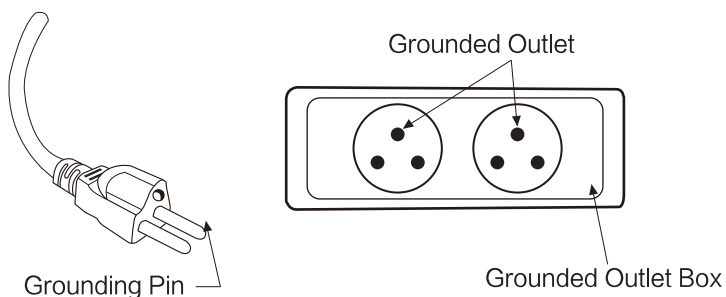

# Chair Specifications

---

| Description                 |  | Specifications                      |  |
|-----------------------------|--|-------------------------------------|--|
| Product Name                |  | Shimono Massage Chair               |  |
| Model No.                   |  | EI-6501D                            |  |
| Rated Voltage               |  | 220-240V~                           |  |
| Rated Frequency             |  | 50-60Hz                             |  |
| Rate Power Consumption      |  | 100W                                |  |
| Rated Time                  |  | 15 minutes                          |  |
| Dimensions(L x W x H)       |  | Upright: 156 X 76 X 120cm           |  |
|                             |  | Reclined: 184 X 76 X 102cm          |  |
| N.W./G.W.                   |  | BOX1: 77/91kg                       |  |
|                             |  | BOX2: 14.8/17kg                     |  |
| Length of Wire              |  | Controller wire: 150cm              |  |
|                             |  | Power supply wire: 180cm            |  |
| Usage Condition             |  | Environment temperature: 0°C ~ 35°C |  |
|                             |  | Contrasting humidity: 20%-80%RH     |  |
| Storage Condition           |  | Storage temperature: -5°C ~ 35°C    |  |
|                             |  | Storage humidity: 20%-80%RH         |  |
| Safety Feature              |  | Equipped with overheated and power  |  |
| Maximum body weight of user |  | 100kg                               |  |

นำเข้าและจัดจำหน่ายโดย :

บริษัท ชิโมนิ (ไทยแลนด์) จำกัด

เลขที่ 292/3 ถนนประเสริฐมนูกิจ แขวงนวนนินทร์ เขตบึงกุ่ม กรุงเทพฯ 10230

ติดต่อ 02-056-1118 แฟกซ์ 02-056-1119

เวลาทำการ จันทร์-ศุกร์ 8.30 -17.00 น. เสาร์ 9.00-15.00 น.

ปิดทำการวันหยุดนักขัตฤกษ์

 [www.shimono.co.th](http://www.shimono.co.th)

 Shimono Thailand

 @shimonoth

 Shimonoth