


# OTTO®

## หม้อหุงข้าวไฟฟ้า

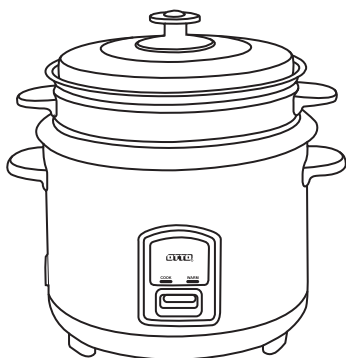

รุ่น : CR-110

โปรดอ่านคู่มือการใช้งานอย่างละเอียด  
เพื่อประสิทธิภาพในการใช้งานได้อย่างถูกต้องและปลอดภัย

ดูราคา ณ. จุดขาย (บาท)

จัดจำหน่ายโดย : บริษัท ออโต้ ดิงส์กลาส จำกัด  
เลขที่ 88 หมู่ที่ 7 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร. 0-2888-3555 (อัตโนมัติ 12 คู่สาย) โทรสาร. 0-2800-4500-4

www.otto.co.th

### คำแนะนำและข้อควรระวัง

#### ปฏิบัติตามคำแนะนำและข้อควรระวังต่างๆ

1. เพื่อประโยชน์ในการใช้งาน โปรดอ่านคู่มืออย่างละเอียด
2. ก่อนการใช้งานควรตรวจสอบให้แน่ใจว่าขนาดและคุณสมบัติทางไฟฟ้าที่ใช้ในบ้านเป็นชนิดเดียวกันกับที่ระบุไว้บนตัวหม้อหุงข้าว
3. หม้อหุงข้าวนี้ได้รับการออกแบบมาเพื่อใช้งานตามวัตถุประสงค์ที่กำหนดไว้เท่านั้น บริษัทฯจะไม่รับผิดชอบต่อความเสียหายอันเกิดจากการใช้ผิดวัตถุประสงค์
4. เพื่อให้หม้อหุงข้าวไฟฟ้าทำงานได้ตามประสิทธิภาพ บริเวณผิวกันหม้อในต้องสัมผัสกับแผ่นความร้อนโดยตรง ดังนั้นควรรักษาความสะอาดตรงบริเวณดังกล่าว ไม่ให้มีเศษข้าวติดอยู่ระหว่างผิวกันหม้อในกับแผ่นความร้อน
5. ห้ามนำหม้อในไปใช้งานร่วมกับเตาแก๊ส เตาไฟฟ้าหรือวางบริเวณใกล้เคียงเตาแก๊สหรือแหล่งให้พลังงานความร้อนใดๆก็ตาม
6. หากหม้อในหรือตัวหม้อหุงข้าวว่างเปล่า ไม่ควรเสียบปลั๊กไฟ
7. ห้ามกดสวิตช์โดยที่ยังไม่ได้วางหม้อชั้นใน
8. ประกอบหม้อหุงข้าวให้เรียบร้อยก่อนนำข้าวสวยเสียบเข้ากับตัวหม้อแล้วเสียบปลั๊กไฟ จึงกดสวิตช์
9. ระวังความร้อนที่ออกมาจากช่องระบายความร้อน ที่อยู่บนฝาหม้อหุงข้าวและควรปล่อยให้ไอน้ำภายในหม้อหุงข้าวออกมาทางช่องระบายความร้อนได้อย่างสะดวก
10. ระหว่างที่หม้อกำลังทำงานควรหลีกเลี่ยงการสัมผัส โคนบริเวณที่มีความร้อนสูง เช่น ฝาหม้อด้านนอก ฝาหม้อด้านใน ภายในหม้อและช่องระบายความร้อน ห้ามเปิดฝาหม้อในขณะที่น้ำเดือด
11. ควรวางหม้อหุงข้าวบนพื้นผิวเรียบและทนความร้อนได้
12. ต้องเสียบปลั๊กไฟให้แน่น มิฉะนั้นอาจเกิดความร้อนที่หัวปลั๊ก ทำให้ปลั๊กละลายได้
13. ดึงปลั๊กออกทุกครั้งหลังหุงข้าวเสร็จ พักไว้ให้เย็นแล้วจึงทำความสะอาด
14. ก่อนและหลังการใช้งานทุกครั้ง ควรตรวจสอบให้แน่ใจว่าได้ปิดการทำงานและถอดปลั๊กทุกครั้ง
15. ห้ามถอดปลั๊กด้วยการดึงหรือกระชากตรงสายไฟ โดยเด็ดขาด
16. ห้ามนำหม้อไปจุ่มลงในน้ำ การทำความสะอาดหม้อ สามารถทำได้โดยการนำฟองน้ำชุบน้ำบิดหมาดเช็ดรอยสกปรก ไม่ควรนำอุปกรณ์ที่มีลักษณะแหลมคมมาทำความสะอาดหม้อหุงข้าว
17. หากพบว่าหม้อหุงข้าวหรือสายไฟชำรุด ควรติดต่อตัวแทนหรือช่างผู้ชำนาญการของทางบริษัทฯเท่านั้น
18. ระวังไม่ให้หม้อในตกหรือหล่น เพราะจะส่งผลเสียต่อประสิทธิภาพการทำงานของหม้อหุงข้าวไฟฟ้า
19. ผลิตภัณฑ์ถูกออกแบบมาสำหรับใช้งานในครัวเรือน ไม่เหมาะสมกับการใช้งานเชิงพาณิชย์
20. เพื่อประโยชน์ในการรับบริการ ควรเก็บรักษาคู่มือการใช้งาน ใบรับประกัน ใบเสร็จรับเงิน ไว้เป็นหลักฐานในการส่งซ่อม

### รายละเอียดผลิตภัณฑ์

รุ่น	แรงดันไฟฟ้า/ความถี่	กำลังไฟ	ความจุ
CR-110	220 โวลต์ / 50 เฮิร์ตซ์	400 วัตต์	1 ลิตร



## CAUTIONS


Be awareness. Should read all instructions.

1. Please read all informations for safety.
2. Before using , please make sure that the household voltage is the same as a specific characteristic.
3. Product designed by household using not proper for commercial.
4. Inner pot bottom must be closed to the heater and make sure that there are no any food or scraps can place between the inner pot bottom and the heater.
5. Please unplug every time if not using the product.
6. Please unplug every time after finish cooking then clean up.
7. Do not use the inner pot with gas stove or place nearby.
8. Do not plug in the power cord, if the inner pot is still empty.
9. Do not switch on the rice cooker, if the inner pot still not be placed in the rice cooker.
10. Do not put the inner pot in microwave including accessories.
11. Place product on a smooth ground and on a heat resistant table.
12. Please avoid the hot areas when using the product.
13. Please avoid the evaporation while opening the lid.
14. Unplug the power cord by holding the plug itself, not pulling the power cord.
15. Do not immerse the rice cooker into the water , should use damp cloth to clean up. Do not use any metal sponge or any rough sponge to clean up.
16. Do not use its unusual product such as downfall or distorted with the power cord , please contact call center in a warranty card.
17. Do not intend using an appliance more than the instruction manual.
18. Keep an instruction , a warranty card and a receipt. They will be useful for after sale service.

## CHARACTERISTICS

Model	Voltage/Frequency	Power	Capacity
CR-110	220V / 50Hz	400W	1L

## COMPONENTS

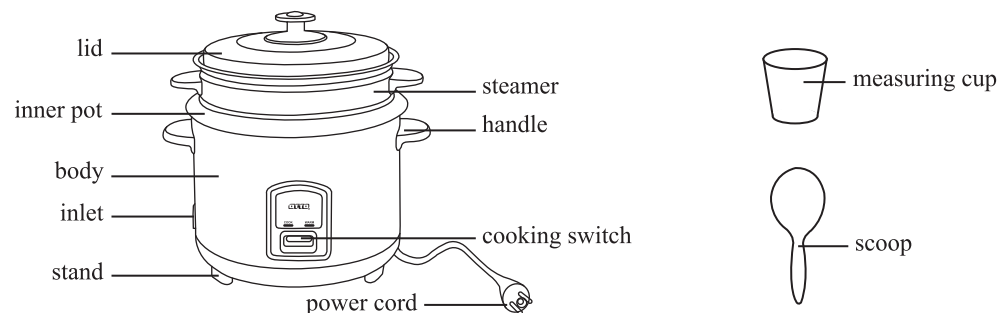

## HOW TO USE

1. Measure the amount of rice by the measuring provided cup. Rinse the rice in a separate bowl before putting it in the inner pot. Measure the required amount of water then ensure that the pot is dry from the outside.
2. Place the inner pot in the rice cooker. Make sure that the inner pot bottom is closed to the heater plate by turning it slightly from right to left until it seats properly.
3. Cover the lid , plug in and switch on. To start cooking , the red light will show up.
4. After finish cooking , the rice cooker will automatic warming. Keep warm about 5-10 minutes. Open the lid.
5. Unplug and clean up.

## MAINTENANCES

Remark : Read all instructions for a long lifetime using.

- Unplug and cool down the rice cooker. Then clean up when finish cooking every time.
- Do not immerse the rice cooker into the water or any liquid. Use damp cloth to clean up.
- The inner pot, the lid and the steamer can be cleaned with liquid.
- Do not use any metal sponge or any rough sponge for clean up.
- Before keeping should let it is dried by wipe with dry cloth.
- For keeping , do not hang the power cord. Please roll up.
- Do not keep the product outside. Keep away from children.

## CONTACT US

### OTTO KINGGLASS CO.,LTD

88 MOO 7 BAROMRATCHONNANEE RD., SALATHAMMASOP,  
THAWEEWATTHANA, BANGKOK 10170 THAILAND  
TEL : 0-2888-3555 (AUTO 12 LINES) FAX : 0-2800-4500-4

\* Need more information please check our website : [www.otto.co.th](http://www.otto.co.th) \*