



Coatings on corners

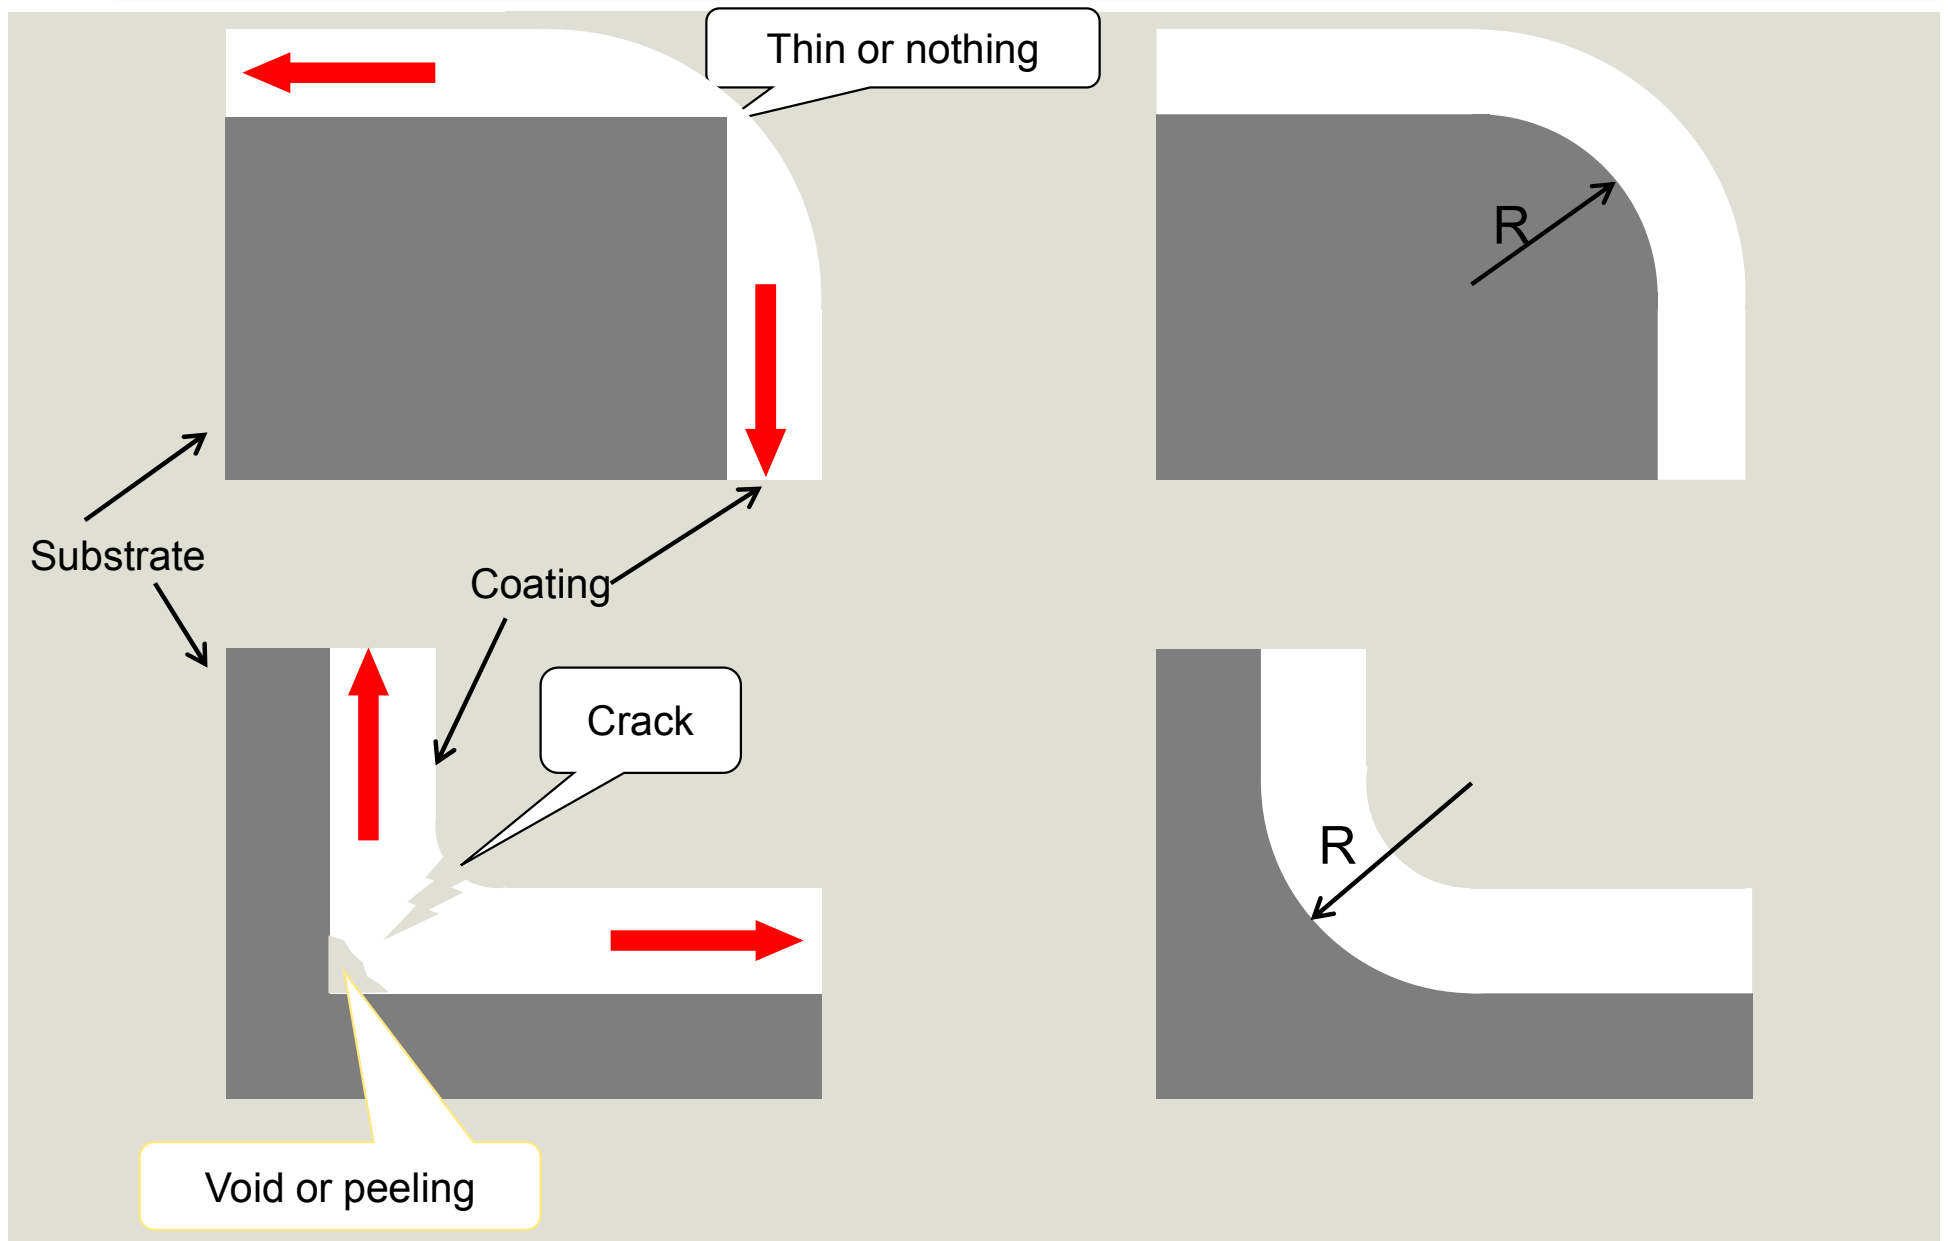



Corner R

Corner R for lining


A poor corner R

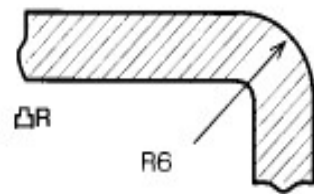

Convex R

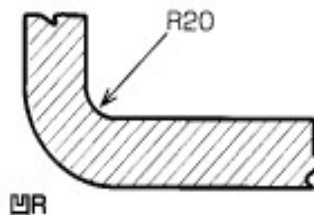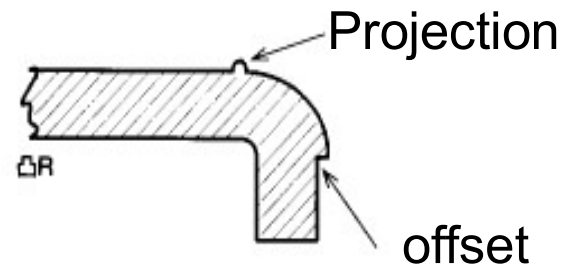


Concave R

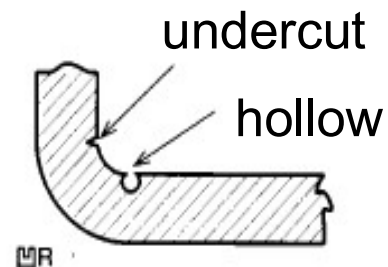


Nozzle and Nozzle Flange

Good shape for powder coating


Bad shape for powder coating

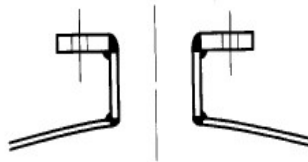


Normal flange

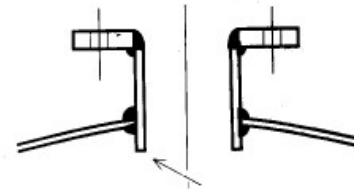

Corner R is not enough

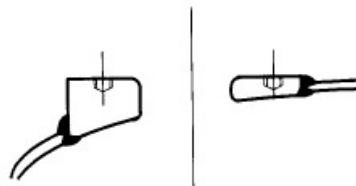


Pad Flange

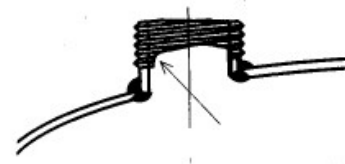

Threads connection cannot be coated

Welded Surfaces

Good welded surface for lining

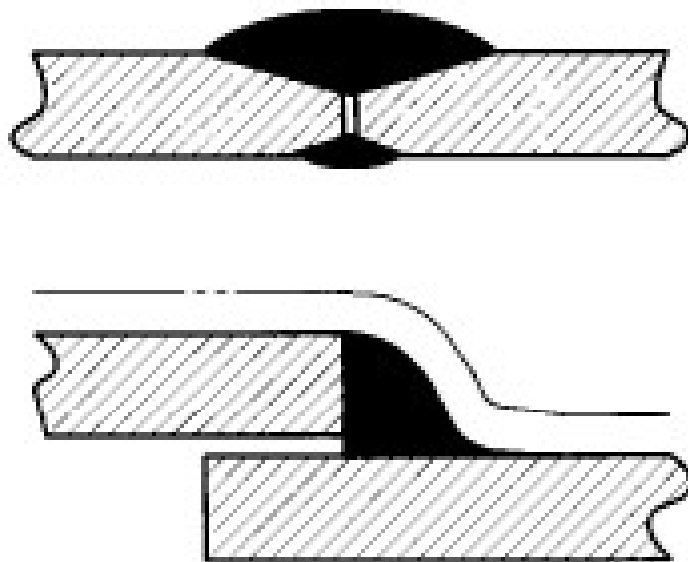

Bad welded surface for lining

